# Rosemount<sup>™</sup> DP Flow Meters and Primary Elements



- Multivariable capabilities allow for real-time fully compensated mass and energy flow
- Fully-integrated wireless flow meters allow for easy installation
- Minimize permanent pressure loss and save energy with Rosemount Annubar<sup>™</sup> Averaging Pitot Tube Technology
- Reduce straight pipe requirements to two diameters upstream and downstream from most flow disturbances with Conditioning Orifice Technology
- Improve accuracy and repeatability in small line sizes with Integral Orifice Plate Technology



#### Contents

DP Flow meter Selection Guide	page 4
Rosemount 3051SF DP Flow Meters	page 7
Rosemount 3051SFA Annubar Flow Meter ordering information	page 7
Rosemount 3051SFC Compact Orifice Flow Meter ordering information	page 18
Rosemount 3051SFP Integral Orifice Flow Meter ordering information	page 26
Performance specifications	page 35
Dynamic performance	page 36
Functional specifications	page 38
Physical specifications	page 43
Rosemount 3051SF Wireless Certifications	page 45
Rosemount 3051CF Flow Meter Series	page 61
Rosemount 3051CFA Annubar Flow Meter	page 61
Rosemount 3051CFC Compact Flow Meter ordering information	page 70
Rosemount 3051CFP Integral Orifice Flow Meter ordering information	page 76
Performance specifications	page 83
Functional specifications	page 85
Physical specifications	page 89
Rosemount 3051 Product Certifications	page 91
Rosemount 2051CF Flow Meter Series	page 101
Rosemount 2051CFA Annubar Flow Meter ordering information	page 101
Rosemount 2051CFC Compact Flow Meter ordering information	page 109
Rosemount 2051CFP Integral Orifice Flow Meter ordering information	page 115
Performance specifications	page 121
Functional specifications	page 122
Physical specifications	page 126
Rosemount 2051 Certifications	page 128
Rosemount 485 Annubar Primary Element	page 137
Ordering information	page 137
Performance specifications	page 143
Functional specifications	page 143
Physical specifications	page 144
Rosemount 585 Annubar Primary Element	page 148
Ordering information	page 148
Performance specifications	page 154
Functional specifications	page 154

Physical specificationspage 1!
Rosemount 405 Compact Primary Elementpage 1!
Ordering information
Performance specifications
Functional specifications
Physical specificationspage 10
Rosemount 1595 Conditioning Orifice Plate page 10
Ordering information
Performance specifications
Functional specifications
Physical specificationspage 10
Rosemount 1195 Integral Orifice Primary Element
Ordering information
Performance specifications
Functional specifications
Physical specificationspage 1
Rosemount 1495 Orifice Plate
Ordering information
Rosemount 1496 Orifice Flange Union page 18
Ordering information
Functional specifications
Physical specificationspage 18
Dimensional Drawings

#### **DP Flow Meter Selection Guide**

Rosemount integrated DP Flow Meters arrive fully assembled, configured, and leak tested for out-of-the-box installation.



# Rosemount 3051SF Flow Meters enable best-in-class flow measurement utilizing advanced functionality

- Up to 0.80 percent mass flow rate accuracy
- Multivariable capabilities allow for real-time, fully compensated mass, and energy flow
- Advanced diagnostics predict and prevent abnormal process conditions
- Installation ready wireless flow solution
- Ultra for Flow measures percent-of-reading performance over 14:1 flow turndown
- 15-year stability, 15-year warranty
- SIL3 Capable: IEC 61508 certified by an accredited third party agency for use in safety instrumented systems up to SIL 3 (minimum requirement of single use [1001] for SIL 2 and redundant use [1002] for SIL 3)
- Available with 4–20 mA HART®, WirelessHART, and FOUNDATION™ Fieldbus Protocols



# Rosemount 3051CF Flow Meters combine the proven 3051C Pressure Transmitter and the latest primary element technology

- Up to 1.65 percent volumetric flow accuracy at 8:1 turndown
- Available with HART, WirelessHART, FOUNDATION Fieldbus, and PROFIBUS® Protocols
- 10-year stability
- SIL3 Capable: IEC 61508 certified by an accredited 3rd party agency for use in safety instrumented systems up to SIL 3 (minimum requirement of single use [1001] for SIL 2 and redundant use [1002] for SIL 3)



# Rosemount 2051CF Flow Meters combine the 2051C Pressure Transmitter and the latest primary element technology

- Up to 2.00 percent volumetric flow accuracy at 5:1 turndown
- Available with HART, WirelessHART, and FOUNDATION Fieldbus Protocols
- 3-year stability

#### **Rosemount Annubar Primary Element Technology**

- Energy savings gained through minimal permanent pressure loss
- Innovative T-shape design providing accuracies up to ±0.75 percent of flow rate (Rosemount 485 Annubar Primary Element)
- Variety of sensor materials for optimal compatibility with the process fluid
- Handles applications where conditions exceed the structural limitations of other primary elements
- Symmetrical sensor design allows bi-directional flow measurement (Rosemount 585 Annubar Primary Element)
- Rosemount 405A Compact Annubar primary element easily installs like an orifice plate
- Integral thermowell allows temperature measurement without additional pipe penetrations for Rosemount 485, 585, and 405A models.



#### **Rosemount Conditioning Orifice Plate Technology**

- Reduce straight pipe requirements to two diameters upstream and downstream from most flow disturbances
- Discharge coefficient uncertainty as low as ±0.5 percent
- Integral thermowell allows temperature measurement without an additional pipe penetration with the compact design
- Reduce installation costs compared to traditional orifice plates with the compact design
- Conditioning orifice plate is based on AGA, ASME, and ISO industry standards
- Available in various plate styles providing installation flexibility



#### **Rosemount Integral Orifice Plate Technology**

- Improves accuracy and repeatability in 1/2-in., 1-in., and 11/2-in. line sizes
- Self-centering plate design eliminates installation errors that are magnified in small line sizes
- Precision honed pipe sections allow accuracy of up to  $\pm 0.75$  percent of flow rate
- Installation flexibility with numerous process connections
- Integral thermowell allows temperature measurement without an additional pipe penetration



#### **Rosemount 3051SF DP Flow Meters**





Rosemount 3051SFC

Rosemount 3051SF Flow Meters integrate industry leading transmitters with industry leading primary elements. Capabilities include:

- Flow meters are factory configured to meet your application needs (Configuration Data Sheet required)
- Multivariable capabilities allow scalable flow compensation (measurement types 1–4)
- 4–20 mA HART, WirelessHART, and FOUNDATION Fieldbus Protocols
- Ultra for Flow for improved flow performance across wider flow ranges
- Integral temperature measurement (option code T)
- Advanced diagnostics (option code DA2)
- Direct or remote mount configurations available

#### **Additional information**

Specifications: page 34

Dimensional drawings: page 199



#### Rosemount 3051SFA Annubar Flow Meter ordering information

- Rosemount Annubar Flow Meters reduce permanent pressure loss by creating less blockage in the pipe.
- Ideal for large line size installations when cost, size and weight of the flow meter are concerns.

Specification and selection of product materials, options, or components must be made by the purchaser of the equipment. See page 43 for more information on material selection.

Table 1. Rosemount 3051SFA Annubar Flow Meter Ordering Information

Model Product description		Measurement type		• = Available	
		D 1-7		— =Unavailable	
3051SFA	Rosemount Annubar Flow Meter	•	•		
Measurem	ent type				
1	Fully compensated mass and energy flow calculations – Differential and static pressures with temperature	_	•	*	
2	Compensated flow calculations – Differential and static pressures	_	•	*	
3	Compensated flow calculations – Differential pressure and temperature	_	•	*	
4	Compensated flow calculations – Differential pressure	_	•	*	
D	Differential pressure	•	_	*	
5	Process variables only (no flow calculations) – Differential and static pressures with temperature	_	•	*	
6	Process variables only (no flow calculations) – Differential and static pressures	_	•	*	
7	Process variables only (no flow calculations) – Differential pressure and temperature	_	•	*	
Fluid type					
L	Liquid	•	•	*	
G	Gas	•	•	*	
S	Steam	•	•	*	

Table 1. Rosemount 3051SFA Annubar Flow Meter Ordering Information

	lenvery lead time.			
Line size				
020	2-in. (50 mm)	•	•	*
025	2¹/₂-in. (63,5 mm)	•	•	*
030	3-in. (80 mm)	•	•	*
035	3 <sup>1</sup> / <sub>2</sub> -in. (89 mm)	•	•	*
040	4-in. (100 mm)	•	•	*
050	5-in. (125 mm)	•	•	*
060	6-in. (150 mm)	•	•	*
070	7-in. (175 mm)	•	•	*
080	8-in. (200 mm)	•	•	*
100	10-in. (250 mm)	•	•	*
120	12-in. (300 mm)	•	•	*
140	14-in. (350 mm)	•	•	
160	16-in. (400 mm)	•	•	
180	18-in. (450 mm)	•	•	
200	20-in. (500 mm)	•	•	
240	24-in. (600 mm)	•	•	
300	30-in. (750 mm)	•	•	
360	36-in. (900 mm)	•	•	
420	42-in. (1066 mm)	•	•	
480	48-in. (1210 mm)	•	•	
600	60-in. (1520 mm)	•	•	
720	72-in. (1820 mm)	•	•	
780	78-in. (1950 mm)	•	•	
840	84-in. (2100 mm)	•	•	
900	90-in. (2250 mm)	•	•	
960	96-in. (2400 mm)	•	•	
Pipe I.D. ra (see "Pipe	nge I.D. range code for Rosemount Annubar Flow Meters and Primary Elements"	on pag	je 146	
С	Range C from the pipe I.D. table	•	•	*
D	Range D from the pipe I.D. table	•	•	*
Α	Range A from the pipe I.D. table	•	•	
В	Range B from the pipe I.D. table	•	•	
E	Range E from the pipe I.D. table	•	•	
Z	Non-standard pipe I.D. range or line sizes greater than 12-in. (300 mm)	•	•	
Pipe mate	rial/mounting assembly material			
С	CS (A105)	•	•	*
S	316 SST	•	•	*
	·			

Table 1. Rosemount 3051SFA Annubar Flow Meter Ordering Information

to duditio	nar derivery read time.			
0 <sup>(1)</sup>	No mounting (customer supplied)	•	•	*
G	Chrome-moly grade F-11	•	•	
N	Chrome-moly grade F-22	•	•	
J	Chrome-moly grade F-91	•	•	
Piping	orientation			
Н	Horizontal piping	•	•	*
D	Vertical piping with downwards flow	•	•	*
U	Vertical piping with upwards flow	•	•	*
Rosemo	ount Annubar type			
P	Pak-lok	•	•	*
F	Flanged with opposite side support	•	•	*
L	Flange-lok	•	•	
G	Gear-drive flo-tap	•	•	
М	Manual flo-tap	•	•	
Sensor	material		ı	
S	316 SST	•	•	*
Н	Alloy C-276	•	•	
Sensor	size			
1	Sensor size 1 — line sizes 2- to 8-in. (50 to 200 mm)	•	•	*
2	Sensor size 2 — line sizes 6- to 96-in. (150 to 2400 mm)	•	•	*
3	Sensor size 3 — line sizes greater than 12-in. (300 mm)	•	•	*
Mounti	ing type	'	<u> </u>	
T1	Compression/threaded connection	•	•	*
A1	ANSI Class 150 RF	•	•	*
A3	ANSI Class 300 RF	•	•	*
A6	ANSI Class 600 RF	•	•	*
D1	DN PN 16 flange	•	•	*
D3	DN PN 40 flange	•	•	*
D6	DN PN 100 flange	•	•	*
A9 <sup>(2)</sup>	ANSI Class 900 RF	•	•	
AF <sup>(2)</sup>	ANSI Class 1500 RF	•	•	
AT <sup>(2)</sup>	ANSI Class 2500 RF	•	•	
R1	ANSI flange Class 150 RTJ	•	•	
R3	ANSI flange Class 300 RTJ	•	•	
R6	ANSI flange Class 600 RTJ	•	•	
R9 <sup>(2)</sup>	ANSI flange Class 900 RTJ	•	•	
RF <sup>(2)</sup>	ANSI flange Class 1500 RTJ	•	•	

Table 1. Rosemount 3051SFA Annubar Flow Meter Ordering Information

Opposi	te side support or packing gland					
0	No opposite side support or packing gland (required	for pak-lok and flar	nge-lok models)	•	•	*
	Opposite side support (required for flanged mode	ls)				
C	NPT threaded opposite support assembly – extended	tip		•	•	*
)	Welded opposite support assembly – extended tip			•	•	*
	Packing gland (required for flo-tap models)					
	Packing gland material	Rod material	Packing material			
(3)	Stainless steel (SST) packing gland/cage nipple	Carbon steel (CS)	PTFE	•	•	
<b>(</b> (3)	SST packing gland/cage nipple	SST	PTFE	•	•	
(3)	SST packing gland/cage nipple	CS	Graphite	•	•	
<b>V</b> (3)	SST packing gland/cage nipple	SST	Graphite	•	•	
₹	Alloy C-276 packing gland/cage nipple	SST	Graphite	•	•	
solatio	n valve for flo-tap models					
<b>)</b> (1)	Not applicable or customer supplied				•	*
	Gate valve, CS			•	•	
2	Gate valve, SST			•	•	
5	Ball valve, CS			•	•	
5	Ball valve, SST			•	•	
Temper	rature measurement					
Γ	Integral RTD – not available with flanged model great	er than Class 600		•	•	*
)	No temperature sensor			•	•	*
₹	Remote thermowell and RTD			•	•	
Transm	itter connection platform					
3	Direct-mount, Integral 3-valve manifold– not availabl Class 600	e with flanged mo	del greater than	•	•	*
5	Direct-mount, 5-valve manifold – not available with f Class 600	langed model grea	ter than	•	•	*
7	Remote-mount NPT connections (1/2 NPT)			•	•	*
5	Direct-mount, high temperature 5-valve manifold – r greater than Class 600	ot available with fl	anged model	•	•	
3	Remote-mount SW connections (1/2-in.)			•	•	
Differe	ntial pressure range					
<u> </u>	0 to 25 inH <sub>2</sub> O (0 to 62,16 mbar)			•	•	*
2	0 to 250 inH <sub>2</sub> O (0 to 621,60 mbar)			•	•	*
3	0 to 1000 inH <sub>2</sub> O (0 to 2,48 bar)			•	•	*

Table 1. Rosemount 3051SFA Annubar Flow Meter Ordering Information

	ressure range					
-				T		
A <sup>(4)</sup>	None			•	•	*
D	Absolute 0 to 800 psia (0 to 55,15 bar)				•	*
E <sup>(5)</sup>	Absolute 0 to 3626 psia (0 to 250,00 bar)				•	*
J	Gage –14.2 to 800 psig (–0.98 to 55,15 bar)				•	*
K <sup>(5)</sup>	Gage –14.2 to 3626 psig (–0.98 to 250,00 bar)				•	*
Transmi	tter output					
Α	4–20 mA with digital signal based on HART Protocol				•	*
F <sup>(6)</sup>	FOUNDATION Fieldbus Protocol (requires Plantweb™ housing)			•	•	*
X <sup>(7)(8)</sup>	Wireless (requires wireless options and wireless Plantw	reb housing)		•	•	*
Transmi	tter housing style	Material	Conduit entry size			
00	None (customer-supplied electrical connection)	N/A	N/A	•	_	*
1A	Plantweb housing	Aluminum	1/2-14 NPT	•	•	*
1B	Plantweb housing	Aluminum	M20 x 1.5	•	•	*
1 <u>J</u>	Plantweb housing	SST	1/2-14 NPT	•	•	*
1K	Plantweb housing	SST	M20 x 1.5	•	•	*
2A	Junction box housing	Aluminum	1/2-14 NPT	•	_	*
2B	Junction box housing	Aluminum	M20 x 1.5	•	_	*
2E	Junction box housing with output for remote display and interface	Aluminum	1/2-14 NPT	•		*
2F	Junction box housing with output for remote display and interface	Aluminum	M20 x 1.5	•	-	*
2J	Junction box housing	SST	1/2-14 NPT	•	_	*
2M	Junction box housing with output for remote display and interface	SST	1/2-14 NPT	•		*
5A <sup>(9)</sup>	Wireless Plantweb housing	Aluminum	1/2-14 NPT	•	•	*
5J <sup>(9)</sup>	Wireless Plantweb housing	SST	1/2-14 NPT	•	•	*
7J <sup>(7)(10)</sup>	Quick connect (A size mini, 4-pin male termination)	N/A	N/A	•	_	*
1C	Plantweb housing	Aluminum	G <sup>1</sup> / <sub>2</sub>	•	•	
1L	Plantweb housing	SST	G <sup>1</sup> / <sub>2</sub>	•	•	
2C	Junction box housing	Aluminum	G <sup>1</sup> / <sub>2</sub>	•	-	
2G	Junction box housing with output for remote display and interface	Aluminum	G <sup>1</sup> / <sub>2</sub>	•	-	
Perform	ance class <sup>(11)</sup>					
Rosemou	ınt 3051S MultiVariable™ SuperModule™, measurement	types 1, 2, 5, a	nd 6			
3 <sup>(12)</sup>	Ultra for flow: 0.8% flow rate accuracy, 14:1 flow turnd limited warranty	own, 15-year sta	ability, 15-year	•	•	*
5	Classic MV: 1.15% flow rate accuracy, 8:1 flow turndow	n, 15-yr. stabilit	у	<u> </u>	•	*

#### Table 1. Rosemount 3051SFA Annubar Flow Meter Ordering Information

The starred offerings (★) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Rosemoun	t 3051S Single Variable SuperModule, Measurement Types 3, 4, 7, and D			
1	Ultra: up to 0.95% flow rate accuracy, 8:1 flow turndown, 15-year stability, 15-year limited warranty	•	•	*
2	Classic: up to 1.4% flow rate accuracy, 8:1 flow turndown, 15-year stability	•	•	*
3 <sup>(12)</sup>	Ultra for flow: 0.8% flow rate accuracy, 14:1 flow turndown, 15-year stability, 15-year limited warranty	•	•	*

#### Wireless options<sup>(8)</sup> (requires option code X and wireless Plantweb housing)

Update rate	Update rate, operating frequency and protocol					
WA3	User configurable update rate, 2.4 GHz DSSS, IEC 62591 (WirelessHART Protocol)	•	•	*		
Omni-direc	tional wireless antenna and SmartPower™					
WK1	External antenna, adapter for Black Power module (I.S. Power Module sold separately)	•	•	*		
WM1	Extended range, external antenna, adapter for Black Power Module (I.S. Power Module sold separately)	•	•	*		
WN1	High-gain, remote antenna, adapter for Black Power Module (I.S. Power Module sold separately)	•	•			

#### Other options (include with selected model number)

HART Re	HART Revision configuration (requires HART output code A) <sup>(13)</sup>					
HR7	Configured for HART Revision 7	•	_	*		
Extende	l product warranty					
WR3	3-year limited warranty	•	•	*		
WR5	5-year limited warranty	•	•	*		
Pressure	testing <sup>(14)</sup>					
P1	Hydrostatic testing with certificate	•	•			
PX	Extended hydrostatic testing	•	•			
Special c	eaning					
P2	Cleaning for special services	•	•			
PA	Cleaning per ASTM G93 level D (section 11.4)	•	•			
Material	testing					
V1	Dye penetrant exam	•	•			
Material	examination					
V2	Radiographic examination	•	•			
Flow cali	bration					
W1	Flow calibration (Average K)	•	•			
WZ	Special calibration	•	•			
Special i	rspection					
QC1	Visual and dimensional inspection with certificate	•	•	*		
QC7	Inspection and performance certificate	•	•	*		

Table 1. Rosemount 3051SFA Annubar Flow Meter Ordering Information

	al delivery lead time.			
Surface	finish			
RL	Surface finish for low pipe Reynolds number in gas and steam	•	•	*
RH	Surface finish for high pipe Reynolds number in liquid	•	•	*
Materia	traceability certification <sup>(15)</sup>			
Q8	Material traceability certificate per EN 10204:2004 3.1	•	•	*
Positive	material identification			
Q76	PMI for primary elements	•	•	
Code co	nformance <sup>(16)</sup>			
 J2	ANSI/ASME B31.1	•	•	
<u>.</u> J3	ANSI/ASME B31.3	•	•	
J5 <sup>(17)</sup>	NACE® MR-0175/ISO 15156	•	•	
J6	European Pressure Directive (PED)	•	•	*
J1	Canadian Registration	•	•	
Installed	l in flanged pipe spool section	·		
H3	Class 150 flanged connection with Rosemount standard length and schedule	•	•	
H4	Class 300 flanged connection with Rosemount standard length and schedule	•	•	
H5	Class 600 flanged connection with Rosemount standard length and schedule	•	•	
Instrum	ent connections for remote mount option			
G2	Needle valves, SST	•	•	*
G6	OS&Y gate valve, SST	•	•	*
G1	Needle valves, CS	•	•	
G3	Needle valves, alloy C-276	•	•	
G5	OS&Y gate valve, CS	•	•	
G7	OS&Y gate valve, alloy C-276	•	•	
Specials	hipment			
Y1	Mounting hardware shipped separately	•	•	*
Special	limensions			
VM	Variable mounting	•	•	
VT	Variable tip	•	•	
VS	Variable length spool section	•	•	
Transmi	tter calibration certification			
Q4	Calibration certificate for transmitter	•	•	*
QP	Calibration certificate and tamper evident seal	•	•	*
Quality	certification for safety <sup>(26)(18)</sup>			
QS	Prior-use certificate of FMEDA data	•	_	*
QT <sup>(20)</sup>	Safety certified to IEC 61508 with certificate of FMEDA data	•	_	*

Table 1. Rosemount 3051SFA Annubar Flow Meter Ordering Information

Product	certifications			
E1	ATEX Flameproof	•	•	*
I1	ATEX Intrinsic Safety	•	•	*
IA	ATEX FISCO Intrinsic Safety; for FOUNDATION Fieldbus only	•	•	*
N1	ATEX Type n	•	•	*
ND	ATEX Dust	•	•	*
K1	ATEX Flameproof, Intrinsic Safety, Type n, Dust (combination of E1, I1, N1, and ND)	•	•	*
E4	TIIS Flameproof	•	•	*
E5	FM Explosion-proof, Dust Ignition-proof	•	•	*
15	FM Intrinsically Safe; Nonincendive	•	•	*
IE	FM FISCO Intrinsically Safe for FOUNDATION Fieldbus only.	•	•	*
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E5 and I5)	•	•	*
E6 <sup>(19)</sup>	CSA Explosion-proof, Dust Ignition-proof, Division 2	•	•	*
16	CSA Intrinsically Safe	•	•	*
IF	CSA FISCO Intrinsic Safety	•	•	*
K6 <sup>(19)</sup>	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E6 and I6)	•	•	*
E7	IECEx Flameproof, Dust Ignition-proof	•	•	*
17	IECEx Intrinsic Safety	•	•	*
IG	IECEx FISCO Intrinsic Safety	•	•	*
N7	IECEx Type n	•	•	*
K7	IECEx Flameproof, Dust Ignition-proof, Intrinsic Safety, Type n (combination of E7, I7, and N7)	•	•	*
E3	China Flameproof	•	•	*
13	China Intrinsic Safety	•	•	*
EM	Technical Regulations Customs Union (EAC) Flameproof	•	•	*
IM	Technical Regulations Customs Union (EAC) Intrinsic Safety	•	•	*
KM	Technical Regulations Customs Union (EAC) Flameproof, Intrinsic Safety	•	•	*
EP	Republic of Korea Flameproof	•	•	*
IP	Republic of Korea Intrinsic Safety	•	•	*
KP	Republic of Korea Flameproof, Intrinsic Safety	•	•	*
KA	ATEX and CSA Flameproof, Intrinsically Safe, Division 2 (combination of E1, I1, E6, and I6)	•	•	*
КВ	FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Div 2 (combination of E5, E6, I5, and I6)	•	•	*
KC	FM and ATEX Explosion-proof, Intrinsically Safe, Division 2 (combination of E5, E1, I5, and I1)	•	•	*
KD <sup>(19)</sup>	FM, CSA, and ATEX Explosion-proof, Intrinsically Safe (combination of E5, I5, E6, I6, E1, and I1)	•	•	*
KG	ATEX, FM, CSA, and IECEx FISCO Intrinsic Safety (combination of IA, IE, IF, and I7)	•	•	*
E2	INMETRO Flameproof	•	•	*

Table 1. Rosemount 3051SFA Annubar Flow Meter Ordering Information

	elivery lead time.			
Shipboard	approvals			
SBS	American Bureau of Shipping	•	•	*
SBV	Bureau Veritas (BV) Type Approval	•	•	*
SDN	Det Norske Veritas (DNV) Type Approval	•	•	*
SLL	Lloyds Register (LR) Type Approval	•	•	*
Sensor fill f	fluid and O-ring options			
L1	Inert sensor fill fluid	•	•	*
L2	Graphite-filled (PTFE) O-ring	•	•	*
LA	Inert sensor fill fluid and graphite-filled (PTFE) O-ring	•	•	*
Digital disp	play <sup>(20)</sup>			
M5	Plantweb LCD display (requires Plantweb housing)	•	•	*
M7 <sup>(21)(22)(23)</sup>	Remote mount LCD display and interface, Plantweb housing, no cable; SST bracket	•	_	*
M8 <sup>(21)(22)</sup>	Remote mount LCD display and interface, Plantweb housing, 50 ft. (15 m) cable; SST bracket	•	_	*
M9 <sup>(21)(22)</sup>	Remote mount LCD display and interface, Plantweb housing, 100 ft. (31 m) cable; SST bracket	•	_	*
Transient p	protection <sup>(24)</sup>			
T1	Transient terminal block	•	•	*
Manifold fo	or remote mount option			
F2	3-valve manifold, SST	•	•	*
F6	5-valve manifold, SST	•	•	*
F1	3-valve manifold, CS	•	•	
F3	3-valve manifold, alloy C-276	•	•	
F5	5-valve manifold, CS	•	•	
F7	5-valve manifold, alloy C-276	•	•	
Plantweb o	control functionality			
A01	FOUNDATION Fieldbus Advanced Control Function Block Suite	•	_	*
Plantweb o	liagnostic functionality			
D01	FOUNDATION Fieldbus Diagnostics Suite	•	_	*
DA2 <sup>(25)(26)</sup>	Advanced HART Diagnostic Suite	•	_	*
Plantweb 6	enhanced measurement functionality <sup>(27)</sup>			
H01	FOUNDATION Fieldbus fully compensated mass flow block	•	_	*
Cold tempe	erature <sup>(28)</sup>			
BRR	−60 °F (−51 °C) Cold temperature start-up	•	•	*
Alarm limi	t(21)(26)			
C4	NAMUR alarm and saturation levels, high alarm	•	•	*
C5	NAMUR alarm and saturation levels, high alarm	•	•	*

#### Table 1. Rosemount 3051SFA Annubar Flow Meter Ordering Information

C6	Custom alarm and saturation levels, high alarm	•		•	*
C7	Custom alarm and saturation levels, high alarm	•		•	*
C8	Low alarm (standard Rosemount alarm and saturation levels)	•		•	*
Hardware a	adjustments and ground screw				
D1 <sup>(21)(26)(29)</sup>	Hardware adjustments (zero, span, alarm, security)	•	-	-	*
D4 <sup>(30)</sup>	External ground screw assembly	•		•	*
DA <sup>(21)(26)(29)</sup>	Hardware adjustments (zero, span, alarm, security) and external ground screw assembly	•	-	-	*
Conduit plu	ug				
DO	316 SST conduit plug	•		•	*
Conduit ele	ectrical connector <sup>(31)</sup>				
GE	M12, 4-pin, male connector (eurofast®)	•		•	*
GM	A size mini, 4-pin, male connector (minifast®)	•		•	*
Typical mo	del number: 3051SFA D L 060 D C H P S 2 T1 0 0 0 3	2A	A	IA	3

- 1. Provide the "A" dimension for flanged, flange-lok, and threaded flo-tap models. Provide the "B" dimension for flange flo-tap models.
- 2. Available in remote mount applications only.
- The cage nipple is constructed of 304SST.
- 4. Required for measurement type codes 3, 4, 7, and D.
- 5. For measurement type codes 1, 2, 5, and 6 with DP range 1, absolute limits are 0.5 to 2000 psi (0,03 to 137,9 bar) and gage limits are -14.2 to 2000 psig (-0,98 to 137,9 bar).
- 6. Transmitter output code F is only available with measurement type code 1, 2, 5, 6, and D.
- 7. Only intrinsically safe approval codes apply.
- 8. Only available with measurement types D and 6.
- 9. Only available with output code X.
- 10. Only available with output code A.
- 11. For detailed specifications see "Specifications" on page 35.
- 12. Only available with differential pressure ranges 2 and 3, and silicone fill fluid.
- 13. Option HR7 configures the HART output to HART Revision 7. This option requires the selection of the advanced diagnostic (DA2) option. The device with this option can be field configured to HART Revision 5 or 7 if desired.
- 14. Applies to assembled flow meter only, mounting not tested.
- 15. Instrument connections for remote mount options and isolation valves for flo-tap models are not included in the Material Traceability Certification.
- 16. Not available with transmitter connection platform 6.
- 17. Materials of construction comply with metallurgical requirements within NACE® MR0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.
- 18. Not available with output code X.
- 19. Not available with M20 or  $G^{1/2}$  conduit entry size.
- 20. Not available with housing code 7].
- 21. Not available with output code X. Only available with measurement type D.
- 22. Not available with output code F, option code DA2, or option code QT.
- 23. See the Rosemount 3051S <u>Reference Manual</u> for cable requirements. Contact an Emerson™ representative for additional information.
- 24. Not available with housing code 5A, 5J, or 7J. External ground screw assembly (option code D4) is included with the T1 option. The T1 option is not needed with FISCO Product Certifications.
- 25. Includes hardware adjustments (option code D1) as standard. Not available with output code X. Only available with measurement type D.
- 26. Not available with output code F.
- 27. Requires Rosemount Engineering Assistant to configure (to ensure correct operation download the Engineering Assistant software at: <a href="mailto:Emerson.com/Rosemount/Engineering Assistant Software">Emerson.com/Rosemount/Engineering Assistant Software</a>).

- 28.  $-58 \,^{\circ}\text{F}$  (50  $^{\circ}\text{C}$ ) for measurement type 1-7.
- 29. Not available with housing codes 2E, 2F, 2G, 2M, 5A, 5J, or 7J.
- 30. This assembly is included with options E1, N1, K1, ND, E4, E7, N7, K7, E2, E3, KA, KC, KD, IA, IE, N3, T1, EM, and KM.
- 31. Not available with housing code 5A, 5J, or 7J. Available with Intrinsically Safe approvals only. For FM Intrinsically Safe; Nonincendive (option code I5) or FM FISCO Intrinsically Safe (option code IE), install in accordance with Rosemount drawing 03151-1009.



#### **Rosemount 3051SFC Compact Orifice Flow Meter ordering information**

- Compact conditioning flow meters reduce straight piping requirements to 2D upstream and 2D downstream from most flow disturbances.
- Simple installation of compact flow meters between any existing raised-face flanges

Specification and selection of product materials, options, or components must be made by the purchaser of the equipment. See page 43 for more information on material selection.

#### Table 2. Rosemount 3051SFC Compact Orifice Flow Meter Ordering Information

Model	Product description	Measurement type		• = Available
	- 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1	D	1-7	— =Unavailable
3051SFC	Compact orifice flow meter	•	•	
Measure	ment type			
1	Fully compensated mass and energy flow calculations – Differential and static pressures with temperature	_	•	*
2	Compensated flow calculations – Differential and static pressures	_	•	*
3	Compensated flow calculations – Differential pressure and temperature	_	•	*
4	Compensated flow calculations – Differential pressure	_	•	*
D	Differential pressure	•	_	*
5	Process variables only (no flow calculations) – Differential and static pressures with temperature	_	•	
6	Process variables only (no flow calculations) – Differential and static pressures	_	•	
7	Process variables only (no flow calculations) – Differential pressure and temperature	_	•	
Primary o	element technology			
A	Rosemount Annubar averaging pitot tube	•	•	*
С	Conditioning orifice plate	•	•	*
Р	Orifice plate	•	•	*
Material	type			
S	316 SST	•	•	*
Line size				
005 <sup>(1)</sup>	¹/₂-in. (15 mm)	•	•	*
010 <sup>(1)</sup>	1-in. (25 mm)	•	•	*
015 <sup>(1)</sup>	1¹/₂-in. (40 mm)	•	•	*
020	2-in. (50 mm)	•	•	*
030	3-in. (80 mm)	•	•	*
040	4-in. (100 mm)	•	•	*
060	6-in. (150 mm)	•	•	*
080	8-in. (200 mm)	•	•	*

Table 2. Rosemount 3051SFC Compact Orifice Flow Meter Ordering Information

100(2)(3)	10-in. (250 mm)			•	•	*
120 <sup>(2)(3)</sup>	12-in. (300 mm)			•	•	*
Primary e	lement type					
N000	Rosemount Annubar sensor size 1			•	•	*
N040	0.40 beta ratio (β)			•	•	*
N050	0.50 beta ratio (β)			•	•	*
N065 <sup>(4)</sup>	0.65 beta ratio (β)			•	•	*
Temperat	ure measurement					
<b>T</b> (5)	Integral RTD			_	•	*
0	No temperature sensor			•	•	*
R <sup>(5)</sup>	Remote thermowell and RTD			•	•	
Transmitt	er connection platform			_		
3	Direct-mount, integral 3-valve manifold			•	•	*
7	Remote-mount, NPT connections			•	•	*
Differenti	al pressure range					
1	0 to 25 inH <sub>2</sub> O (0 to 62,16 mbar)			•	•	*
2	0 to 250 inH <sub>2</sub> O (0 to 621,60 mbar)			•	•	*
3	0 to 1000 inH <sub>2</sub> O (0 to 2,48 bar)			•	•	*
Static pre	ssure range					
A <sup>(6)</sup>	None			•	•	*
D	Absolute 0 to 800 psia (0 to 55,15 bar)			_	•	*
E <sup>(7)</sup>	Absolute 0 to 3626 psia (0 to 250,00 bar)			_	•	*
J	Gage –14.2 to 800 psig (–0,98 to 55,15 bar)			_	•	*
K <sup>(7)</sup>	Gage –14.2 to 3626 psig (–0,98 to 250,00 bar)			_	•	*
Transmitt	er output					
A	4–20 mA with digital signal based on HART Protocol			•	•	*
F(8)(9)	FOUNDATION Fieldbus Protocol			•	•	*
X <sup>(10)</sup> (11)	Wireless			•	•	*
Transmitt	er housing style	Material	Conduit entry size			
00	None (customer-supplied electrical connection)	N/A	N/A	•	_	*
1A	Plantweb housing	Aluminum	1/2-14 NPT	•	•	*
1B	Plantweb housing	Aluminum	M20 x 1.5	•	•	*
1J	Plantweb housing	SST	1/2-14 NPT	•	•	*
1K	Plantweb housing	SST	M20 x 1.5	•	•	*
2A	Junction box housing	Aluminum	1/2-14 NPT	•		*

Table 2. Rosemount 3051SFC Compact Orifice Flow Meter Ordering Information

The starred offerings ( $\star$ ) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

•					
Junction box housing	Aluminum	M20 x 1.5	•	_	*
Junction box housing with output for remote display and interface	Aluminum	¹/2–14 NPT	•	_	*
Junction box housing with output for remote display and interface	Aluminum	M20 x 1.5	•	_	*
Junction box housing	SST	1/2-14 NPT	•	_	*
Junction box housing with output for remote display and interface	SST	¹/2–14 NPT	•	_	*
Wireless Plantweb housing	Aluminum	1/2-14 NPT	•	•	*
Wireless Plantweb housing	SST	1/2-14 NPT	•	•	*
Quick connect (A size mini, 4-pin male termination)	N/A	N/A	•	_	*
Plantweb housing	Aluminum	G <sup>1</sup> / <sub>2</sub>	•	•	
Plantweb housing	SST	G <sup>1</sup> / <sub>2</sub>	•	•	
Junction box housing	Aluminum	G <sup>1</sup> / <sub>2</sub>	•	_	
Junction box housing with output for remote display and interface	Aluminum	G <sup>1</sup> / <sub>2</sub>	•	_	
nce class <sup>(14)</sup>					
3051S MultiVariable SuperModule, measurement types	1, 2, 5, and	6			
Ultra for flow: 0.75% flow rate accuracy, 14:1 flow turndo limited warranty	wn, 15-yr stal	bility, 15-yr	•	•	*
Classic MV: 1.10% flow rate accuracy, 8:1 flow turndown,	15-yr stability	У	_	•	*
: 3051S Single Variable SuperModule, measurement type	es 3, 4, 7, and	l D			
Ultra: 0.90% flow rate accuracy, 8:1 flow turndown, 15-yr warranty	stability, 15-y	yr limited	•	•	*
Classic: 1.40% flow rate accuracy, 8:1 flow turndown, 15-	yr stability		•	•	*
Ultra for Flow: 0.75% flow rate accuracy, 14:1 flow turndo limited warranty	wn, 15-yr sta	bility, 15-yr	•	•	*
	Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing  Junction box housing with output for remote display and interface  Wireless Plantweb housing  Wireless Plantweb housing  Quick connect (A size mini, 4-pin male termination)  Plantweb housing  Plantweb housing  Junction box housing  Junction box housing with output for remote display and interface  nce class(14)  3051S MultiVariable SuperModule, measurement types  Ultra for flow: 0.75% flow rate accuracy, 14:1 flow turndown, 13051S Single Variable SuperModule, measurement types  Ultra: 0.90% flow rate accuracy, 8:1 flow turndown, 15-yrwarranty  Classic: 1.40% flow rate accuracy, 8:1 flow turndown, 15-yrwarranty  Classic: 1.40% flow rate accuracy, 8:1 flow turndown, 15-yrwarranty  Classic: 1.40% flow rate accuracy, 8:1 flow turndown, 15-yrwarranty	Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing  Junction box housing  Junction box housing  Junction box housing with output for remote display and interface  Wireless Plantweb housing  Wireless Plantweb housing  Quick connect (A size mini, 4-pin male termination)  Plantweb housing  Plantweb housing  SST  Junction box housing  Junction box housing  Junction box housing  Junction box housing with output for remote display and interface  Ce class(14)  30515 MultiVariable SuperModule, measurement types 1, 2, 5, and limited warranty  Classic MV: 1.10% flow rate accuracy, 14:1 flow turndown, 15-yr stability.  30515 Single Variable SuperModule, measurement types 3, 4, 7, and Ultra: 0.90% flow rate accuracy, 8:1 flow turndown, 15-yr stability, 15-ywarranty  Classic: 1.40% flow rate accuracy, 8:1 flow turndown, 15-yr stability.  Ultra for Flow: 0.75% flow rate accuracy, 14:1 flow turndown, 15-yr stability.  Ultra for Flow: 0.75% flow rate accuracy, 14:1 flow turndown, 15-yr stability.  Ultra for Flow: 0.75% flow rate accuracy, 14:1 flow turndown, 15-yr stability.  Ultra for Flow: 0.75% flow rate accuracy, 14:1 flow turndown, 15-yr stability.	Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing  Junction box housing  Junction box housing  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Wireless Plantweb housing  Aluminum  Junction box housing  Aluminum  Junction box housing  SST  Junction box housing  Aluminum  Junction box housing  Plantweb housing  Plantweb housing  Junction box housing  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing  Junction box housing  Aluminum  G'/2  Aluminum  G'/2  Junction box housing  Junction box housing  Aluminum  G'/2  Aluminum  Junction box housing  Junction box housing  Junction box housing  Junction box housing  Aluminum  Junction box housing  Aluminum  G'/2  Aluminum  Junction box housing  Junction box housing  Aluminum  Junction box housing  Aluminum  Junction box housing  Junction box housing  Aluminum  G'/2  Aluminum  Junction box housing  Aluminum  Junction box housing  Junction box housing  Aluminum  Junction box housing  Aluminum  G'/2  Aluminum  Junction box housing  Junction box housing  Aluminum  Junction box housing  Junction box housing  Junction box housing	Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing  SST  Junction box housing  Junction box housing  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Wireless Plantweb housing  Aluminum  Junction box housing  Aluminum  Junction box housing  Aluminum  Junction box housing  SST  Junction box housing  Plantweb housing  Plantweb housing  Junction box housing  Junction box housing with output for remote display and interface  Aluminum  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing  Junction box housing  Aluminum  Junction box housing  Junction box housing  Aluminum  Junction box housing  Junction box housing  Aluminum  Junction box housing  Aluminum  Junction box housing  Junction box housing  Aluminum  Junction box housing  Ju	Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing with output for remote display and interface  Junction box housing  SST  J2-14 NPT  Junction box housing with output for remote display and interface  Wireless Plantweb housing  Aluminum  J2-14 NPT  Wireless Plantweb housing  SST  J2-14 NPT  Wireless Plantweb housing  SST  J2-14 NPT  Wireless Plantweb housing  SST  J2-14 NPT  Plantweb housing  SST  J2-14 NPT  Plantweb housing  SST  J2-14 NPT  Plantweb housing  Aluminum  G1/2  Plantweb housing  SST  G1/2  Junction box housing  Junction box housing with output for remote display and interface  Ce class(14)  Ultra for flow: 0.75% flow rate accuracy, 14:1 flow turndown, 15-yr stability, 15-yr limited warranty  Classic MV: 1.10% flow rate accuracy, 8:1 flow turndown, 15-yr stability  Ultra: 0.90% flow rate accuracy, 8:1 flow turndown, 15-yr stability  Ultra for Flow: 0.75% flow rate accuracy, 8:1 flow turndown, 15-yr stability  Ultra: 0.90% flow rate accuracy, 8:1 flow turndown, 15-yr stability  Ultra for Flow: 0.75% flow rate accuracy, 8:1 flow turndown, 15-yr stability  Ultra for Flow: 0.75% flow rate accuracy, 8:1 flow turndown, 15-yr stability  Ultra for Flow: 0.75% flow rate accuracy, 8:1 flow turndown, 15-yr stability  Ultra for Flow: 0.75% flow rate accuracy, 8:1 flow turndown, 15-yr stability  Ultra for Flow: 0.75% flow rate accuracy, 8:1 flow turndown, 15-yr stability  Ultra for Flow: 0.75% flow rate accuracy, 8:1 flow turndown, 15-yr stability  Ultra for Flow: 0.75% flow rate accuracy, 14:1 flow turndown, 15-yr stability, 15-yr

#### Wireless options<sup>(11)</sup> (requires option code X and wireless Plantweb housing)

Update rat	te, operating frequency and protocol	D	1-7		
WA3	User configurable update rate, 2.4 GHz DSSS, IEC 62591 (WirelessHART Protocol)	•	•	*	
Omni-dire	Omni-directional wireless antenna and SmartPower				
WK1	External antenna, adapter for Black Power Module (I.S. Power Module sold separately)	•	•	*	
WM1	Extended range, external antenna, adapter for Black Power Module (I.S. Power Module sold separately)	•	•	*	
WN1	High-gain, remote antenna, adapter for Black Power Module (I.S. Power Module sold separately)	•	•		

#### Table 2. Rosemount 3051SFC Compact Orifice Flow Meter Ordering Information

The starred offerings ( $\star$ ) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Other options (include with selected model number)

HART Revi	sion configuration (requires HART output code A) <sup>(16)</sup>	D	1-7	
HR7	Configured for HART Revision 7	•	_	*
Extended	product warranty			
WR3	3-year limited warranty	•	•	*
WR5	5-year limited warranty	•	•	*
Installatio	n accessories			
A	ANSI alignment ring (Class 150) (only required for 10- and 12-in. [250 and 300 mm] line sizes)	•	•	*
С	ANSI alignment ring (Class 300) (only required for 10- and 12-in. [250 and 300 mm] line sizes)	•	•	*
D	ANSI alignment ring (Class 600) (only required for 10- and 12-in. [250 and 300 mm] line sizes)	•	•	*
G	DIN alignment ring (PN 16)	•	•	*
Н	DIN alignment ring (PN 40)	•	•	*
J	DIN alignment ring (PN 100)	•	•	*
В	JIS alignment ring (10K)	•	•	
R	JIS alignment ring (20K)	•	•	
S	JIS alignment ring (40K)	•	•	
Remote ad	apters			
E	Flange adapters 316 SST (1/2 NPT)	•	•	*
High temp	erature applications			
T	Graphite valve packing (T <sub>max</sub> = 850 °F)	•	•	
Flow calib	ration			
WC <sup>(17)</sup>	Flow calibration, 3 Pt, conditioning option C (all pipe schedules)	•	•	
WD <sup>(18)</sup> (19)	Flow calibration, 10 pt, conditioning option C (all schedules), Rosemount Annubar option A (schedule 40)	•	•	
Pressure to	esting		•	
P1	Hydrostatic testing with certificate	•	•	
Special cle	aning <sup>(20)</sup>			
P2	Cleaning for special processes	•	•	
PA	Cleaning per ASTM G93 Level D (section 11.4)	•	•	
Special ins	pection			
QC1	Visual and dimensional Inspection with certificate	•	•	*
QC7	Inspection and performance certificate	•	•	*
	1			

Table 2. Rosemount 3051SFC Compact Orifice Flow Meter Ordering Information

Transmitt	er calibration certification			
Q4	Calibration data certificate for transmitter	•	•	*
QP	Calibration certificate and tamper evident seal	•	•	*
Quality co	ertification for safety <sup>(21) (22)</sup>			
QS	Prior-use certificate of FMEDA data	•	_	*
QT <sup>(25)</sup>	Safety certified to IEC 61508 with certificate of FMEDA data	•	_	*
Material	raceability certifications			
Q8	Material traceability certification per EN 10204:2004 3.1	•	•	*
Positive n	naterial identification	·		
Q76	PMI for primary elements	•	•	
Code con	formance	•		
J2	ANSI/ASME B31.1	•	•	
J3	ANSI/ASME B31.3	•	•	
J4	ANSI/ASME B31.8	•	•	
J5	NACE MR-0175/ISO 15156 <sup>(23)</sup>	•	•	
Country	ertification			
J1	Canadian registration	•	•	
Product o	ertifications	·		
E1	ATEX Flameproof	•	•	*
I1	ATEX Intrinsic Safety	•	•	*
IA	ATEX FISCO Intrinsic Safety; for FOUNDATION Fieldbus only	•	•	*
N1	ATEX Type n	•	•	*
ND	ATEX Dust	•	•	*
K1	ATEX Flameproof, Intrinsic Safety, Type n, Dust (combination of E1, I1, N1, and ND)	•	•	*
E4	TIIS Flameproof	•	•	*
E5	FM Explosion-proof, Dust Ignition-proof	•	•	*
15	FM Intrinsically Safe; Nonincendive	•	•	*
IE	FM FISCO Intrinsic Safety	•	•	*
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E5 and I5)	•	•	*
E6 <sup>(24)</sup>	CSA Explosion-proof, Dust Ignition-proof, Division 2	•	•	*
16	CSA Intrinsically Safe	•	•	*
IF	CSA FISCO Intrinsic Safety	•	•	*
K6 <sup>(24)</sup>	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E6 and I6)	•	•	*
E7	IECEx Flameproof, Dust Ignition-proof	•	•	*
17	IECEx Intrinsic Safety	•	•	*
_				

Table 2. Rosemount 3051SFC Compact Orifice Flow Meter Ordering Information

to additional d	envery lead time.			
IG	IECEX FISCO Intrinsic Safety: for FOUNDATION Fieldbus only	•	•	*
K7	IECEx Flameproof, Dust Ignition-proof, Intrinsic Safety, Type n (combination of E7, I7, and N7)	•	•	*
E3	China Flameproof	•	•	*
13	China Intrinsic Safety	•	•	*
EP	Republic of Korea Flameproof	•	•	*
IP	Republic of Korea Intrinsic Safety	•	•	*
KP	Republic of Korea Flameproof, Intrinsic Safety	•	•	*
EM	Technical Regulations Customs Union (EAC) Flameproof	•	•	*
IM	Technical Regulations Customs Union (EAC) Intrinsic Safety	•	•	*
KM	Technical Regulations Customs Union (EAC) Flameproof, Intrinsic Safety	•	•	*
KA <sup>(24)</sup>	ATEX and CSA Flameproof, Intrinsically Safe, Division 2 (combination of E1, I1, E6, and I6)	•	•	*
KB <sup>(24)</sup>	FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E5, E6, I5, and I6)	•	•	*
КС	FM and ATEX Explosion-proof, Intrinsically Safe, Division 2 (combination of E5, E1, I5, and I1)	•	•	*
KD <sup>(24)</sup>	FM, CSA, and ATEX Explosion-proof, Intrinsically Safe (combination of E5, E6, E1, I5, I6, and I1)	•	•	*
E2	INMETRO Flameproof	•	•	*
12	INMETRO Intrinsic Safety	•	•	*
K2	INMETRO Flameproof, Intrinsic Safety	•	•	*
IB	INMETRO FISCO Intrinsic Safety	•	_	*
Shipboard	approvals			
SBS	American Bureau of Shipping	•	•	*
SBV	Bureau Veritas (BV) Type Approval	•	•	*
SDN	Det Norske Veritas (DNV) Type Approval	•	•	*
SLL	Lloyds Register (LR) Type Approval	•	•	*
Sensor fill f	luid and O-ring options	·		
	Inert sensor fill fluid	•	•	*
	Graphite-filled (PTFE) O-ring	•	•	*
LA	Inert sensor fill fluid and graphite-filled (PTFE) O-ring	•	•	*
Digital disp				
M5	Plantweb LCD display		•	*
M7 <sup>(26)</sup> (27)(28)	Remote mount LCD display and interface, Plantweb housing, no cable, SST bracket	•		*
M8 <sup>(26)(27)</sup>	Remote mount LCD display and interface, Plantweb housing, 50 ft. (15 m) cable, SST bracket	•	_	*
M9 <sup>(26)(27)</sup>	Remote mount LCD display and interface, Plantweb housing, 100 ft. (31 m) cable, SST bracket	•	_	*
	1			

#### Table 2. Rosemount 3051SFC Compact Orifice Flow Meter Ordering Information

to additional d	elivery lead time.			
Transient p	rotection <sup>(29)</sup>			
T1	Transient terminal block	•	•	*
Manifold fo	or remote mount option			
F2	3-valve manifold, SST	•	•	*
F6	5-valve manifold, SST	•	•	*
Plantweb c	ontrol functionality			
A01	FOUNDATION Fieldbus Advanced Control Function Block Suite	•	_	*
Plantweb d	liagnostic functionality			
D01	FOUNDATION Fieldbus Diagnostics Suite	•	_	*
DA2 <sup>(30)</sup>	Advanced HART Diagnostic Suite	•	_	*
H01	FOUNDATION Fieldbus fully compensated mass flow block	•	_	*
Cold tempe	rature <sup>(31)</sup>			
BRR	−60 °F (−51 °C) cold temperature start-up	•	•	*
Alarm limit	(21)(26)			
C4	NAMUR alarm and saturation levels, high alarm	•	•	*
C5	NAMUR alarm and saturation levels, low alarm	•	•	*
C6	Custom alarm and saturation levels, high alarm	•	•	*
C7	Custom alarm and saturation levels, low alarm	•	•	*
C8	Low alarm (standard Rosemount alarm and saturation levels)	•	•	*
Hardware a	ndjustments and ground screw			
D1 <sup>(21)(26)(32)</sup>	Hardware adjustments (zero, span, alarm, security).	•	_	*
D4 <sup>(33)</sup>	External ground screw assembly	•	•	*
DA <sup>(21)(26)(32)</sup>	Hardware adjustments (zero, span, alarm, security) and external ground screw assembly	•	_	*
Conduit plu	ıg			
DO	316 SST conduit plug	•	•	*
Conduit ele	ectrical connector <sup>(34)</sup>			
ZE	M12, 4-pin, male connector (eurofast)	•	•	*
ZM	A size mini, 4-pin, male connector (minifast)	•	•	*
Typical mo	del number: 3051SFC 1 C S 060 N 065 T 3 2 J A 1A 3			

- 1. Available with Primary Element Technology P only.
- 2. For the 10- and 12-in. (250 and 300 mm) line sizes, the alignment ring must be ordered (installation accessories).
- 3. 10- and 12-in. (250 and 300 mm) line sizes not available with Primary Element Technology code A.
- 4. For 2-in. (50 mm) line size the beta ratio is 0.6 for Primary Element Technology code C.
- 5. Only available with measurement type codes 1, 3, 5, and 7.

- 6. Required for measurement type codes 3, 4, 7, and D.
- 7. For measurement type codes 1, 2, 5, and 6 with DP range 1, absolute limits are 0.5 to 2000 psi (0,03 to 137,9 bar) and gage limits are -14.2 to 2000 psig (-0,98 to 137,9 bar).
- 8. Requires Plantweb housing.
- 9. Transmitter output code F is only available with measurement type code 1, 2, 5, 6, and D.
- 10. Only intrinsically safe approval codes apply.
- 11. Only available with measurement types D and 6.
- 12. Only available with output code X.
- 13. Available with output code A only.
- 14. For detailed specifications see "Specifications" on page 35.
- 15. Only available with differential pressure ranges 2 and 3, and silicone fill fluid.
- 16. Option HR7 configures the HART output to HART Revision 7. This option requires the selection of the advanced diagnostics (DA2) option. The device with this option can be field configured to HART Revision 5 or 7 if desired.
- 17. Available with Primary Element Technology code C only.
- 18. Available with Primary Element Technology codes C or A only.
- 19. For Rosemount Annubar option A, consult factory for pipe schedules other than Sch. 40.
- 20. Available with Primary Element Technology C or P only.
- 21. Not available with output code F.
- 22. Not available with output code X.
- 23. Materials of construction comply with metallurgical requirements within NACE MR0175/ISO for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.
- 24. Not available with M20 or  $G^{1}/2$  conduit entry size.
- 25. Not available with housing code 7].
- 26. Not available with output code X. Only available with measurement type D.
- 27. Not available with output code F, option code DA2, or option code QT.
- 28. See the Rosemount 30515 Reference Manual for cable requirements. Contact an Emerson representative for additional information.
- 29. Not available with housing code 00, 5A, 5J, or 7J. External ground screw assembly (option code D4) is included with the T1 option. The T1 option is not needed with FISCO Product Certifications.
- 30. Includes hardware adjustments (option code D1) as standard. Not available with output code X. Only available with measurement type D.
- 31. -58 °F (50 °C) for measurement type 1-7.
- 32. Not available with housing codes 2E, 2F, 2G, 2M, 5A, 5J, or 7J.
- 33. This assembly is included with options EP, KP, E1, N1, K1, ND, E4, E7, K7, E3, KA, KC, KD, IA, T1, EM, and KM.
- 34. Not available with housing code 5A, 5J, or 7J. Available with Intrinsically Safe approvals only. For FM Intrinsically Safe; Nonincendive (option code I5) or FM FISCO Intrinsically Safe (option code IE), install in accordance with Rosemount drawing 03151-1009.



# Rosemount 3051SFP Integral Orifice Flow Meter ordering information

- Precision honed pipe section for increased accuracy in small line sizes
- Self-centering plate design prevents alignment errors that magnify measurement inaccuracies in small line sizes

Specification and selection of product materials, options, or components must be made by the purchaser of the equipment. See page 43 for more information on material selection.

Table 3. Rosemount 3051SFP Integral Orifice Flow Meter Ordering Information

Model	Product description	Measurement type		• = Available
		D	1-7	— = Unavailable
3051SFP	Integral orifice flow meter	•	•	
Measure	ment type			
1	Fully compensated mass and energy flow calculations – Differential and static pressures with temperature	_	•	*
2	Compensated flow calculations – Differential and static pressures	_	•	*
3	Compensated flow calculations – Differential pressure and temperature	_	•	*
4	Compensated flow calculations – Differential pressure	_	•	*
D	Differential pressure	•	_	*
5	Process variables only (no flow calculations) – Differential and static pressures with temperature	_	•	
6	Process variables only (no flow calculations) – Differential and static pressures	_	•	
7	Process variables only (no flow calculations) – Differential pressure and temperature	_	•	
Body ma	terial and type			
F	316 SST, enhanced support body	•	•	*
Line size			•	
005	¹/₂-in. (15 mm)	•	•	*
010	1-in. (25 mm)	•	•	*
015	1¹/₂-in. (40 mm)	•	•	*
Process o	connection			
T1	NPT female body (not available with thermowell and RTD)	•	•	*
S1 <sup>(1)</sup>	Socket weld body (not available with thermowell and RTD)	•	•	*
P1	Pipe ends: NPT threaded	•	•	*
P2	Pipe ends: beveled	•	•	*
D1	Pipe ends: flanged, DIN PN 16, slip-on	•	•	*
D2	Pipe ends: flanged, DIN PN 40, slip-on	•	•	*
D3	Pipe ends: flanged, DIN PN 100, slip-on	•	•	*
W1	Pipe ends: flanged, RF, ANSI Class 150, weld-neck	•	•	*

Table 3. Rosemount 3051SFP Integral Orifice Flow Meter Ordering Information

to addition	ar derivery read time.			
W3	Pipe ends: flanged, RF, ANSI Class 300, weld-neck	•	•	*
W6	Pipe ends: flanged, RF, ANSI Class 600, weld-neck	•	•	*
W9	Pipe ends: flanged, RF, ANSI Class 900, weld-neck	•	•	*
A1	Pipe ends: flanged, RF, ANSI Class 150, slip-on	•	•	
A3	Pipe ends: flanged, RF, ANSI Class 300, slip-on	•	•	
A6	Pipe ends: flanged, RF, ANSI Class 600, slip-on	•	•	
R1	Pipe ends: flanged, RTJ, ANSI Class 150, slip-on	•	•	
R3	Pipe ends: flanged, RTJ, ANSI Class 300, slip-on	•	•	
R6	Pipe ends: flanged, RTJ, ANSI Class 600, slip-on	•	•	
R9	Pipe ends: flanged, RTJ, ANSI Class 900, weld-neck	•	•	
P9	Special process connection	•	•	
Orifice p	plate material	·		
S	316/316L SST	•	•	*
Н	Alloy C-276	•	•	
M	Alloy 400	•	•	
Bore size	e option			
0066	0.066-in. (1.68 mm) for <sup>1</sup> /2-in. pipe	•	•	*
0109	0.109-in. (2.77 mm) for 1/2-in. pipe	•	•	*
0160	0.160-in. (4.06 mm) for <sup>1</sup> /2-in. pipe	•	•	*
0196	0.196-in. (4.98 mm) for <sup>1</sup> /2-in. pipe	•	•	*
0260	0.260-in. (6.60 mm) for <sup>1</sup> /2-in. pipe	•	•	*
0340	0.340-in. (8.64 mm) for <sup>1</sup> /2-in. pipe	•	•	*
0150	0.150-in. (3.81 mm) for 1-in. pipe	•	•	*
0250	0.250-in. (6.35 mm) for 1-in. pipe	•	•	*
0345	0.345-in. (8.76 mm) for 1-in. pipe	•	•	*
0500	0.500-in. (12.70 mm) for 1-in. pipe	•	•	*
0630	0.630-in. (16.00 mm) for 1-in. pipe	•	•	*
0800	0.800-in. (20.32 mm) for 1-in. pipe	•	•	*
0295	0.295-in. (7.49 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	•	•	*
0376	0.376-in. (9.55 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	•	•	*
0512	0.512-in. (13.00 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	•	•	*
0748	0.748-in. (19.00 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	•	•	*
1022	1.022-in. (25.96 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	•	•	*
1184	1.184-in. (30.07 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	•	•	*
0010	0.010-in. (0.25 mm) for <sup>1</sup> /2-in. pipe	•	•	
0014	0.014-in. (0.36 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	•	•	

Table 3. Rosemount 3051SFP Integral Orifice Flow Meter Ordering Information

0020	0.020-in. (0.51 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe			•	•	
0034	0.034-in. (0.86 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe			•	•	
XXXX	Special bore size		•	•		
Transmit	ter connection platform					
D3	Direct-mount, 3-valve manifold, SST	Direct-mount, 3-valve manifold, SST				
D5	Direct-mount, 5-valve manifold, SST			•	•	*
R3	Remote-mount, 3-valve manifold, SST			•	•	*
R5	Remote-mount, 5-valve manifold, SST			•	•	*
D4	Direct-mount, 3-valve manifold, alloy C-276			•	•	
D6	Direct-mount, 5-valve manifold, alloy C-276			•	•	
R4	Remote-mount, 3-valve manifold, alloy C-276			•	•	
R6	Remote-mount, 5-valve manifold, alloy C-276			•	•	
Different	tial pressure range					
1	0 to 25 inH <sub>2</sub> O (0 to 62,16 mbar)			•		*
2	0 to 250 inH <sub>2</sub> O (0 to 621,60 mbar)			•	•	*
3	0 to 1000 inH <sub>2</sub> O (0 to 2,48 bar)	•	•	*		
Static pr	essure range			'		
A <sup>(2)</sup>	None				•	*
D	Absolute 0 to 800 psia (0 to 55,15 bar)			_	•	*
E(3)	Absolute 0 to 3626 psia (0 to 250,00 bar)				•	*
J	Gage –14.2 to 800 psig (–0,98 to 55,15 bar)				•	*
K <sup>(3)</sup>	Gage -14.2 to 3626 psig (-0,98 to 250,00 bar)	_	•	*		
Transmit	ter output			'		
A	4–20 mA with digital signal based on HART Protocol			•		*
F <sup>(4)</sup>	FOUNDATION Fieldbus Protocol (requires Plantweb house	sing)		•	•	*
X(5)(6)	Wireless (requires wireless options and wireless Plants	web housing)		•	•	*
Transmit	ter housing style	Material	Conduit entry size			
00	None (customer-supplied electrical connection)			•	_	*
1A	Plantweb housing	Aluminum	1/2-14 NPT	•	•	*
1B	Plantweb housing	Aluminum	M20 x 1.5	•	•	*
1 <u>J</u>	Plantweb housing	SST	1/2-14 NPT	•	•	*
1K	Plantweb housing	SST	M20 x 1.5	•	•	*
2A	Junction box housing	Aluminum	1/2-14 NPT	•	_	*
2B	Junction box housing	Aluminum	M20 x 1.5	•	_	*
2E	Junction box housing with output for remote display and interface	Aluminum	1/2-14 NPT	•	_	*

Table 3. Rosemount 3051SFP Integral Orifice Flow Meter Ordering Information

The starred offerings ( $\star$ ) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

2F	Junction box housing with output for remote display	Aluminum	M20 x 1.5	•		
2F	and interface	Aluminum	IVI2U X 1.5	•		*
2J	Junction box housing	SST	1/2-14 NPT	•	_	*
2M	Junction box housing with output for remote display and interface	SST	¹/2-14 NPT	•	-	*
5A <sup>(7)</sup>	Wireless Plantweb housing	Aluminum	1/2-14 NPT	•	•	*
5J <sup>(7)</sup>	Wireless Plantweb housing	SST	<sup>1</sup> /2-14 NPT	•	•	*
7J <sup>(5)(8)</sup>	Quick Connect (A size mini, 4-pin male termination)			•	_	*
1C	Plantweb housing	Aluminum	G <sup>1</sup> / <sub>2</sub>	•	•	
1L	Plantweb housing	SST	G <sup>1</sup> / <sub>2</sub>	•	•	
2C	Junction box housing	Aluminum	G <sup>1</sup> / <sub>2</sub>	•	_	
2G	Junction box housing with output for remote display and interface $ G^{1/2} $				_	
Perform	ance class <sup>(9)</sup>					
	Rosemount 3051S MultiVariable SuperModule, me	easurement t	ypes 1, 2, 5, and 6			
3 <sup>(10)</sup>	Ultra for flow: 0.95% flow rate accuracy, 14:1 flow turndown, 15-year stability, 15-year limited warranty			•	•	*
5	Classic MV: 1.25% flow rate accuracy, 8:1 flow turndown, 15-year stability			_	•	*
	Rosemount 3051S Single Variable SuperModule, measurement types 3, 4, 7, and D					
1	Ultra: 1.05% flow rate accuracy, 8:1 flow turndown, 15-year stability, 15-year limited warranty			•	•	*
2	Classic: 1.50% flow rate accuracy, 8:1 flow turndown, 15-year stability			•	•	*
3 <sup>(10)</sup>	Ultra for Flow: 0.95% flow rate accuracy, 14:1 flow turndown, 15-year stability, 15-year limited warranty				•	*

#### Wireless options<sup>(6)</sup> (requires option code X and wireless Plantweb housing)

Update i	ate, operating frequency and protocol	D	1-7	
WA3	User configurable update rate, 2.4 GHz DSSS, IEC 62591 (WirelessHART Protocol)	•	•	*
Omni-directional wireless antenna and SmartPower				
WK1	External antenna, adapter for Black Power Module (I.S. Power Module sold separately)	•	•	*
WM1	Extended range, external antenna, adapter for Black Power Module (I.S. Power Module sold separately)	•	•	*
WN1	High-gain, remote antenna, adapter for Black Power Module (I.S. Power Module sold separately)	•	•	

#### Other options (include with selected model number)

HART Revis	HART Revision configuration (requires HART output code A) <sup>(11)</sup>			
HR7	Configured for HART Revision 7	•	_	*

#### Table 3. Rosemount 3051SFP Integral Orifice Flow Meter Ordering Information

Extende	d product warranty							
WR3	3-year limited warranty	•	•	*				
WR5	5-year limited warranty	•	•	*				
Transmi	Transmitter/body bolt material							
G	High temperature option (850 °F [454 °C])	•	•					
Tempera	ature sensor <sup>(12)</sup>							
T	Thermowell and RTD	•	•	*				
Optiona	l connection							
G1	DIN 19213 transmitter connection	•	•	*				
Pressure	e testing <sup>(13)</sup>							
P1	Hydrostatic testing with certificate	•	•					
Special o	cleaning							
P2	Cleaning for special services	•	•					
PA	Cleaning per ASTM G93 level D (section 11.4)	•	•					
Material	testing							
V1	Dye penetrant exam	•	•					
Material	examination							
V2	Radiographic examination (available only with process connection code W1, W3, W6, and W9)	•	•					
Flow cal	ibration <sup>(14)</sup>							
WD	Discharge coefficient verification	•	•					
WZ	Special calibration	•	•					
Special i	nspection							
QC1	Visual and dimensional Inspection with certificate	•	•	*				
QC7	Inspection and performance certificate	•	•	*				
Material	traceability certification							
Q8	Material certification per EN 10204:2004 3.1	•	•	*				
Positive material identification								
Q76	PMI for primary elements	•	•					
Code co	nformance <sup>(15)</sup>							
J2	ANSI/ASME B31.1	•	•					
J3	ANSI/ASME B31.3	•	•					
J4	ANSI/ASME B31.8	•	•					

Table 3. Rosemount 3051SFP Integral Orifice Flow Meter Ordering Information

Materials	conformance <sup>(16)</sup>			
J5	NACE MR-0175/ISO 15156	•	•	
Country	ertification			
J6	European Pressure Directive (PED)	•	•	*
J1	Canadian registration	•	•	
Transmitt	er calibration certification			
Q4	Calibration data certificate for transmitter	•	•	*
Quality co	ertification for safety <sup>(17)(18)</sup>			
QS	Prior-use Certificate of FMEDA data	•	_	*
QT <sup>(21)</sup>	Safety-certified to IEC 61508 with Certificate of FMEDA data	•	_	*
Product c	ertifications <sup>(19)</sup>		•	
E1	ATEX Flameproof	•	•	*
l1	ATEX Intrinsic Safety	•	•	*
IA	ATEX FISCO Intrinsic Safety; for FOUNDATION Fieldbus only	•	•	*
N1	ATEX Type n	•	•	*
ND	ATEX Dust	•	•	*
K1	ATEX Flameproof, Intrinsic Safety, Type n, Dust (combination of E1, I1, N1, and ND)	•	•	*
E4	TIIS Flameproof	•	•	*
E5	FM Explosion-proof, Dust Ignition-proof	•	•	*
15	FM Intrinsically Safe; Nonincendive	•	•	*
IE	FM FISCO Intrinsic Safety	•	•	*
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E5 and I5)	•	•	*
E6 <sup>(20)</sup>	CSA Explosion-proof, Dust Ignition-proof, Division 2	•	•	*
16	CSA Intrinsically Safe	•	•	*
K6 <sup>(20)</sup>	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E6 and I6)	•	•	*
E7	IECEx Flameproof, Dust Ignition-proof	•	•	*
17	IECEx Intrinsic Safety	•	•	*
IG	IECEx FISCO Intrinsic Safety	•	•	*
K7	IECEx Flameproof, Dust Ignition-proof, Intrinsic Safety, Type n (combination of E7, I7, and N7)	•	•	*
KG	IECEx, FM, CSA, and IECEx FISCO Intrinsic Safety (combination of IA, IE, IF, and IG)	•	•	*
E3	China Flameproof	•	•	*
13	China Intrinsic Safety	•	•	*
EM	Technical Regulations Customs Union (EAC) Flameproof	•	•	*

Table 3. Rosemount 3051SFP Integral Orifice Flow Meter Ordering Information

	•			
IM	Technical Regulations Customs Union (EAC) Intrinsic Safety	•	•	*
KM	Technical Regulations Customs Union (EAC) Flameproof, Intrinsic Safety	•	•	*
EP	Republic of Korea Flameproof	•	•	*
IP	Republic of Korea Intrinsic Safety	•	•	*
KP	Republic of Korea Flameproof, Intrinsic Safety	•	•	*
KA <sup>(20)</sup>	ATEX and CSA Flameproof, Intrinsically Safe, Division 2 (combination of E1, I1, E6, and I6)	•	•	*
KB <sup>(20)</sup>	FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E5, E6, I5, and I6)	•	•	*
КС	FM and ATEX Explosion-proof, Intrinsically Safe, Division 2 (combination of E5, E1, I5, and I1)	•	•	*
KD <sup>(20)</sup>	FM, CSA, and ATEX Explosion-proof, Intrinsically Safe (combination of E5, I5, E6, I6, E1, and I1)	•	•	*
E2	INMETRO Flameproof	•	•	*
Shipboard	approvals			
SBS	American Bureau of Shipping	•	•	*
SBV	Bureau Veritas (BV) Type Approval	•	•	*
SDN	Det Norske Veritas (DNV) Type Approval	•	•	*
SLL	Lloyds Register (LR) Type Approval	•	•	*
Sensor fill f	luid and O-ring options			
L1	Inert sensor fill fluid	•	•	*
L2	Graphite-filled (PTFE) O-ring	•	•	*
LA	Inert sensor fill fluid and graphite-filled (PTFE) O-ring	•	•	*
Digital disp	play <sup>(21)</sup>			
M5	Plantweb LCD display (requires Plantweb housing)	•	•	*
M7 <sup>(22)(23)(24)</sup>	Remote mount LCD display and interface, Plantweb housing, no cable, SST bracket	•	_	*
M8 <sup>(22)(24)</sup>	Remote mount LCD display and interface, Plantweb housing, 50 ft. (15 m) cable, SST bracket	•	_	*
M9 <sup>(22)(24)</sup>	Remote mount LCD display and interface, Plantweb housing, 100 ft. (31 m) cable, SST bracket	•	_	*
Transient p	protection <sup>(25)</sup>		•	
T1	Transient terminal block	•	•	*
T2	Terminal block with WAGO spring clamp terminals	•	_	
T3	Transient terminal block with WAGO spring clamp terminals	•	_	
Plantweb o	control functionality			

#### Table 3. Rosemount 3051SFP Integral Orifice Flow Meter Ordering Information

Plantweb diagnostic functionality  D01 FOUNDATION Fieldbus Diagnostics Suite		· · · · · · · · · · · · · · · · · · ·			
DA2 <sup>(26)</sup> Advanced HART Diagnostics Suite  Plantweb enhanced measurement functionality <sup>(27)</sup> H01 FOUNDATION Fieldbus fully compensated mass flow block  Cold temperature <sup>(28)</sup> BRR -60°F (-51°C) cold temperature start-up  Alarm limit <sup>(22)(18)</sup> C4 NAMUR alarm and saturation levels, high alarm  C5 NAMUR alarm and saturation levels, low alarm  C6 Custom alarm and saturation levels, high alarm  C7 Custom alarm and saturation levels, low alarm  C8 Low alarm (standard Rosemount alarm and saturation levels)  Hardware adjustments and ground screw  D1 <sup>(22)(18)(29)</sup> Hardware adjustments (zero, span, alarm, security)  D4 <sup>(30)</sup> External ground screw assembly  DA <sup>(22)(18)(29)</sup> Hardware adjustments (zero, span, alarm, security) and external ground screw assembly  Conduit plug  DO 316 SST conduit plug  Conduit electrical connector <sup>(31)</sup>	Plantweb d	liagnostic functionality			
Plantweb enhanced measurement functionality (27)  H01 FOUNDATION Fieldbus fully compensated mass flow block  Cold temperature (28)  BRR	D01	FOUNDATION Fieldbus Diagnostics Suite	•	_	*
H01 FOUNDATION Fieldbus fully compensated mass flow block  Cold temperature(28)  BRR	DA2 <sup>(26)</sup>	Advanced HART Diagnostics Suite	•	_	*
Cold temperature (28)  BRR	Plantweb e	nhanced measurement functionality <sup>(27)</sup>			
BRR   -60 °F (-51 °C) cold temperature start-up	H01	FOUNDATION Fieldbus fully compensated mass flow block	•	_	*
Alarm limit (22)(18)  C4 NAMUR alarm and saturation levels, high alarm  C5 NAMUR alarm and saturation levels, low alarm  C6 Custom alarm and saturation levels, high alarm  C7 Custom alarm and saturation levels, high alarm  C8 Low alarm (standard Rosemount alarm and saturation levels)  Hardware adjustments and ground screw  D1(22)(18)(29) Hardware adjustments (zero, span, alarm, security)  D4(30) External ground screw assembly  DA(22)(18)(29) Hardware adjustments (zero, span, alarm, security) and external ground screw assembly  Conduit plus  Conduit cletrical connector (31)	Cold tempe	rature <sup>(28)</sup>			
C4 NAMUR alarm and saturation levels, high alarm  C5 NAMUR alarm and saturation levels, low alarm  C6 Custom alarm and saturation levels, high alarm  C7 Custom alarm and saturation levels, low alarm  C8 Low alarm (standard Rosemount alarm and saturation levels)  Hardware adjustments and ground screw  D1(22)(18)(29) Hardware adjustments (zero, span, alarm, security)  D4(30) External ground screw assembly  DA(22)(18)(29) Hardware adjustments (zero, span, alarm, security) and external ground screw assembly  Conduit plug  COnduit plug  Conduit electrical connector (31)	BRR	-60 °F (-51 °C) cold temperature start-up	•	•	*
C5 NAMUR alarm and saturation levels, low alarm  C6 Custom alarm and saturation levels, high alarm  C7 Custom alarm and saturation levels, low alarm  C8 Low alarm (standard Rosemount alarm and saturation levels)  Hardware adjustments and ground screw  D1(22)(18)(29) Hardware adjustments (zero, span, alarm, security)  D4(30) External ground screw assembly  DA(22)(18)(29) Hardware adjustments (zero, span, alarm, security) and external ground screw assembly  Conduit plug  Conduit clectrical connector(31)	Alarm limit	(22)(18)			
C6 Custom alarm and saturation levels, high alarm  C7 Custom alarm and saturation levels, low alarm  C8 Low alarm (standard Rosemount alarm and saturation levels)  Hardware adjustments and ground screw  D1(22)(18)(29) Hardware adjustments (zero, span, alarm, security)  D4(30) External ground screw assembly  DA(22)(18)(29) Hardware adjustments (zero, span, alarm, security) and external ground screw assembly  Conduit plug  D0 316 SST conduit plug  Conduit electrical connector (31)	C4	NAMUR alarm and saturation levels, high alarm	•	•	*
C7 Custom alarm and saturation levels, low alarm  C8 Low alarm (standard Rosemount alarm and saturation levels)  Hardware adjustments and ground screw  D1(22)(18)(29) Hardware adjustments (zero, span, alarm, security)  D4(30) External ground screw assembly  DA(22)(18)(29) Hardware adjustments (zero, span, alarm, security) and external ground screw assembly  Conduit plug  D0 316 SST conduit plug  Conduit electrical connector(31)	C5	NAMUR alarm and saturation levels, low alarm	•	•	*
C8 Low alarm (standard Rosemount alarm and saturation levels)  Hardware adjustments and ground screw  D1(22)(18)(29) Hardware adjustments (zero, span, alarm, security)  External ground screw assembly  DA(22)(18)(29) Hardware adjustments (zero, span, alarm, security) and external ground screw assembly  Conduit plug  DO 316 SST conduit plug  Conduit electrical connector(31)	C6	Custom alarm and saturation levels, high alarm	•	•	*
Hardware adjustments and ground screw  D1(22)(18)(29) Hardware adjustments (zero, span, alarm, security)  External ground screw assembly  DA(22)(18)(29) Hardware adjustments (zero, span, alarm, security) and external ground screw assembly  Conduit plug  DO 316 SST conduit plug  Conduit electrical connector(31)	C7	Custom alarm and saturation levels, low alarm	•	•	*
D1(22)(18)(29) Hardware adjustments (zero, span, alarm, security)  D4(30) External ground screw assembly  DA(22)(18)(29) Hardware adjustments (zero, span, alarm, security) and external ground screw assembly  Conduit plug  DO 316 SST conduit plug  Conduit electrical connector(31)	C8	Low alarm (standard Rosemount alarm and saturation levels)	•	•	*
D4 <sup>(30)</sup> External ground screw assembly  DA <sup>(22)</sup> (18)(29) Hardware adjustments (zero, span, alarm, security) and external ground screw assembly  Conduit plug  DO 316 SST conduit plug  Conduit electrical connector <sup>(31)</sup>	Hardware a	adjustments and ground screw			
DA(22)(18)(29) Hardware adjustments (zero, span, alarm, security) and external ground screw assembly  Conduit plug  DO 316 SST conduit plug  Conduit electrical connector(31)	D1 <sup>(22)(18)(29)</sup>	Hardware adjustments (zero, span, alarm, security)	•	_	*
Conduit plug  DO 316 SST conduit plug  Conduit electrical connector(31)	D4 <sup>(30)</sup>	External ground screw assembly	•	•	*
DO 316 SST conduit plug • •  Conduit electrical connector <sup>(31)</sup>	DA <sup>(22)(18)(29)</sup>		•	_	*
Conduit electrical connector <sup>(31)</sup>	Conduit plu	ıg			
	DO	316 SST conduit plug	•	•	*
GE M12, 4-pin, male connector (eurofast) • •	Conduit ele	ectrical connector <sup>(31)</sup>			
	GE	M12, 4-pin, male connector (eurofast)	•	•	
GM A size mini, 4-pin, male connector (minifast) • •	GM	A size mini, 4-pin, male connector (minifast)	•	•	
Typical model number: 3051SFP 1 F 010 W3 S 0150 D3 1 J A 1A 3 M5	Typical mod	del number: 3051SFP 1 F 010 W3 S 0150 D3 1 J A 1A	3	M5	

- $1. \qquad \hbox{To improve pipe perpendicularity for gasket sealing, socket diameter is smaller than standard pipe O.D.}$
- 2. Required for measurement type codes 3, 4, 7, and D.
- 3. For measurement type codes 1, 2, 5, and 6 with DP range 1, absolute limits are 0.5 to 2000 psi (0,03 to 137,9 bar) and gage limits are –14.2 to 2000 psig (–0,98 to 137,9 bar).
- 4. Transmitter output code F is only available with measurement type code 1, 2, 5, 6, and D.
- 5. Only intrinsically safe approval codes apply.
- 6. Only available with measurement types D and 6.
- 7. Only available with output code X.
- 8. Only available with output code A.
- 9. For detailed specifications see "Specifications" on page 35.
- 10. Only available with differential pressure ranges 2 and 3, and silicone fill fluid.
- 11. Option HR7 configures the HART output to HART Revision 7. This option requires the selection of the advanced diagnostics (DA2) option. The device with this option can be field configured to HART Revision 5 or 7 if desired.
- 12. Thermowell material is the same as the body material.

- 13. Does not apply to process connection codes T1 and S1.
- 14. Not available for bore sizes 0010, 0014, 0020, 0034, 0066, or 0109.
- 15. Not available with DIN process connection codes D1, D2, or D3.
- 16. Materials of construction comply with metallurgical requirements within NACE MR0175/ISO for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.
- 17. Not available with output code X.
- 18. Not available with output code F.
- 19. If select body material and type code F, consult the factory for product certifications availability.
- 20. Not available with M20 or  $G^{1/2}$  conduit entry size.
- 21. Not available with housing code 7J.
- 22. Not available with output code X. Only available with measurement type D.
- 23. See the Rosemount 3051S Reference Manual for cable requirements. Contact an Emerson representative for additional information.
- 24. Not available with output code F, option code DA2, or option code QT.
- 25. Not available with housing code 5A, 5J, or 7J. The T1 option is not needed with FISCO Product Certifications.
- 26. Includes hardware adjustments (option code D1) as standard. Not available with output code X. Only available with measurement type D.
- 27. Requires Rosemount Engineering Assistant to configure (to ensure correct operation download the Engineering Assistant software at: <u>Emerson.com/Rosemount/Engineering Assistant Software</u>).
- 28.  $-58 \,^{\circ}\text{F}$  (50  $^{\circ}\text{C}$ ) for measurement type 1-7.
- 29. Not available with housing codes 2E, 2F, 2G, 2M, 5A, 5J, or 7J.
- 30. This assembly is included with options E1, E2, E3, E4,E7, EM, EP, K1, K2, K6, K7, KA, KC, KD, KP, KM, N1, N3, N7, ND, and T1.
- 31. Not available with housing code 5A, 5J, or 7J. Available with Intrinsically Safe approvals only. For FM Intrinsically Safe; Nonincendive (option code I5) or FM FISCO Intrinsically Safe (option code IE), install in accordance with Rosemount drawing 03151-1009.

# **Specifications**

#### **Performance specifications**

Performance assumptions include: measured pipe I.D, transmitter is trimmed for optimum flow accuracy, and performance is dependent on application parameters.

Table 4. Multivariable Flow Performance - Flow Reference Accuracy (Measurement Type 1 to 8)(1)(2)

Rosemount 3	051SFA Annubar Flow N	Лeter	
		Classic MV (8:1 flow turndown)	Ultra for flow (14:1 flow turndown)
Ranges 2–3		±1.15% of flow rate	±0.80% of flow rate
Rosemount 3	051SFC_A Compact Ani	nubar Flow Meter - Rosemount A	Annubar option A
		Classic MV (8:1 flow turndown)	Ultra for flow (14:1 flow turndown)
Danges 2, 2	Standard	±1.60% of flow rate	±1.55% of flow rate
Ranges 2–3	Calibrated	±1.00% of flow rate	±0.80% of flow rate
Rosemount 3	051SFC Compact Orific	on C	
		Classic MV (8:1 flow turndown)	Ultra for flow (14:1 flow turndown)
Ranges 2–3	ges 2–3 ±1.45% of flow rate ±1.15% of flow rate		±1.15% of flow rate
Rosemount 3	051SFC Compact Orific	e Flow Meter - Orifice option P <sup>(3)</sup>	
		Classic MV (8:1 flow turndown)	Ultra for Flow (14:1 flow turndown)
Ranges 2–3		±1.45% of flow rate	±1.30% of flow rate
Rosemount 3	051SFP Integral Orifice	Flow Meter	
		Classic MV (8:1 flow turndown)	Ultra for flow (14:1 flow turndown)
	Bore < 0.160	±2.65% of flow rate	±2.55% of flow rate
D	0.160 ≤ Bore < 0.500	±1.70% of flow rate	±1.55% of flow rate
Ranges 2–3	$0.500 \le Bore \le 1.000$	±1.25% of flow rate	±1.05% of flow rate
	1.000 < Bore	±1.70% of flow rate	±1.55% of flow rate

<sup>1.</sup> Measurement types 2–4 assume the unmeasured variables are constant. Additional uncertainty will depend on the variation in the unmeasured variables.

Table 5. Flow Performance - Flow Reference Accuracy (Measurement Type D)(1)(2)(3)

Rosemount 3051SFA Annubar Flow Meter							
		Classic (8:1 flow turndown)	Ultra (8:1 flow turndown)	Ultra for flow (14:1 flow turndown)			
Ranges 2–3		±1.25% of flow rate	±0.95% of flow rate	±0.80% of flow rate			
Rosemount 3051SFC_A Compact Annubar Flow Meter - Rosemount Annubar option A							
		Classic (8:1 flow turndown)	Ultra (8:1 flow turndown)	Ultra for flow (14:1 flow turndown)			
Danges 2 2	Uncalibrated	±1.70% of flow rate	±1.65% of flow rate	±1.55% of flow rate			
Ranges 2–3	Calibrated	±1.25% of flow rate	±0.95% of flow rate	±0.80% of flow rate			
Rosemount	t 3051SFC Compa	ct Orifice Flow Meter – Cor	nditioning option C				
		Classic (8:1 flow turndown)	Ultra (8:1 flow turndown)	Ultra for flow (14:1 flow turndown)			
Ranges 2–3		±1.40% of flow rate	±1.25% of flow rate	±1.15% of flow rate			
Rosemount 3051SFC Compact Orifice Flow Meter - Orifice option P <sup>(4)</sup>							
		Classic (8:1 flow turndown)	Ultra (8:1 flow turndown)	Ultra for Flow (14:1 flow turndown)			
Ranges 2–3		±1.80% of flow rate	±1.35% of flow rate	±1.30% of flow rate			

<sup>2.</sup> Range 1 flow meters experience an additional uncertainty up to 0.9 percent. Consult your Emerson representative for exact specifications.

<sup>3.</sup> For line size less than 2-in. (50 mm) or greater than 8-in. (200 mm), add an additional 0.5 percent uncertainty.

Rosemount 3051SFP Integral Orifice Flow Meter							
		Classic (8:1 flow turndown)	Ultra (8:1 flow turndown)	Ultra for flow (14:1 flow turndown)			
	Bore < 0.160	±2.70% of flow rate	±2.65% of flow rate	±2.60% of flow rate			
Pangos 2 2	0.160 ≤ Bore < 0.500	±1.80% of flow rate	±1.70% of flow rate	±1.60% of flow rate			
Ranges 2–3	0.500 ≤ Bore ≤ 1.000	±1.35% of flow rate	±1.25% of flow rate	±1.15% of flow rate			
	1.000 < Bore	±1.80% of flow rate	±1.70% of flow rate	±1.60% of flow rate			

- 1. For measurement types 5–7, refer to the reference accuracy specification for the Rosemount 3051SMV with measurement type P.
- 2. These flow measurement accuracies assume a constant density, viscosity, and expansibility factor.
- 3. Range 1 flow meters experience an additional uncertainty up to 0.9 percent. Consult your Emerson representative for exact specifications.
- 4. For line size less than 2-in. (50 mm) or greater than 8-in. (200 mm), add an additional 0.5 percent uncertainty.

#### Warranty<sup>(1)</sup>

Models	Ultra and Ultra for flow <sup>(2)</sup>	Classic and classic MV <sup>(3)</sup>	Optional extended warranty <sup>(4)</sup>
All Rosemount 3051S	Products 15-year limited warranty	1-year limited warranty	WR5: 5-year limited warranty WR3: 3-year limited warranty

- 1. Warranty details can be found in Emerson Terms and Conditions of Sale, Document 63445, Rev G (10/06).
- 2. Rosemount Ultra and Ultra for flow transmitters have a limited warranty of 15 years from date of shipment. All other provisions of Emerson standard limited warranty remain the same.
- 3. Goods are warranted for 12 months from the date of initial installation or 18 months from the date of shipment by seller, whichever period expires first.
- 4. Rosemount extended warranties have a limited warranty of five or three years from date of shipment.

#### **Dynamic performance**

#### Total time response at 75 °F (24 °C), includes dead time (1)

3051SF_D	3051SF_1, 2, 5, or 6	3051SF_3, 4, or 7
DP ranges 2-5: 100 ms Range 1: 255 ms Range 0: 700 ms	DP range 1: 310 ms DP range 2: 170 ms DP range 3: 155 ms AP and GP: 240 ms	DP ranges 2–5: 145 ms DP range 1: 300 ms DP range 0: 745 ms

For FOUNDATION Fieldbus (output code F), add 52 ms to stated values (not including segment macro-cycle).
 For option code DA2, add 45 ms (nominal) to stated values.

#### Dead time (1)

3051SF_D	3051SF_1-7
45 ms (nominal)	DP: 100 ms AP and GP: 140 ms
	RTD Interface: 1 s

<sup>1.</sup> For option code DA2, dead time is 90 milliseconds (nominal).

#### Update rate (1)

3051SF_D	3051SF_1-7	
22 updates per sec.	DP: 22 updates per sec. AP and GP: 11 updates per sec. RTD Interface: 1 update per sec.	Calculated variables: Mass/volumetric flow rate: 22 updates per sec. Energy flow rate: 22 updates per sec. Totalized flow: 1 update per sec.

<sup>1.</sup> Does not apply to wireless (output code X). See "Wireless self-organizing networks" on page 41 for wireless update rate.

**Mounting position effects** 

Rosemount models		Ultra, Ultra for flow, classic and classic MV	
3051SF_3, 4, 7, or D		Zero shifts up to $\pm 1.25$ in $H_2O$ (3,11 mbar), which can be zeroed Span: no effect	
205155 1 2 5 or 6	DP sensor:	Zero shifts up to $\pm 1.25$ in $H_2O$ (3,11 mbar), which can be zeroed Span: no effect	
3051SF_1, 2, 5, or 6	GP/AP sensor:	Zero shifts to ±2.5 inH <sub>2</sub> O (6,22 mbar), which can be zeroed Span: no effect	

#### Vibration effect for Rosemount 3051SFA, 3051SFC

Less than  $\pm 0.1\%$  of URL when tested per the requirements of IE C60770-1 field with general application or pipeline with low vibration level (10 to 1000 Hz test frequency range, 0.15 mm displacement peak amplitude,  $20\text{m/s}^2$  acceleration amplitude).<sup>(1)</sup>

## Vibration effect for Rosemount 3051SFC\_A

Less than  $\pm 0.1\%$  of URL when tested per the requirements of IEC60770-1 field or pipeline with high vibration level (10–60 Hz, 0.15 mm displacement peak amplitude/60–2000 Hz 2q).<sup>(1)</sup>

 SST temperature housing is not recommended with primary element technology A in application with mechanical vibration.

#### Vibration effect for Rosemount 3051SFP

Less than  $\pm 0.1\%$  of URL when tested per the requirements of IEC60068-2-6 (10 to 1000 Hz test frequency range, 0.075 mm displacement peak amplitude,  $10 \text{ m/s}^2$  acceleration amplitude).

#### **Power supply effect**

Less than  $\pm 0.005\%$  of calibrated span per volt change in voltage at the transmitter terminals

## Electromagnetic compatibility (EMC)

Meets all industrial environment requirements of EN 61326 and NAMUR NE-21<sup>(1)</sup>. Maximum deviation < 1% span during EMC disturbance.<sup>(2)(3)(4)</sup>

- 1. NAMUR NE-21 does not apply to wireless output code X configurations.
- During surge event device may exceed maximum EMC deviation limit or reset; however, device will self-recover and return to normal operation within specified start-up time.
- 3. For devices with junction box housing or remote display (housing styles: 2A-2C, 2E-2G, 2J, and 2M) testing performed with shielded cable.
- 4. Rosemount 3051SF measurement type 1, 3, 5, and 7 require shielded cable for the process temperature connection.

## Transient protection (option T1)

#### Meets IEEE C62.41.2-2002, location category B

- 6 kV crest (0.5 μs-100 kHz)
- 3 kA crest (8 x 20 microseconds)
- 6 kV crest (1.2 x 50 microseconds)

## Meets IEEE C37.90.1–2002 Surge Withstand Capability

SWC 2.5 kV crest, 1.0 MHz wave form

## **Functional specifications**

## Range and sensor limits

## Flow meter with coplanar sensor module

Pango	DP Sensor (Rosemount 3051SF_3, 4, or 7)		
Range	Lower (LRL)	Upper (URL)	
1	0 inH <sub>2</sub> O (0 mbar)	25.00 inH <sub>2</sub> O (62,16 mbar)	
2	0 inH <sub>2</sub> O (0 bar)	250.00 inH <sub>2</sub> O (621,60 mbar)	
3	0 inH <sub>2</sub> O (0 bar)	1000.00 inH <sub>2</sub> O (2,48 bar)	

#### Flow meter with multivariable sensor module

Dan	DP Sensor (Rosemount 3051SF1, 2, 5, or 6)				
Range	Lower (LRL)	Upper (URL)			
1	0 inH <sub>2</sub> O (0 mbar)	25.00 inH <sub>2</sub> O (62,16 mbar)			
2	0 inH <sub>2</sub> O (0 bar)	250.00 inH <sub>2</sub> O (621,60 mbar)			
3	0 inH <sub>2</sub> O (0 bar)	1000.00 inH <sub>2</sub> O (2,48 bar)			
D	Static pressure sensor (GP/AP)				
Range	Lower (LRL)	Upper (URL) <sup>(1)</sup>			
3	GP <sup>(2)</sup> : –14.20 psig (0,97 bar) AP: 0.50 psia (34,47 mbar)	GP: 800.00 psig (55,15 bar) AP: 800.00 psia (55,15 bar)			
4		GP: 3626.00 psig (250,00 bar) AP: 3626.00 psia (250,00 bar)			

<sup>1.</sup> For SP range 4 with DP range 1, the URL is 2000 psi (137,9 bar).

## Process Temperature RTD Interface (Rosemount 3051SF\_1, 3, 5 or 7)<sup>(1)</sup>

Lower (LRL)	Upper (URL)
−328 °F (−200 °C)	1562 °F (850 °C)

<sup>1.</sup> Transmitter is compatible with any Pt 100 RTD sensor. Examples of compatible RTDs include Rosemount Series 68 and 78 RTD Temperature Sensors.

## Minimum span limits

## Transmitter with coplanar sensor module (single variable)

Pango	DP sensor (Rosemount 3051SF_D, 3, 4 or 7)			
Range	Ultra and ultra for flow	Classic		
1	0.5 inH <sub>2</sub> O (1,24 mbar)	0.5 inH <sub>2</sub> O (1,24 mbar)		
2	1.25 inH <sub>2</sub> O (3,11 mbar)	1.67 inH <sub>2</sub> O (4,15 mbar)		
3	5.0 inH <sub>2</sub> O (12,43 mbar)	6.67 inH <sub>2</sub> O (16,58 mbar)		

#### Transmitter with multivariable sensor module

Range	DP sensor (Rosemount 3051SF_1, 2, 5, or 6)				
Kange	Ultra for flow	Classic MV			
1	0.5 inH <sub>2</sub> O (1,24 mbar)	0.5 inH <sub>2</sub> O (1,24 mbar)			
2	1.3 inH <sub>2</sub> O (3,23 mbar)	2.5 inH <sub>2</sub> O (6,22 mbar)			
3	5.0 inH <sub>2</sub> O (12,43 mbar)	10.0 inH <sub>2</sub> O (24,86 mbar)			
	Static pressure sensor (GP/AP)				
3	4.0 psi (275,79 mbar)	8.0 psi (551,58 mbar)			
4	18.13 psi (1,25 bar)	36.26 psi (2,50 bar)			

<sup>2.</sup> Inert fill: Minimum pressure = 1.5 psia (0,10 bar) or –13.2 psig (–0,91 bar).

# Process temperature RTD interface (Rosemount 3051SF\_1, 3, 5 or 7)

Minimum span = 52 °F (11 °C)

Service

Rosemount 3051SF\_5, 6, 7, or D (direct process variable output):

Liquid, gas, and steam applications

# Rosemount 3051SF\_1, 2, 3, or 4 (mass and energy flow output):

Some fluid types are only supported by certain measurement types 4–20 mA/HART

Fluid compatibility	v with pressure and	d temperature con	npensation
i iuiu compatibilit	y with pressure and	u terriperature cor	ipensation

•	Avai	lahl	اما

— Not available

Ordering					
code	Measurement type	Liquids	Saturated steam	Superheated steam	Gas and natural gas
1	DP/P/T (full compensation)	•	•	•	•
2	DP/P	•	•	•	•
3	DP/T	•	_	_	_
4	DP only	•	•	_	_

## Zero and span adjustment

Zero and span values can be set anywhere within the range. Span must be greater than or equal to the minimum span.

#### **HART output**

Two-wire 4–20 mA is user-selectable for linear or square root output. Digital process variable superimposed on 4–20 mA signal, available to any host that conforms to the HART protocol.

#### **Power supply**


External power supply required.

- Rosemount 3051SF\_D: 10.5 to 42.4 Vdc with no load
- Rosemount 3051SF\_D with Advanced HART Diagnostics Suite: 12 to 42.4 Vdc with no load
- Rosemount 3051SF\_1-7: 12 to 42.4 Vdc with no load

#### **Load limitations**

Maximum loop resistance is determined by the voltage level of the external power supply, as described by:


#### Rosemount 3051SF\_D

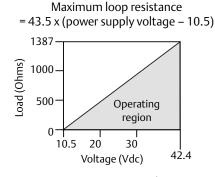

The Field Communicator requires a minimum loop resistance of 250  $\Omega$  for communication.

# Rosemount 3051SF\_1-7 and 3051SF\_D with HART Diagnostics (option code DA2)

Maximum loop resistance = 43.5 x (Power supply voltage – 12.0)

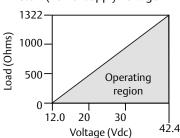

The Field Communicator requires a minimum loop resistance of 250  $\Omega$  for communication.

#### Selectable HART revisions (option code HR7)

The 2-wire 4–20 mA is user-selectable for linear or square root output. Digital process variable superimposed on 4–20 mA signal is available to any host that conforms to HART Protocol. The Rosemount 3051S with Advanced HART Diagnostics (DA2) comes with Selectable HART Revisions. Digital communications based on HART Revision 7 (with option code HR7 selected) or Revision 5 (default) protocol can be selected. The HART revision can be switched in the field using any HART-based configuration. See the Rosemount 3051S Reference Manual for instructions on how to switch HART Revision.

#### Advanced HART Diagnostics Suite (option code DA2)

SPM provides statistical data (standard deviation, mean, coefficient of variation) that can be used to detect process and process equipment anomalies, including plugged impulse lines, air entrainment, pump cavitation, furnace flame instability, distillation column flooding, and more. This diagnostic allows you to take preventative measures before abnormal process situations result in unscheduled downtime or rework.

Power advisory diagnostic pro-actively detects and notifies you of degraded electrical loop integrity before it can affect your process operation. Example loop problems that can be detected include water in the terminal compartment, corrosion of terminals, improper grounding, and unstable power supplies.

The device dashboard presents the diagnostics in a graphical, task-based interface that provides single click access to critical process/device information and descriptive graphical troubleshooting.

Suite includes: SPM, Power Advisory, Status Log, Variable Log, Advanced Process Alerts, Service Alerts, and Time Stamp capability.

#### **FOUNDATION Fieldbus**

#### **Power supply**

External power supply required; transmitters operate on 9.0 to 32.0 Vdc transmitter terminal voltage.

#### **Current draw**

17.5 mA for all configurations (including LCD display option)

## **FOUNDATION Fieldbus Parameters**

Schedule Entries	14 (max.)
Links	30 (max.)
Virtual Communications Relationships (VCR)	20 (max.)

#### Standard function blocks

#### **Resource block**

Contains hardware, electronics, and diagnostic information.

#### Transducer block

Contains actual sensor measurement data including the sensor diagnostics and the ability to trim the pressure sensor or recall factory defaults.

#### LCD display block

Configures the local display.

## **Analog input blocks**

Processes the measurements for input into other function blocks. The output value is in engineering or custom units and contains a status indicating measurement quality.

## PID block with auto-tune

Contains all logic to perform PID control in the field including cascade and feedforward. Auto-tune capability allows for superior tuning for optimized control performance.

#### Backup link active scheduler (LAS)

The transmitter can function as a Link Active Scheduler if the current link master device fails or is removed from the segment.

#### Software upgrade in the field

Software for the Rosemount 3051SF with FOUNDATION Fieldbus is easy to upgrade in the field using the FOUNDATION Fieldbus Common Device Software Download procedure.

#### Plantweb alerts

Enable the full power of the Plantweb digital architecture by diagnosing instrumentation issues, communicating advisory, maintenance, and failure details, and recommending a solution.

## Advanced control function block suite (option code A01)

#### Input selector block

Selects between inputs and generates an output using specific selection strategies such as minimum, maximum, midpoint, average, or first "good."

#### **Arithmetic block**

Provides pre-defined application-based equations including flow with partial density compensation, electronic remote seals, hydrostatic tank gauging, ratio control and others.

## Signal characterizer block

Characterizes or approximates any function that defines an input/output relationship by configuring up to twenty X, Y coordinates. The block interpolates an output value for a given input value using the curve defined by the configured coordinates.

#### Integrator block

Compares the integrated or accumulated value from one or two variables to pre-trip and trip limits and generates discrete output signals when the limits are reached. This block is useful for calculating total flow, total mass, or volume over time.

#### **Output splitter block**

Splits the output of one PID or other control block so that the PID will control two valves or other actuators.

#### **Control selector block**

Selects one of up to three inputs (highest, middle, or lowest) that are normally connected to the outputs of PID or other control function blocks.

Block	Execution time
Resource	N/A
Transducer	N/A
LCD display Block	N/A
Analog Input 1, 2	20 milliseconds
PID with Auto-tune	35 milliseconds
Input Selector	20 milliseconds
Arithmetic	20 milliseconds
Signal Characterizer	20 milliseconds
Integrator	20 milliseconds
Output Splitter	20 milliseconds
Control Selector	20 milliseconds

## Fully compensated mass flow block (option code H01)

Calculates fully compensated mass flow based on differential pressure with external process pressure and temperature measurements over the FOUNDATION Fieldbus segment. Configuration for the mass flow calculation is easily accomplished using the Rosemount Engineering Assistant 6 software. To ensure correct operation download the most current version of the Engineering Assistant software at: <a href="mailto:Emerson.com/Rosemount/Engineering Assistant Software">Emerson.com/Rosemount/Engineering Assistant Software</a>.

## ASP diagnostics suite for FOUNDATION Fieldbus (option code D01)

Statistical Process Monitoring (SPM) provides statistical data (standard deviation and mean) that can be used to detect process and process equipment anomalies, including plugged impulse lines, air entrainment, pump cavitation, furnace flame instability, distillation column flooding, and more. This diagnostic allows you to take preventative measures before abnormal process situations result in unscheduled downtime or rework.

The device dashboard presents the diagnostics in a graphical, task-based interface that provides single click access to critical process/device information and descriptive graphical troubleshooting.

Suite includes: SPM and Plugged Impulse Line Detection (PIL).

## Wireless self-organizing networks

#### Output

WirelessHART, 2.4 GHz DSSS.

## Local display

The optional 7-digit LCD display can display user-selectable information such as primary variable in engineering units, percent of range, sensor module temperature, and electronics temperature. Display updates at up to once per minute.

#### **Update rate**

WirelessHART, user selectable1 second to 60 minutes

#### Power module

Field replaceable, keyed connection eliminates the risk of incorrect installation, Intrinsically Safe Lithium-thionyl chloride Power Module with polybutadine terephthalate (PBT) enclosure. Ten-year life at one minute update rate. (1)(2)

- 1. Reference conditions are 70 °F (21 °C), and routing data for three additional network devices.
- 2. 6.5-year life at one minute update rates when used with Rosemount 3051SMV.

#### Note

Continuous exposure to ambient temperature limits of –40 or 185 °F (–40 or 85 °C) may reduce specified life by less than 20 percent.

## **Overpressure limits**

Transmitters withstand the following limits without damage:

#### Coplanar<sup>™</sup> sensor module (single variable)

Range	<b>DP</b> (1)
Kange	Rosemount 3051SF_3, 4, 7, or D
1	2000 psi (137,90 bar)
2	3626 psi (250,00 bar)
3	3020 psi (230,00 bdi)

 The overpressure limit of a DP Sensor with the P9 option is 4500 psig (310,26 bar). The overpressure limit of a DP Sensor with the P0 option is 6092 psig (420,00 bar).

## Coplanar multivariable sensor module (Rosemount 3051SF\_1, 2, 5, or 6)

Static	DP range				
pressure	1 2 3				
Range 3 GP/AP	1600 psi (110,32 bar)				
Range 4 GP/AP	2000 psi (137,90 bar)	3626 psi (250,00 bar)			

## Static pressure limits

#### Coplanar sensor module

Operates within specifications between static line pressures of:

Range	DP sensor <sup>(1)</sup>
Kange	Rosemount 3051SF_3, 4, 7, or D
1	0.5 psia to 2000 psig (0,03 to 137,90 bar)
2	0.5 psia to 3626 psig (0,03 to 250,00 bar)
3	0.5 psid to 5020 psig (0,05 to 250,00 bdi )

 The static pressure limit of a DP sensor with the P9 option is 4500 psig (310,26 bar). The static pressure limit of a DP Sensor with the P0 option is 6092 psig (420,00 bar).

# Coplanar multivariable sensor module (Rosemount 3051SF\_1, 2, 5, or 6)

Operates within specifications between static line pressures of 0.5 psia (0,03 bar) and the values in the table below:

Static	DP Range			
pressure	1 2 3			
Range 3 GP/AP	800 psi (55,15 bar)			
Range 4 GP/AP	2000 psi (137,90 bar)	3626 psi (250,00 bar)		

## **Temperature limits**

#### **Ambient**

-40 to 185 °F (-40 to 85 °C) with LCD display<sup>(1)</sup>: -40 to 175 °F (-40 to 80 °C) with option code P0: -20 to 185 °F (-29 to 85 °C)

 LCD display may not be readable and LCD display updates will be slower at temperatures below –4 °F (–20 °C).

#### Storage

-50 to 185 °F (-46 to 85 °C) with LCD display: -40 to 185 °F (-40 to 85 °C) with Wireless output: -40 to 185 °F (-40 to 85 °C)

## **Process temperature limits**

#### Rosemount 3051SFA process temperature limits

#### **Direct mount transmitter**

- 500 °F (260 °C)
- 750 °F (398 °C) when used with a direct mount, high temperature 5-valve manifold (transmitter connection platform code 6).
   Maximum temperature limit for steam processes is 650 °F (343 °C).
- $400 \, ^{\circ}\text{F} (204 \, ^{\circ}\text{C})$  when top mounted in steam service

#### Remote mount transmitter

- 1250 °F (677 °C) Alloy C-276 sensor material (for superheated steam applications above 1000 °F [538 °C], it is recommended that the Rosemount 585 with alloy 800H sensor material is used.)
- 850 °F (454 °C) SST sensor material

#### Rosemount 3051SFC process temperature limits

#### **Direct mount transmitter**

- -40 to 450 °F (-40 to 232 °C)
- Up to 400 °F (204 °C) when top mounted in steam service

#### Remote mount transmitter

-148 to 850 °F (-100 to 454 °C) — SST

## Rosemount 3051SFP process temperature limits

#### Standard (direct/remote mount)

-40 to 450 °F (-40 to 232 °C)

#### Extended (remote mount only with option code G)

- -112 to 850 °F (-80 to 454 °C)(1)
- 1. Consult factory for all-welded design for extended temperatures.

#### **Humidity limits**

0-100 percent relative humidity

## Turn-on time(1)

When power is applied to the transmitter during startup, performance will be within specifications per the time period described below:

Transmitter	Turn-on time (typical)	
3051S, 3051SF_D	2 seconds	
Diagnostics	- 5 seconds	
3051SMV, 3051SF_1-7	) seconds	

1. Does not apply to wireless option code X.

#### **Volumetric displacement**

Less than 0.005 in<sup>3</sup> (0,08 cm<sup>3</sup>)

## Damping (1)

Analog output response time to a step change is user-selectable from 0 to 60 seconds for one time constant. For Rosemount 3051SF\_1-7, each variable can be individually adjusted. Software damping is in addition to sensor module response time.

Does not apply to wireless option code X.

#### Failure mode alarm

## HART 4-20 mA (output option code A)

If self-diagnostics detect a gross transmitter failure, the analog signal will be driven offscale to alert the user. Rosemount standard (default), NAMUR, and custom alarm levels are available (see "Alarm Configuration" on page 43).

High or low alarm signal is software-selectable or hardware-selectable via the optional switch (option D1).

#### **Table 6. Alarm Configuration**

	High alarm	Low alarm
Default	≥ 21.75 mA	≤ 3.75 mA
NAMUR compliant <sup>(1)</sup>	≥ 22.5 mA	≤ 3.6 mA
Custom levels(2)(3)	20.2-23.0 μΑ	3.4-3.8 μΑ

- Analog output levels are compliant with NAMUR recommendation NE 43, see option codes C4 or C5.
- Low alarm must be 0.1 mA less than low saturation and high alarm must be 0.1 mA greater than high saturation.
- 3. For Rosemount 3051SMV and option code DA2, low alarm custom values are 3.6–3.8 mA.

## Safety-certified transmitter failure values (1)

Safety accuracy: 2.0% (2)

Safety response time: 1.5 seconds

- Does not apply to wireless option code X.
- A two percent variation of the transmitter mA output is allowed before a safety trip. Trip values in the DCS or safety logic solver should be derated by two percent.

## **Physical specifications**

#### **Electrical connections**

<sup>1</sup>/<sub>2</sub>–14 NPT, G<sup>1</sup>/<sub>2</sub>, and M20 x 1.5 conduit. HART interface connections fixed to terminal block for output code A and X.

## **Process-wetted parts**

## Rosemount 3051SFA wetted parts - Rosemount Annubar sensor material

- 316 SST
- Alloy C-376

#### Note

Cage nipple is made from 304 SST.

## Rosemount 3051SFC wetted parts - material of construction

## **Body/plate**

- 316/316L SST
- 50 micro-inch Ra surface finish

#### Manifold head/valves

316 SST

#### Flange studs and nuts

- Customer supplied
- Available as a spare part

#### Transmitter connection studs and nuts

- Studs A193 Grade B8M.
- Nuts-A194 Grade 8M.

#### **Gasket and O-rings**

- · Gaskets are customer supplied.
- Durlon 8500 fiber gaskets are recommended. Consult an Emerson representative for use with other gaskets.
- Available as a spare part

#### Note

Gaskets and O-rings should be replaced when the Rosemount 405 is disassembled.

#### Rosemount 3051SFP wetted parts - material of construction

#### Orifice plate

- 316/316L SST
- Alloy C-276
- Alloy 400

#### **Body**

316 SST (CF8M), material per ASTM A351

#### Pipe material (if applicable)

A312 Gr 316/316L

## Flange

- A182 Gr 316/316L
- Flange pressure limits are per ANSI B16.5
- Flange face finish per ANSI B16.5, 125 to 250 RMS

#### Body bolts/studs

- ASTM A193 Gr B8M studs
- ASTM A193 Gr B8M Class 2 body studs provided for high temperature option code G
- ASTM A193 Gr B8M Class 2 body studs provided for 1–1/2-in (code 015) line size units ordered with high pressure process connection option codes W9, R9, T1, S1, or P2.

#### Transmitter connection studs

ASTM A193 Gr B8M studs

#### Gaskets/O-rings

- Glass filled PTFE
- Alloy X-750 provided for high temperature option code G
- Gaskets and O-rings must be replaced each time the Rosemount 3051SFP is disassembled for installation or maintenance.

#### Drain/vent valves

316 SST, Alloy C-276, or *Alloy* 400/K–500 material (drain vent seat: Alloy 400, drain vent stem: Alloy K–500)

#### **Process flanges and adapters**

- Plated CS
- SST: CF-8M (Cast 316 SST) per ASTM A743
- Cast C-276: CW-12MW per ASTM A494
- Cast alloy 400: M-30C per ASTM A494

## Non-wetted parts

#### **Electronics housing**

Low-copper aluminum alloy or CF-8M (Cast 316 SST) NEMA 4X, IP 66, IP 68 (66 ft. [20 m] for 168 hours)

## Note

IP 68 not available with wireless output.

## Paint for aluminum housing

Polyurethane

## Coplanar sensor module housing

SST: CF-3M (Cast 316L SST)

#### **Bolts**

- Plated CS per ASTM A449, Type 1
- Austenitic 316 SST per ASTM F593
- ASTM A453, Class D, Grade 660 SST
- ASTM A193, Grade B7M alloy steel
- ASTM A193, Class 2, Grade B8M SST
- Alloy K-500

#### Sensor module fill fluid

Silicone or inert halocarbon

## **Cover O-rings**

Nitirile Butadiene (NBR)

#### Wireless antenna

PBT/polycarbonate (PC) integrated omni-directional antenna

#### Power module

Field replaceable, keyed connection eliminates the risk of incorrect installation, Intrinsically Safe Lithium-thionyl chloride Power Module with PBT enclosure.

## **Product certifications**

## Rosemount 3051SMV/3051SFx

Rev 1.23

## **European Directive Information**

A copy of the EU Declaration of Conformity can be found at the end of the Quick Start Guide. The most recent revision of the EU Declaration of Conformity can be found at <a href="mailto:Emerson.com/Rosemount">Emerson.com/Rosemount</a>.

## **Ordinary Location Certification**

As standard, the transmitter has been examined and tested to determine that the design meets the basic electrical, mechanical, and fire protection requirements by a nationally recognized test laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

## **Installing Equipment in North America**

The US National Electrical Code® (NEC) and the Canadian Electrical Code (CEC) permit the use of Division marked equipment in Zones and Zone marked equipment in Divisions. The markings must be suitable for the area classification, gas, and temperature class. This information is clearly defined in the respective codes.

## **USA**

**E5** US Explosionproof (XP) and Dust Ignition-proof (DIP)

Certificate: FM16US0089X

Standards: FM Class 3600 - 2011, FM Class 3615 - 2006, FM Class 3616 - 2011, FM Class 3810 - 2005, ANSI/NEMA® 250 - 2003

Markings: XP CL I, DIV 1, GP B, C, D; T5; DIP CL II, DIV 1, GP E, F, G; CL III; T5(-50 °C  $\leq$  T<sub>a</sub> $\leq$  +85 °C); Factory

Sealed; Type 4X

**I5** US Intrinsically Safe (IS) and Nonincendive (NI)

Certificate: FM16US0233

Standards: FM Class 3600 -2011, FM Class 3610 - 2007, FM Class 3611 - 2004, FM Class 3616 - 2006, FM Class 3810 - 2005, NEMA 250 - 1991

Markings: IS CL I, DIV 1, GP A, B, C, D; CL II, DIV 1, GP E, F,

G; Class III; Class 1, Zone 0 AEx ia IIC T4; NI CL 1, DIV 2, GP A, B, C, D; T4( $-50 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ ); when connected per Rosemount drawing

03151-1206; Type 4X

#### Note

Transmitters marked with NI CL 1, DIV 2 can be installed in Division 2 locations using general Division 2 wiring methods or Nonincendive Field Wiring (NIFW). See Drawing 03151-1206.

#### Canada

**E6** Canada Explosionproof, Dust Ignition-proof, Division 2

Certificate: 1143113

Standards: CAN/CSA C22.2 No. 0-10, CSA Std C22.2 No. 25-1966, CSA Std C22.2 No. 30-M1986, CSA C22.2 No. 94.2-07, CSA Std C22.2 No. 213-M1987, CAN/CSA C22.2 60079-11:14, CAN/CSA-C22.2 No. 61010-1-12, ANSI/ISA 12.27.01-2003, CSA Std C22.2 No. 60529:05 (R2010)

Markings: Explosionproof Class I, Division 1, Groups B, C, D; Dust-Ignitionproof Class II, Division 1, Groups E, F, G; Class III; suitable for Class I, Division 2, Groups A, B, C, D; Type 4X

**16** Canada Intrinsically Safe

Certificate: 1143113

Standards: CAN/CSA C22.2 No. 0-10, CSA Std C22.2 No. 25-1966, CSA Std C22.2 No. 30-M1986, CSA C22.2 No. 94.2-07, CSA Std C22.2 No. 213-M1987, CAN/CSA C22.2 60079-11:14, CAN/CSA-C22.2 No. 61010-1-12, ANSI/ISA 12.27.01-2003, CSA Std C22.2 No. 60529:05 (R2010)

Markings: Intrinsically Safe Class I, Division 1; Groups A, B, C, D; suitable for Class 1, Zone 0, IIC, T3C, T<sub>a</sub>=70 °C; when connected per Rosemount drawing 03151-1207; Type 4X

IF Canada FISCO Intrinsically Safe

Certificate: 1143113

Standards: CAN/CSA C22.2 No. 0-10, CSA Std C22.2 No. 25-1966, CSA Std C22.2 No. 30-M1986, CSA C22.2 No. 94.2-07, CSA Std C22.2 No. 213-M1987, CAN/CSA C22.2 60079-11:14, CAN/CSA-C22.2 No. 61010-1-12, ANSI/ISA 12.27.01-2003, CSA Std C22.2 No. 60529:05 (R2010)

Markings: FISCO Intrinsically Safe Class I, Division 1; Groups A, B, C, D; suitable for Class I, Zone 0; T3C, T<sub>a</sub> = 70 °C; when installed per Rosemount drawing 03151-1207; Type 4X

## **Europe**

**E1** ATEX Flameproof

Certificate: KEMA 00ATEX2143X

Standards: EN 60079-0:2012+A11:2013, EN 60079-1: 2014, EN 60079-26:2015

Markings: SII 1/2 G Ex db IIC T6...T4 Ga/Gb, T6(-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +70 °C), T5/T4(-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +80 °C)

Temperature class	Process temperature
T6	−60 °C to +70 °C
T5	−60 °C to +80 °C
T4	−60 °C to +120 °C

#### Special Conditions for Safe Use (X):

- This device contains a thin wall diaphragm less than 1 mm thickness that forms a boundary between Category 1 (process connection) and Category 2 (all other parts of the equipment). The model code and datasheet are to be consulted for details of the diaphragm material. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
- 2. Flameproof joints are not intended for repair.
- 3. Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.
- 4. Appropriate cable, glands and plugs need to be suitable for a temperature of 5 °C greater than maximum specified temperature for location where installed.
- I1 ATEX Intrinsic Safety

Certificate: Baseefa08ATEX0064X

Standards:EN 60079-0: 2012, EN 60079-11: 2012

Markings: Ex II 1 G Ex ia IIC T4 Ga, T4( $-60 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ )

	HART	FOUNDATION Fieldbus	SuperModule only	RTD (for Rosemount 3051SFx)	
		rieidbus	Oilly	(HART)	(Fieldbus)
Voltage U <sub>i</sub>	30 V	30 V	7.14 V	30 V	30 V
Current I <sub>i</sub>	300 mA	300 mA	300 mA	2.31 mA	18.24 mA
Power P <sub>i</sub>	1 W	1.3 W	887 mW	17.32 mW	137 mW
Capacitance C <sub>i</sub>	14.8 nF	0	0.11 μF	0	0.8 nF
Inductance L <sub>i</sub>	0	0	0	0	1.33 mH

## Special Conditions for Safe Use (X):

- If the equipment is fitted with the optional 90 V transient suppressor, it is incapable of withstanding the 500 V isolation from earth test and this must be taken into account during installation.
- 2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a Zone 0 environment.

#### IA ATEX FISCO

Certificate: Baseefa08ATEX0064X

Standards: EN 60079-0: 2012, EN 60079-11: 2012

Markings: Ex II 1 G Ex ia IIC T4 Ga, T4( $-60 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ )

Parameter	FISCO
Voltage U <sub>i</sub>	17.5 V
Current I <sub>i</sub>	380 mA
Power P <sub>i</sub>	5.32 W
Capacitance C <sub>i</sub>	0
Inductance L <sub>i</sub>	0

#### ND ATEX Dust

Certificate: BAS01ATEX1374X

Standards:EN 60079-0: 2012, EN 60079-31: 2009 Markings: Ex II 1 D Ex ta IIIC T105 °C  $T_{500}$ 95 °C Da,  $(-20 \text{ °C} \le T_a \le +85 \text{ °C})$ ,  $V_{max} = 42.4 \text{ V}$ 

#### Special Conditions for Safe Use (X):

- 1. Cable entries must be used which maintain the ingress protection of the enclosure to at least IP66.
- 2. Unused cable entries must be filled with suitable blanking plugs which maintain the ingress protection of the enclosure to at least IP66.
- 3. Cable entries and blanking plugs must be suitable for the ambient temperature range of the apparatus and capable of withstanding a 7| impact test.
- 4. The SuperModule(s) must be securely screwed in place to maintain the ingress protection of the enclosure(s).

## N1 ATEX Type n

Certificate: Baseefa08ATEX0065X

Standards: EN 60079-0: 2012, EN 60079-15: 2010

Markings: Ex II 3 G Ex nA IIC T4 Gc, ( $-40 \,^{\circ}\text{C} \le T_a \le 70 \,^{\circ}\text{C}$ ),  $V_{max} = 45 \,\text{V}$ 

## Special Condition for Safe Use (X):

1. If fitted with a 90 V transient suppressor, the equipment is not capable of withstanding the 500 V electrical strength test as defined in Clause 6.5.1 of EN 60079-15:2010. This must be taken into account during installation.

#### International

**E7** IECEx Flameproof and Dust

Certificate: IECEx KEM 08.0010X (Flameproof)

Standards: IEC 60079-0:2011, IEC 60079-1:2014, IEC 60079-26:2014

Markings: Ex d IIC T6...T4 Ga/Gb, T6( $-60 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ ), T5/T4( $-60 \,^{\circ}\text{C} \le T_a \le +80 \,^{\circ}\text{C}$ )

Temperature class	Process temperature
Т6	−60 to +70 °C
T5	−60 to +80 °C
T4	−60 to +120 °C

## Special Conditions for Safe Use (X):

- 1. This device contains a thin wall diaphragm less than 1 mm thickness that forms a boundary between EPL Ga (process connection) and EPL Gb (all other parts of the equipment). The model code and datasheet are to be consulted for details of the diaphragm material. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
- 2. Flameproof joints are not intended for repair.
- Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.
- 4. Appropriate cable, glands and plugs need to be suitable for a temperature of 5 °C greater than maximum specified temperature for location where installed.

Certificate: IECEx BAS 09.0014X (Dust)

Standards: IEC 60079-0:2011, IEC 60079-31:2008

Markings: Ex ta IIIC T105 °C  $T_{500}$  95 °C Da, (-20 °C  $\leq T_a \leq +85$  °C),  $V_{max} = 42.4 \text{ V}$ 

#### Special Conditions for Safe Use (X):

- 1. Cable entries must be used which maintain the ingress protection of the enclosure to at least IP66.
- 2. Unused cable entries must be filled with suitable blanking plugs which maintain the ingress protection of the enclosure to at least IP66.
- 3. Cable entries and blanking plugs must be suitable for the ambient temperature range of the apparatus and capable of withstanding a 7] impact test.
- 4. The Rosemount 3051S- SuperModule must be securely screwed in place to maintain the ingress protection of the enclosure.

17 IECEx Intrinsic Safety

Certificate: IECEx BAS 08.0025X

Standards: IEC 60079-0: 2011, IEC 60079-11: 2011 Markings: Ex ia IIC T4 Ga, T4(-60 °C ≤  $T_a$  ≤ +70 °C)

HART		FOUNDATION Fieldbus	SuperModule only	RTD (for Rosemount 3051SFx)	
		rieidbus	Oilly	(HART)	(Fieldbus)
Voltage U <sub>i</sub>	30 V	30 V	7.14 V	30 V	30 V
Current I <sub>i</sub>	300 mA	300 mA	300 mA	2.31 mA	18.24 mA
Power P <sub>i</sub>	1 W	1.3 W	887 mW	17.32 mW	137 mW
Capacitance C <sub>i</sub>	14.8 nF	0	0.11 μF	0	0.8 nF
Inductance L <sub>i</sub>	0	0	0	0	1.33 mH

#### Special Conditions for Safe Use (X):

- If the equipment is fitted with the optional 90 V transient suppressor, it is incapable of withstanding the 500 V isolation from earth test and this must be taken into account during installation.
- 2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a Zone 0 environment.

#### **IG** IECEx FISCO

Certificate: IECEx BAS 08.0025X

Standards: IEC 60079-0: 2011, IEC 60079-11: 2011 Markings: Ex ia IIC T4 Ga, T4(-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +70 °C)

Parameter	FISCO
Voltage U <sub>i</sub>	17.5 V
Current I <sub>i</sub>	380 mA
Power P <sub>i</sub>	5.32 W
Capacitance C <sub>i</sub>	0
Inductance L <sub>i</sub>	0

## N7 IECEx Type n

Certificate: IECEx BAS 08.0026X

Standards: IEC 60079-0: 2011, IEC 60079-15: 2010 Markings: Ex nA IIC T5 Gc,  $(-40 \, ^{\circ}\text{C} \le T_a \le +70 \, ^{\circ}\text{C})$ 

#### Special Condition for Safe Use (X):

1. If fitted with a 90 V transient suppressor, the equipment is not capable of withstanding the 500 V electrical strength test as defined in Clause 6.5.1 of IEC 60079-15:2010. This must be taken into account during installation.

## Brazil

**E2** INMETRO Flameproof

Certificate: UL-BR 15.0393X

Standards: ABNT NBR IEC 60079-0:2008 + Corrigendum 1:2011, ABNT NBR IEC 60079-1:2009 +

Corrigendum 1:2011, ABNT NBR IEC 60079-26:2008 + Corrigendum 1: 2008

Markings: Ex db IIC T\* Ga/Gb, T6( $-40 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ ), T5/T4( $-40 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ ), IP66

#### Special Conditions for Safe Use (X):

1. The device contains a thin wall diaphragm less than 1mm thick that forms a boundary between zone 0 (process connection) and zone 1 (all other parts of the equipment). The model code and datasheet are to be consulted for details of the diaphragm material. Installation, maintenance, and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for maintenance shall be followed in detail to assure safety during its expected lifetime.

- 2. Flameproof joints are not intended for repair.
- Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.

**I2** INMETRO Intrinsic Safety

Certificate: UL-BR 15.0357X

Standards: ABNT NBR IEC 60079-0:2008 + Addendum

1:2011, ABNT NBR IEC 60079-11:2009

Markings: Ex ia IIC T4 Ga ( $-60 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ )

## Special Conditions for Safe Use (X):

1. If the equipment is fitted with the optional 90 V transient suppressor, it is incapable of withstanding the 500 V isolation from earth test and this must be taken into account during installation.

2. 2. The enclosure may be made of aluminium alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a Zone 0 environment, areas requiring EPL Ga.

Parameter	HART		Fieldbus	
	Input	RTD	Input	RTD
Voltage U <sub>i</sub>	30 V	30 V	30 V	30 V
Current I <sub>i</sub>	300 mA	2.31 mA	300 mA	18.24 mA
Power P <sub>i</sub>	1 W	17.32 W	1.3 mW	137 mW
Capacitance C <sub>i</sub>	14.8 nF	0	0	0.8 μF
Inductance L <sub>i</sub>	0	0	0	1.33 μF

## China

E3 China Flameproof and Dust Ignition-proof

Certificate: Rosemount 3051SMV: GYJ14.1039X [Mfg USA, China, Singapore] Rosemount 3051SFx: GYJ11.1466X [Mfg USA, China, Singapore]

Standards: Rosemount 3051SMV: GB3836.1-2010, GB3836.2-2010, GB3836.20-2010 Rosemount 3051SFx: GB3836.1-2010, GB3836.2-2010, GB3836.20-2010, GB12476.1-2013, GB12476.5-2013

Markings: Rosemount 3051SMV: Ex d IIC T6/T5 Ga/Gb Rosemount 3051SFx: Ex d IIC T4...T6 Ga/Gb; Ex tD A20  $T_A105 \,^{\circ}\text{C}\,T_{500}\,95 \,^{\circ}\text{C}$ ; IP66

## Special Conditions for Safe Use (X):

 Symbol "X" is used to denote specific conditions of use: For information on the dimensions of the flameproof joints the manufacturer shall be contacted. The relationship between T code and ambient temperature range for the Rosemount 3051SMV are as follows:

T code	Temperature range
T5	−50 ~ +65 °C
Т6	-50 ~ +80 °C

3. The relationship between T code and ambient temperature range for the Rosemount 3051SFx are as follows:

T code	Temperature range
T5	−60 ~ +75 °C
T4/T5	−60 ~ +80 °C

- The earth connection facility in the enclosure should be connected reliably.
- 5. During installation, use and maintenance of the product in explosive atmosphere, observe the warning "Do not open cover when circuit is alive". During installation, use, and maintenance in explosive dust atmosphere, observe the warning "Do not open when an explosive dust atmosphere is present".
- 6. During installation there should be no mixture harmful to the housing.
- During installation, use and maintenance in explosive dust atmosphere, product enclosure should be cleaned to avoid dust accumulation, but compressed air should not be used.
- 8. During installation in a hazardous location, cable glands and blanking plugs certified by state appointed inspection bodies with Ex d C Gb or Ex d IIC Gb DIP A20 [Flow Meters] IP66 type of protection should be used. Redundant cable entries should be blocked with blanking plugs.
- 9. End users are not permitted to change any components but to contact the manufacturer to avoid damage to the product.
- 10. Maintenance should be done when no explosive gas and dust atmosphere is present.
- During installation, use and maintenance of this product, observe following standards:

GB3836.13-1997 "Electrical apparatus for explosive gas atmospheres Part 13: Repair and overhaul for apparatus used in explosive gas atmospheres"

GB3836.15–2000 "Electrical apparatus for explosive gas atmospheres Part 15: Electrical installations in hazardous area (other than mines)"

GB3836.16–2006 "Electrical apparatus for explosive gas atmospheres Part 16: Inspection and maintenance of electrical installation (other than mines)"

GB50257-1996 Norse for construction and acceptance of electric device for explosion atmospheres and fire hazard electrical equipment installation engineering"

GB15577-2007 "Safety regulations for dust explosion prevention and protection"

GB12476.2-2010 "Electrical apparatus for use in the presence of combustible dust"

13 China Intrinsic Safety

Certificate: Rosemount 3051SMV: GYJ14.1040X [Mfg USA,

China, Singapore]

Rosemount 3051SFx: GYJ16.14 [Mfg USA,

China, Singapore]

Standards: Rosemount 3051SMV: GB3836.1-2010,

GB3836.4-2010, GB3836.20-2010 Rosemount 3051SFx: GB3836.1/4-2010, GB3836.20-2010, GB12476.1-2000

Markings: Rosemount 3051SMV: Ex ia IIC T4 Ga

Rosemount 3051SFx: Ex ia IIC T4 Ga, Ex tD A20

T<sub>A</sub>105 °C T<sub>500</sub>95 °C; IP66

## Special Conditions for Safe Use (X):

1. The enclosure may contain light metal, attention should be taken to avoid ignition hazard due to impact or friction.

- 2. The apparatus is not capable of withstanding the 500 V electrical strength test defined in Clause 6.3.12 of GB3836.4–2010.
- 3. Ambient temperature range: -60 ~ +70 °C
- 4. Intrinsically safe electric parameters:

Maximum input	Maximum input current:	Maximum input power:		m internal meter:
voltage: U <sub>i</sub> (V)	I <sub>i</sub> (mA)		C <sub>i</sub> (nF)	L <sub>i</sub> (uH)
30	300	1.0	14.8	0

Model	voltage:	Maximu m output current:	n output m output current: power:	exte	imum ernal neters:
	U <sub>i</sub> (V)	I <sub>i</sub> (mA)	P <sub>i</sub> (W)	C <sub>i</sub> (nF)	<b>L<sub>i</sub> (</b> μ <b>H)</b>
RTD	30	2.31	17.32	0	0
SuperModule	7.14	300	887	110	0

- 5. The cables between this product and associated apparatus should be shielded cables. The shield should be grounded reliably in non-hazardous area.
- 6. The product should be used with Ex certified associated apparatus to establish explosion protection system that can be used in explosive gas atmospheres. Wiring and terminals should comply with the instruction manual of the product and associated apparatus.

- End users are not permitted to change any components, contact the manufacturer to avoid damage to the product.
- 8. During installation in hazardous location, cable glands, conduit, and blanking plugs certified by state-appointed inspection bodies with DIP A20 IP66 type of protection should be used. Redundant cable entries should be blocked with blanking plugs.
- 9. During installation, use, and maintenance in explosive dust atmosphere, observe the warning "Do not open when an explosive dust atmosphere is present".
- 10. Maintenance should be done when no explosive dust atmosphere is present.
- 11. During installation, use and maintenance of this product, observe following standards:

GB3836.13-2013 "Electrical apparatus for explosive gas atmospheres Part 13: Repair and overhaul for apparatus used in explosive gas atmospheres"

GB3836.15–2000 "Electrical apparatus for explosive gas atmospheres Part 15: Electrical installations in hazardous area (other than mines)"

GB3836.16–2006 "Electrical apparatus for explosive gas atmospheres Part 16: Inspection and maintenance of electrical installation (other than mines)"

GB3836.18-2010 "Intrinsically Safe System"

GB50257-1996 "Code for construction and acceptance of electric device for explosion atmospheres and fire hazard electrical equipment installation engineering"

GB15577-2007 Safety regulations for dust explosion prevention and protection

GB12476.2-2010 "Electrical apparatus for use in the presence of combustible dust".

#### EAC - Belarus, Kazakhstan, Russia

EM Technical Regulation Customs Union (EAC) Flameproof

Certificate: RU C-US.AA87.B.00378 Markings: Ga/Gb Ex d IIC T6...T4 X

Ex tb IIIC T105 °C T $_{500}$ 95 °C Db X Ex ta IIIC T105 °C T $_{500}$ 95 °C Da X

IM Technical Regulation Customs Union (EAC) Intrinsic Safety

Certificate: RU C-US.AA87.B.00378 Markings: 0Ex ia IIC T4 Ga X

## **Japan**

**E4** Japan Flameproof

Certificate:TC19070, TC19071, TC19072, TC19073

Markings: Ex d IIC T6

## **Republic of Korea**

**EP** Republic of Korea Flameproof

Certificate: 12-KB4BO-0180X [Mfg USA],

11-KB4BO-0068X [Mfg Singapore]

Markings: Ex d IIC T6...T4

IP Republic of Korea Intrinsic Safety [HART only] Certificate: 10-KB4BO-0021X [Mfq USA, SMMC]

Markings: Ex ia IIC T4

## **Combinations**

**K1** Combination of E1, I1, N1, and ND

**K2** Combination of E2 and I2

**K5** Combination of E5 and I5

**K6** Combination of E6 and I6

K7 Combination of E7, I7, and N7

KA Combination of E1, I1, E6, and I6

KB Combination of E5, I5, E6, and I6

KC Combination of E1, I1, E5, and I5

**KD** Combination of E1, I1, E5, I5, E6, and I6

KM Combination of EM and IM

**KP** Combination of EP and IP

## **Additional Certifications**

**SBS** American Bureau of Shipping (ABS) Type Approval

Certificate: 00-HS145383

Intended Use: Measure gauge or absolute pressure of liquid, gas or vapor applications on ABS classed vessels, marine, and offshore installations.

[HART Only]

SBV Bureau Veritas (BV) Type Approval

Certificate: 31910 BV

Requirements: Bureau Veritas Rules for the Classification of

Steel Ships

Application: Class Notations: AUT-UMS, AUT-CCS,

AUT-PORT and AUT-IMS. [HART Only]

**SDN** Det Norske Veritas (DNV) Type Approval Certificate: A-14186

Intended Use: Det Norske Veritas' Rules for Classification of Ships, High Speed & Light Craft, and Det Norske

Veritas' Offshore Standards.

ventas Onshore Stand

[HART Only]

Application:

Location classes				
Туре	3051S			
Temperature	D			
Humidity	В			
Vibration	Α			
EMC	Α			
Enclosure	D/IP66/IP68			

**SLL** Lloyds Register (LR) Type Approval

Certificate: 11/60002

Application: Environmental categories ENV1, ENV2, ENV3,

and ENV5. [HART Only]

# Rosemount 3051S/3051SFx/3051S-ERS

Rev 1.18

## **European Directive Information**

A copy of the EU Declaration of Conformity can be found at the end of the Quick Start Guide. The most recent revision of the EU Declaration of Conformity can be found at Emerson.com/Rosemount.

## **Ordinary Location Certification**

As standard, the transmitter has been examined and tested to determine that the design meets the basic electrical, mechanical, and fire protection requirements by a nationally recognized test laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

## **Installing Equipment in North America**

The US National Electrical Code (NEC) and the Canadian Electrical Code (CEC) permit the use of Division marked equipment in Zones and Zone marked equipment in Divisions. The markings must be suitable for the area classification, gas, and temperature class. This information is clearly defined in the respective codes.

#### **USA**

**E5** FM Explosionproof (XP) and Dust-Ignitionproof (DIP)

Certificate: FM16US0090

Standards: FM Class 3600 - 2011, FM Class 3615 - 2006, FM Class 3616 - 2011, FM Class 3810 - 2005,

ANSI/NEMA 250 - 2003

Markings: XP CL I, DIV 1, GP B, C, D; DIP CL II, DIV 1, GP E, F, G; CL III; T5(-50 °C  $\leq$   $T_a$   $\leq$  +85 °C); Factory Sealed;

Type 4X

**I5** FM Intrinsic Safety (IS) and Nonincendive (NI)

Certificate: FM16US0089X

Standards: FM Class 3600 - 2011, FM Class 3610 - 2010, FM Class 3611 - 2004, FM Class 3810 - 2005, NEMA 250 - 2003

Markings: IS CL I, DIV 1, GP A, B, C, D; CL II, DIV 1, GP E, F, G; Class III; Class 1, Zone 0 AEx ia IIC T4; NI CL 1, DIV 2, GP A, B, C, D; T4(-50 °C  $\leq$  T<sub>a</sub>  $\leq$  +70 °C) [HART]; T4(-50 °C  $\leq$  T<sub>a</sub>  $\leq$  +60 °C) [Fieldbus]; when connected per Rosemount

drawing 03151-1006; Type 4X

## Special Condition for Safe Use (X):

 The Rosemount 3051S/3051S ERS Pressure Transmitter contains aluminum and is considered to constitute a potential risk of ignition by impact or friction. Care must be taken into account during installation and use to prevent impact and friction.

#### Note

Transmitters marked with NI CL 1, DIV 2 can be installed in Division 2 locations using general Division 2 wiring methods or Nonincendive Field Wiring (NIFW). See Drawing 03151-1006.

#### **IE** FM FISCO

Certificate: FM16US0089X

Standards: FM Class 3600 - 2011, FM Class 3610 - 2010, FM Class 3611 - 2004, FM Class 3810 - 2005, NEMA

250 - 2003

Markings: IS CL I, DIV 1, GP A, B, C, D;

 $(-50 \,^{\circ}\text{C} \le T_a \le +60 \,^{\circ}\text{C})$ ; when connected per Rosemount drawing 03151-1006; Type 4X

## Special Condition for Safe Use (X):

 The Rosemount 3051S/3051S ERS Pressure Transmitter contains aluminum and is considered to constitute a potential risk of ignition by impact or friction. Care must be taken into account during installation and use to prevent impact and friction.

### Canada

**E6** CSA Explosionproof, Dust-Ignitionproof, and Division 2

Certificate: 1143113

Standards: CAN/CSA C22.2 No. 0-10, CSA Std C22.2 No. 25-1966, CSA Std C22.2 No. 30-M1986, CAN/CSA C22.2 No. 94-M91, CSA Std C22.2 No. 142-M1987, CSA Std C22.2 No. 213-M1987, ANSI/ISA 12.27.01-2003, CSA Std C22.2 No. 60529:05

Markings: Explosionproof Class I, Division 1, Groups B, C, D;
Dust-Ignitionproof Class II, Division 1, Groups E,
F, G; Class III; suitable for Class I, Zone 1, Group
IIB+H2, T5; suitable for Class I, Division 2,
Groups A, B, C, D; suitable for Class I, Zone 2,
Group IIC, T5; when connected per Rosemount
drawing 03151-1013; Type 4X

**16** CSA Intrinsically Safe

Certificate: 1143113

Standards: CAN/CSA C22.2 No. 0-10, CSA Std C22.2 No. 30-M1986, CAN/CSA C22.2 No. 94-M91, CSA Std C22.2 No. 142-M1987, CSA Std C22.2 No. 157-92, ANSI/ISA 12.27.01-2003, CSA Std C22.2 No. 60529:05

Markings: Intrinsically Safe Class I, Division 1; Groups A, B, C, D; suitable for Class 1, Zone 0, IIC, T3C; when connected per Rosemount drawing 03151-1016 [3051S] 03151-1313 [ERS]; Type 4X

#### IF CSA FISCO

Certificate: 1143113

Standards: CAN/CSA C22.2 No. 0-10, CSA Std C22.2 No. 30-M1986, CAN/CSA C22.2 No. 94-M91, CSA Std C22.2 No. 142-M1987, CSA Std C22.2 No. 157-92, ANSI/ISA 12.27.01-2003, CSA Std

C22.2 No. 60529:05

Markings: FISCO Intrinsically Safe Class I, Division 1; Groups A, B, C, D; suitable for Class 1, Zone 0, IIC, T3C;

when connected per Rosemount drawing 03151-1016 [3051S] 03151-1313 [ERS]; Type

4X

## **Europe**

**E1** ATEX Flameproof

Certificate: KEMA 00ATEX2143X

Standards: EN 60079-0:2012+A11:2013, EN

60079-1:2014, EN 60079-26:2015

T6(-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +70 °C), T5/T4(-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +80 °C)

Temperature class	Process temperature
T6	−60 to +70 °C
T5	−60 to +80 °C
T4	−60 to +120 °C

## Special Conditions for Safe Use (X):

- 1. This device contains a thin wall diaphragm less than 1 mm thickness that forms a boundary between Category 1 (process connection) and Category 2(all other parts of the equipment). The model code and datasheet are to be consulted for details of the diaphragm material. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
- 2. Flameproof joints are not intended for repair.
- Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.
- 4. Appropriate cable, glands and plugs need to be suitable for a temperature of 5 °C greater than maximum specified temperature for location where installed.

## I1 ATEX Intrinsic Safety

Certificate: BAS01ATEX1303X

Standards: EN 60079-0: 2012+A11:2013,

EN 60079-11: 2012

Markings: Ex II 1 G Ex ia IIC T4 Ga, T4( $-60 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ )

Rosemount model	Ui	l <sub>i</sub>	Pi	C <sub>i</sub>	L <sub>i</sub>
SuperModule	30 V	300 mA	1.0 W	30 nF	0
3051SA; 3051SFA; 3051SALC	30 V	300 mA	1.0 W	12 nF	0
3051SF; 3051SFF	30 V	300 mA	1.3 W	0	0
3051SAM7, M8, or M9; 3051SFAM7, M8, or M9; 3051SALC M7, M8, or M9	30 V	300 mA	1.0 W	12 nF	60 μΗ
3051SAL or 3051SAM	30 V	300 mA	1.0 W	12 nF	33 μΗ
3051SALM7, M8, or M9 3051SAMM7, M8, or M9	30 V	300 mA	1.0 W	12 nF	93 μΗ
RTD Option for 3051SF	5 V	500 mA	0.63 W	N/A	N/A

#### Special Conditions for Safe Use (X):

- 1. The Rosemount 3051S Transmitters fitted with transient protection are not capable of withstanding the 500 V test as defined in Clause 6.3.13 of EN 60079-11:2012. This must be taken into account during installation.
- 2. The terminal pins of the Rosemount 3051S SuperModule must be provided with a degree of protection of at least IP20 in accordance with IEC/EN 60529.
- 3. The Rosemount 3051S enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a zone 0 area.

#### IA ATEX FISCO

Certificate: BAS01ATEX1303X

Standards: EN 60079-0: 2012+A11:2013,

EN 60079-11: 2012

Markings: Ex II 1 G Ex ia IIC T4 Ga, T4( $-60 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ )

Parameter	FISCO
Voltage U <sub>i</sub>	17.5 V
Current I <sub>i</sub>	380 mA
Power P <sub>i</sub>	5.32 W
Capacitance C <sub>i</sub>	0
Inductance L <sub>i</sub>	0

## Special Conditions for Safe Use (X):

 The Rosemount 3051S Transmitters fitted with transient protection are not capable of withstanding the 500 V test as defined in Clause 6.3.13 of EN 60079-11:2012. This must be taken into account during installation.

- 2. The terminal pins of the Rosemount 3051S SuperModule must be provided with a degree of protection of at least IP20 in accordance with IEC/EN 60529.
- 3. The Rosemount 3051S enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a zone 0 area.

**ND** ATEX Dust

Certificate:BAS01ATEX1374X

Standards: EN 60079-0: 2012+A11:2013, EN 60079-31:

2009

Markings: Ex II 1 D Ex ta IIIC T105 °C T<sub>500</sub> 95 °C Da,

 $(-20 \, ^{\circ}\text{C} \le \text{T}_{\text{a}} \le +85 \, ^{\circ}\text{C}), \, \text{V}_{\text{max}} = 42.4 \, \text{V}$ 

## Special Conditions for Safe Use (X):

- 1. Cable entries must be used which maintain the ingress protection of the enclosure to at least IP66.
- 2. Unused cable entries must be filled with suitable blanking plugs which maintain the ingress protection of the enclosure to at least IP66.
- 3. Cable entries and blanking plugs must be suitable for the ambient temperature range of the apparatus and capable of withstanding a 7 | impact test.
- 4. The SuperModule(s) must be securely screwed in place to maintain the ingress protection of the enclosure(s).

N1 ATEX Type n

Certificate: BAS01ATEX3304X

Standards: EN 60079-0: 2012+A11:2013,

EN 60079-15: 2010

Markings: Ex II 3 G Ex nA IIC T5 Gc, ( $-40 \,^{\circ}\text{C} \le T_a \le +85 \,^{\circ}\text{C}$ ),

 $V_{\text{max}} = 45 \text{ V}$ 

#### Special Condition for Safe Use (X):

 The equipment is not capable of withstanding the 500 V insulation test required by clause 6.5 of EN 60079-15:2010. This must be taken into account when installing the equipment.

#### Note

RTD Assembly is not included with the Rosemount 3051SFx Type n Approval.

#### International

**E7** IECEx Flameproof and Dust

Certificate: IECEx KEM 08.0010X (Flameproof)
Standards: IEC 60079-0:2011. IEC 60079-1:2014. IEC

60079-26:2014

Markings: Ex db IIC T6...T4 Ga/Gb,  $T6(-60 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}),$  $T5/T4(-60 \,^{\circ}\text{C} \le T_a \le +80 \,^{\circ}\text{C})$ 

Temperature class	Process temperature
T6	−60 to +70 °C
T5	−60 to +80 °C
T4	−60 to +120 °C

## Special Conditions for Safe Use (X):

- 1. This device contains a thin wall diaphragm less than 1 mm thickness that forms a boundary between EPL Ga (process connection) and EPL Gb (all other parts of the equipment). The model code and datasheet are to be consulted for details of the diaphragm material. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
- 2. Flameproof joints are not intended for repair.
- Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.
- 4. Appropriate cable, glands and plugs need to be suitable for a temperature of 5 °C greater than maximum specified temperature for location where installed.

Certificate: IECEx BAS 09.0014X (Dust)

Standards: IEC 60079-0:2011, IEC 60079-31:2008

Markings: Ex ta IIIC T105 °C  $T_{500}$  95 °C Da, (-20 °C  $\leq T_a \leq$  +85 °C),  $V_{max}$  = 42.4 V

## Special Conditions for Safe Use (X):

- 1. Cable entries must be used which maintain the ingress protection of the enclosure to at least IP66.
- 2. Unused cable entries must be filled with suitable blanking plugs which maintain the ingress protection of the enclosure to at least IP66.
- 3. Cable entries and blanking plugs must be suitable for the ambient temperature range of the apparatus and capable of withstanding a 7 | impact test.
- The Rosemount 3051S- SuperModule must be securely screwed in place to maintain the ingress protection of the enclosure.
- 17 IECEx Intrinsic Safety

Certificate: IECEx BAS 04.0017X

Standards: IEC 60079-0: 2011, IEC 60079-11: 2011 Markings: Ex ia IIC T4 Ga, T4(-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +70 °C)

Rosemount model	Ui	l <sub>i</sub>	Pi	C <sub>i</sub>	Li
SuperModule	30 V	300 mA	1.0 W	30 nF	0
3051SA; 3051SFA; 3051SALC	30 V	300 mA	1.0 W	12 nF	0
3051SF; 3051SFF	30 V	300 mA	1.3 W	0	0
3051SAM7, M8, or M9; 3051SFAM7, M8, or M9; 3051SALC M7, M8, or M9	30 V	300 mA	1.0 W	12 nF	60 μΗ
3051SAL or 3051SAM	30 V	300 mA	1.0 W	12 nF	33 μΗ
3051SALM7, M8, or M9 3051SAMM7, M8, or M9	30 V	300 mA	1.0 W	12 nF	93 μΗ
RTD Option for 3051SF	5 V	500 mA	0.63 W	N/A	N/A

#### Special Conditions for Safe Use (X):

- The Rosemount 3051S Transmitters fitted with transient protection are not capable of withstanding the 500 V test as defined in Clause 6.3.13 of IEC 60079-11:2011. This must be taken into account during installation.
- 2. The terminal pins of the Rosemount 3051S SuperModule must be provided with a degree of protection of at least IP20 in accordance with IEC/EN 60529.
- 3. The Rosemount 3051S enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a zone 0 area.
- IF IECEX Intrinsic Safety Group I Mining (I7 with Special A0259)

Certificate: IECEx TSA 14.0019X

Standards: IEC 60079-0:2011, IEC 60079-11:2011

Markings: Ex ia I Ma ( $-60 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ )

Rosemount model	Ui	l <sub>i</sub>	Pi	C <sub>i</sub>	Li
SuperModule	30 V	300 mA	1.0 W	30 nF	0
3051SA; 3051SFA; 3051SALC	30 V	300 mA	1.0 W	12 nF	0
3051SF; 3051SFF	30 V	300 mA	1.3 W	0	0

Rosemount model	Ui	l <sub>i</sub>	Pi	C <sub>i</sub>	L <sub>i</sub>
3051SAM7, M8, or M9; 3051SFAM7 , M8, or M9; 3051SALC M7, M8, or M9	30 V	300 mA	1.0 W	12 nF	60 μΗ
3051SAL or 3051SAM	30 V	300 mA	1.0 W	12 nF	33 μΗ
3051SALM7, M8, or M9 3051SAMM7, M8, or M9	30 V	300 mA	1.0 W	12 nF	93 μΗ
RTD Option for 3051SF	5 V	500 mA	0.63 W	N/A	N/A

## Special Conditions for Safe Use (X):

- If the apparatus is fitted with an optional 90 V transient suppressor, it is not capable of withstanding the 500 V insulation test required by clause 6.6.13 of IEC60079-11. This must be taken into account when installing the apparatus.
- 2. It is a condition of safe use that the following parameters shall be taken into account during installation.
- 3. It is a condition of manufacture that only the apparatus fitted with housings, junction boxes, covers and sensor module housings made out of SST are used in Group I applications.
- IG IECEx FISCO

Certificate: IECEx BAS 04.0017X

Standards: IEC 60079-0:2011, IEC 60079-11:2011 Markings: Ex ia IIC T4 Ga, T4(-60 °C  $\leq$  T $_a$   $\leq$  +70 °C)

Parameter	FISCO
Voltage U <sub>i</sub>	17.5 V
Current I <sub>i</sub>	380 mA
Power P <sub>i</sub>	5.32 W
Capacitance C <sub>i</sub>	0
Inductance L <sub>i</sub>	0

### Special Conditions for Safe Use (X):

- The Rosemount 3051S Transmitters fitted with transient protection are not capable of withstanding the 500 V test as defined in Clause 6.3.13 of IEC 60079-11:2011. This must be taken into account during installation.
- 2. The terminal pins of the Rosemount 3051S SuperModule must be provided with a degree of protection of at least IP20 in accordance with IEC/EN 60529.

3. The Rosemount 3051S enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a zone 0 area.

**IG** IECEx Intrinsic Safety – Group I – Mining

(IG with Special A0259)

Certificate: IECEx TSA 04.0019X

Standards: IEC 60079-0:2011, IEC 60079-11:2011

Markings: FISCO FIELD DEVICE Ex ia I Ma,

 $(-60 \,{}^{\circ}\text{C} \le T_a \le +70 \,{}^{\circ}\text{C})$ 

Parameter	FISCO
Voltage U <sub>i</sub>	17.5 V
Current I <sub>i</sub>	380 mA
Power P <sub>i</sub>	5.32 W
Capacitance C <sub>i</sub>	0
Inductance L <sub>i</sub>	0

## Special Conditions for Safe Use (X):

- If the apparatus is fitted with optional 90 V transient suppressor, it is not capable of withstanding the 500 V insulation test required by Clause 6.3.13 of IEC60079-11. This must be taken into account when installing the apparatus.
- 2. It is a condition of safe use that the above input parameters shall be taken into account during installation.
- 3. It is a condition of manufacture that only the apparatus fitted with housing, covers and sensor module housing made out of SST are used in Group I applications.

N7 IECEx Type n

Certificate: IECEx BAS 04.0018X

Standards: IEC 60079-0: 2011, IEC 60079-15: 2010 Markings: Ex nA IIC T5 Gc,  $(-40 \,^{\circ}\text{C} \le T_a \le +85 \,^{\circ}\text{C})$ 

#### Special Condition for Safe Use (X):

 The equipment is not capable of withstanding the 500 V insulation test required by clause 6.5 of EN 60079-15:2010. This must be taken into account when installing the equipment.

#### **Brazil**

**E2** INMETRO Flameproof

Certificate: UL-BR15.0393X

Standards: ABNT NBR IEC 60079-0:2008 + Corrigendum

1:2011, ABNT NBR IEC 60079-1:2009 + Corrigendum 1:2011, ABNT NBR IEC 60079-26:2008 + Corrigendum 1: 2008

Markings: Ex db IIC T\* Ga/Gb, T6( $-60 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ ),

 $T5/T4(-60 \text{ °C} \le T_a \le +80 \text{ °C})$ , IP66

### Special Conditions for Safe Use (X):

- 1. The device contains a thin wall diaphragm less than 1mm thick that forms a boundary between zone 0 (process connection) and zone 1 (all other parts of the equipment). The model code and datasheet are to be consulted for details of the diaphragm material. Installation, maintenance, and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for maintenance shall be followed in detail to assure safety during its expected lifetime.
- 2. Flameproof joints are not intended for repair.
- Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.

12/IB INMETRO Intrinsic Safety/FISCO

Certificate: UL-BR 15.0392X

Standards: ABNT NBR IEC 60079-0:2013, ABNT NBR IEC 60079-11:2013

Markings: Ex ia IIC T4 Ga ( $-60 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ ), IP66

## Special Condition for Safe Use (X):

- 1. The surface resistivity of the antenna is greater than 1 G $\Omega$ . To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or a dry cloth.
- 2. The Model 701PBKKF Power Module may be replaced in a hazardous area. The Power Module has a surface resistivity greater than 1  $G\Omega$  and must be properly installed in the wireless device enclosure. Care must be taken during transportation to and from the point of installation to prevent electrostatic charge build-up.
- 3. The Rosemount 3051S enclosure may be made of aluminium alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in areas that requires EPL Ga.

Rosemount model	Ui	l <sub>i</sub>	Pi	C <sub>i</sub>	Li
SuperModule	30 V	300 mA	1.0 W	30 nF	0
3051SA; 3051SFA; 3051SALC	30 V	300 mA	1.0 W	11.4 nF	0
3051SF; 3051SFF	30 V	300 mA	1.3 W	0	0
3051SFIB; 3051SFFIB	17.5V	380 mA	5.32 W	0	0
3051SAM7, M8, or M9; 3051SFAM7, M8, or M9; 3051SALC M7, M8, or M9	30 V	300 mA	1.0 W	12 nF	60 μΗ

Rosemount model	Ui	l <sub>i</sub>	Pi	C <sub>i</sub>	L <sub>i</sub>
3051SAL or 3051SAM	30 V	300 mA	1.0 W	12 nF	33 μΗ
3051SALM7, M8, or M9	30 V	300 mA	1.0 W	12 nF	93 μΗ
RTD Option for 3051SF	5 V	500 mA	0.63 W	N/A	N/A

#### China

E3 China Flameproof and Dust Ignition-proof

Certificate: Rosemount 3051S: GYJ16.1249X Rosemount 3051SFx: GYJ16.1466X Rosemount 3051S-ERS: GJY15.1406X

Standards: Rosemount 3051S: GB3836.1-2010, GB3836.2-2010, GB3836.20-2010, GB12476.1-2013, GB12476.5-2013 Rosemount 3051SFx: GB3836.1-2010, GB3836.2-2010, GB3836.20-2010, GB12476.1-2013, GB 12476.5-2013 Rosemount 3051S-ERS: GB3836.1-2010, GB3836.2-2010, GB3836.20-2010

Markings: Rosemount 3051S: Ex d IIC T6...T4; Ex tD A20

T105 °C T<sub>500</sub> 95 °C; IP66

Rosemount 3051SFx: Ex d IIC T5/T6 Ga/Gb; DIP

A20 T<sub>A</sub> 105 °C; IP66

Rosemount 3051S-ERS: Ex d IIC T4~ T6 Ga/Gb

#### Special Conditions for Safe Use (X):

- Only the pressure transmitters, consisting of Rosemount 3051SC Series, 3051ST Series, 3051SL Series and 300S Series, are certified.
- 2. Flameproof joints are not intended for repair.
- 3. The ambient temperature range for the Rosemount 3051S and 3051SFx in a dust environment is  $-20 \,^{\circ}\text{C} \le T_a \le 95 \,^{\circ}\text{C}$ .
- 4. The relation between temperature class and maximum temperature of process medium is as follows:

Temperature class	Temperature of process medium
T5	≤95°C
T4	≤130°C
T3	≤190°C

Temperature class	Ambient temperature (°C)	Process temperature (°C)
T6	$-60 ^{\circ}\text{C} \le T_a \le +70 ^{\circ}\text{C}$	$-60 ^{\circ}\text{C} \le \text{T}_{\text{a}} \le +70 ^{\circ}\text{C}$
T5	$-60 ^{\circ}\text{C} \le T_a \le +80 ^{\circ}\text{C}$	$-60 ^{\circ}\text{C} \le \text{T}_{\text{a}} \le +80 ^{\circ}\text{C}$
T4	$-60 ^{\circ}\text{C} \le T_a \le +80 ^{\circ}\text{C}$	-60 °C ≤ T <sub>a</sub> ≤ +120 °C

- The earth connection facility in the enclosure should be connected reliably.
- During installation, use and maintenance of transmitter, observe the warning "Don't open the cover when the circuit is alive."
- 7. During installation, there should be no mixture harm to flameproof housing.
- 8. Cable entry, certified by NEPSI with type of protection Ex d IIC in accordance with GB3836.1-2000 and GB3836.2-2000, should be applied when installation in hazardous location. 5 full threads should be in engagement when the cable entry is assembled onto the transmitter. When pressure transmitter is used in the presence of combustible dust, the ingress of protection of the cable entry should be IP66.
- The diameter of cable should observe the instruction manual of cable entry. The compressing nut should be fastened. The aging of seal ring should be changed in time.
- 10. Maintenance should be done in non-hazardous location.
- 11. End users are not permitted to change any components inside.

12. When installation, use and maintenance of transmitter, observe following standards:

GB3836.13-2013 "Electrical apparatus for explosive gas atmospheres Part 13: Repair and overhaul for apparatus used in explosive gas atmospheres"

GB3836.15-2000 "Electrical apparatus for explosive gas atmospheres Part 15: Electrical installations in hazardous area (other than mines)"

GB3836.16-2006 "Electrical apparatus for explosive gas atmospheres Part 16: Inspection and maintenance of electrical installation (other than mines)"

GB50257-2014 "Code for construction and acceptance of electric device for explosion atmospheres and fire hazard electrical equipment installation engineering"

GB15577-20071995 "Safe regulation for explosive dust atmospheres"

GB12476.2-2010 "Electrical apparatus for use in the presence of combustible dust - Part 1-2: Electrical apparatus protected by enclosures and surface temperature limitation - Selection, installation and maintenance"

**I3** China Intrinsic Safety

Certificate: Rosemount 3051S: GYJ16.1250X[Mfg USA,

China, Singapore]
Rosemount 3051SFx: GYJ16.1465X [Mfg USA,

China, Singapore]
Rosemount 3051S-ERS: GY|16.1248X [Mfq USA,

China, Singapore

Standards: Rosemount 3051S: GB3836.1-2010, GB3836.4-2010, GB3836.20-2010 Rosemount 3051SFx: GB3836.1/4-2010,

GB3836.20-2010, GB12476.1-2013,

GB12476.5-2013

Rosemount 3051S-ERS: GB3836.1-2010, GB3836.4-2010, GB3836.20-2010

Markings: Rosemount 3051S, 3051SFx: Ex ia IIC T4 Ga Rosemount 3051S-ERS: Ex ia IIC T4

## Special Conditions for Safe Use (X):

 Symbol "X" is used to denote specific conditions of use: For output code A and F: This apparatus is not capable of withstanding the 500V r.m.s. insulation test required by Clause 6.4.12 of GB3836.4-2000.

2. The ambient temperature range is:

Output code	Ambient temperature
А	-50 °C ≤ T <sub>a</sub> ≤+70 °C
F	-50 °C ≤ T <sub>a</sub> ≤+60 °C

3. Intrinsically safe parameters:

Output code	Housing code	Display code	Maximum input voltage:	Maximum input current:	Maximum input power:	inte	Maximum internal parameters:	
			U <sub>i</sub> (V)	I <sub>i</sub> (mA)	P <sub>i</sub> (W)	C <sub>i</sub> (nF)	L <sub>i</sub> (uH)	
Α	=00	1	30	300	1	38	0	
Α	≠00	1	30	300	1	11.4	2.4	
А	≠00	M7/ M8/ M9	30	300	1	0	58.2	
F	≠00	1	30	300	1.3	0	0	
F FISCO	≠00	1	17.5	500	5.5	0	0	

- 4. The product should be used with Ex-certified associated apparatus to establish explosion protection system that can be used in explosive gas atmospheres. Wiring and terminals should comply with the instruction manual of the product and associated apparatus.
- 5. The cable between this product and associated apparatus should be shielded cables (the cables must have insulated shield). The shield has to be grounded reliably in non-hazardous area.
- 6. The product complies to the requirements for FISCO field devices specified in IEC60079-27:2008. For the connection of an intrinsically safe circuit in accordance FISCO model, FISCO parameters of this product are as above.
- 7. End users are not permitted to change any components inside, but to settle the problem in conjunction with manufacturer to avoid damage to the product.

8. When installation, use and maintenance of this product, observe the following standards:

GB3836.13-2013 "Electrical apparatus for explosive gas atmospheres Part 13: Repair and overhaul for apparatus used in explosive gas atmospheres"

GB3836.15-2000 "Electrical apparatus for explosive gas atmospheres Part 15: Electrical installations in hazardous area (other than mines)"

GB3836.16-2006 "Electrical apparatus for explosive gas atmospheres Part 16: Inspection and maintenance of electrical installation (other than mines)"

GB3836.18-2010 "Intrinsically Safe System"

GB50257-20141996 "Code for construction and acceptance of electric device for explosion atmospheres and fire hazard electrical equipment installation engineering"

**N3** China Type n

Certificate: Rosemount 3051S: GY|17.1354X

Rosemount 3051SFX: GYJ17.1355X

Markings: Ex nA IIC T5 Gc

## Special Conditions for Safe Use (X):

- 1. The ambient temperature range is:  $-40 \,^{\circ}\text{C} \le T_a \le 85 \,^{\circ}\text{C}$ .
- 2. Maximum input voltage: 45 V
- 3. Cable glands, conduit or blanking plugs, certified by NEPSI with Ex e or Ex n protection type and IP66 degree of protection provided by enclosure, should be used on external connections and redundant cable entries.
- 4. Maintenance should be done in non-hazardous location.
- End users are not permitted to change any components inside, but to settle the problem in conjunction with manufacturer to avoid damage to the product.
- When installation, use and maintenance of this product, observe following standards:

GB3836.13-2013 "Electrical apparatus for explosive gas atmospheres Part 13: Repair and overhaul for apparatus used in explosive gas atmospheres"

GB3836.15-2000 "Electrical apparatus for explosive gas atmospheres Part 15: Electrical installations in hazardous area (other than mines)"

GB3836.16-2006 "Electrical apparatus for explosive gas atmospheres Part 16: Inspection and maintenance of electrical installation (other than mines)"

GB50257-1996 "Code for construction and acceptance of electric device for explosion atmospheres and fire hazard electrical equipment installation engineering".

#### EAC - Belarus, Kazakhstan, Russia

EM Technical Regulation Customs Union (EAC) Flameproof

Certificate: RU C-US.AA87.B.00378 Markings: Ga/Gb Ex d IIC T6...T4 X

Ex tb IIIC T105 °C T $_{500}$ 95 °C Db X Ex ta IIIC T105 °C T $_{500}$ 95 °C Da X

**IM** Technical Regulation Customs Union (EAC) Intrinsic Safety

Certificate: RU C-US.AA87.B.00094 Markings: 0Ex ia IIC T4 Ga X

## Japan

**E4** Japan Flameproof

Certificate: TC15682, TC15683, TC15684, TC15685, TC15686, TC15687, TC15688, TC15689, TC15690, TC17099, TC17100, TC17101,

TC17102, TC18876

Rosemount 3051ERS: TC20215, TC20216, TC20217, TC20218, TC20219, TC20220,

TC20221

Markings: Ex d IIC T6

## **Republic of Korea**

**EP** Republic of Korea Flameproof

Certificate: 12-KB4BO-0180X [Mfg USA],

11-KB4BO-0068X [Mfg Singapore]

Markings: Ex d IIC T6...T4

**IP** Republic of Korea Intrinsic Safety

Certificate: 12-KB4BO-0202X [HART - Mfq USA],

12-KB4BO-0204X [Fieldbus – Mfg USA], 12-KB4BO-0203X [HART – Mfg Singapore], 13-KB4BO-0296X [Fieldbus – Mfg Singapore]

Markings: Exd IIC T4

## **Combinations**

**K1** Combination of E1, I1, N1, and ND

**K2** Combination of E2 and I2

**K5** Combination of E5 and I5

K6 Combination of E6 and I6

**K7** Combination of E7, I7, and N7

KA Combination of E1, I1, E6, and I6

KB Combination of E5, I5, E6, and I6

KC Combination of E1, I1, E5, and I5

**KD** Combination of E1, I1, E5, I5, E6, and I6

KG Combination of IA, IE, IF, and IG

**KM** Combination of EM and IM

**KP** Combination of EP and IP

## Additional certifications

SBS American Bureau of Shipping (ABS) Type Approval

Certificate: 00-HS145383-6-PDA

Intended use: Measure gauge or absolute pressure of liquid, gas or vapor applications on ABS classed

vessels, marine, and offshore installations.

SBV Bureau Veritas (BV) Type Approval

Certificate: 31910 BV

Requirements: Bureau Veritas Rules for the Classification of

Steel Ships

Application: Class Notations: AUT-UMS, AUT-CCS, AUT-PORT and AUT-IMS

**SDN** Det Norske Veritas (DNV) Type Approval

Certificate: A-14186

Intended Use: Det Norske Veritas' Rules for Classification of

Ships, High Speed and Light Craft, and Det

Norske Veritas' Offshore Standards

Application:

Location classes			
Туре	Rosemount 3051S		
Temperature	D		
Humidity B			
Vibration	A		
EMC	A		
Enclosure	D/IP66/IP68		

**SLL** Lloyds Register (LR) Type Approval

Certificate: 11/60002

Application: Environmental categories ENV1, ENV2, ENV3,

and ENV5

**D3** Custody Transfer – Measurement Canada Accuracy

Approval [Rosemount 3051S only] Certificate: AG-0501. AV-2380C

## Rosemount 3051S and 3051SMV Wireless

**Rev 2.4** 

## **European Directive Information**

A copy of the EC Declaration of Conformity can be found at the end of the Quick Start Guide. The most recent revision of the EC Declaration of Conformity can be found at Emerson.com/Rosemount.

## **Telecommunication Compliance**

All wireless devices require certification to ensure that they adhere to regulations regarding the use of the RF spectrum. Nearly every country requires this type of product certification. Emerson is working with governmental agencies around the world to supply fully compliant products and remove the risk of violating country directives or laws governing wireless device usage.

## FCC and IC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: This device may not cause harmful interference. This device must accept any interference received, including interference that may cause undesired operation. This device must be installed to ensure a minimum antenna separation distance of 20 cm from all persons.

## **Ordinary Location Certification**

As standard, the transmitter has been examined and tested to determine that the design meets the basic electrical, mechanical, and fire protection requirements by a nationally recognized test laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

## **Installing Equipment in North America**

The US National Electrical Code (NEC) and the Canadian Electrical Code (CEC) permit the use of Division marked equipment in Zones and Zone marked equipment in Divisions. The markings must be suitable for the area classification, gas, and temperature class. This information is clearly defined in the respective codes.

#### **USA**

USA Intrinsically Safe (IS), Nonincendive (NI), and Dust-Ignitionproof (DIP)

Certificate: FM 3027705

Standards: FM Class 3600 – 2011, FM Class 3610 – 2010,

FM Class 3611 - 2004, FM Class 3810 - 2005,

NEMA 250 - 2003

Markings: IS CL I, DIV 1, GP A, B, C, D; CL II, DIV 1, GP E, F, G;

CL III T4; CL 1, Zone 0 AEx ia IIC T4; NI CL 1, DIV 2, GP A, B, C, D T4; DIP CL II, DIV 1, GP E, F, G; CL

III, T5; T4( $-50 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ )/

T5(-50 °C  $\leq$  T<sub>a</sub>  $\leq$  +85 °C); when connected per Rosemount drawing 03151-1000; Type 4X

## Special Conditions for Safe Use (X):

- The Rosemount 3051S and SMV Wireless Transmitters shall only be used with the 701PBKKF Rosemount Smartpower Battery Pack (P/N 00753-9220-0001), Computational Systems Inc Battery Pack (P/N MHM-89004) or alternatively the Perpetuum Intelligent Power Module Vibration Harvester (P/N IPM71008).
- The transmitter may contain more than 10% aluminum and is considered a potential risk of ignition by impact or friction. Care must be taken into account during installation and use to prevent impact and friction.
- The surface resistivity of the antenna is greater than 1GΩ.
   To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or a dry cloth.

#### Canada

**I6** Canada Intrinsically Safe

Certificate: CSA 1143113

Standards:CAN/CSA C22.2 No. 0-10, CSA Std C22.2 No. 30-M1986, CAN/CSA C22.2 No. 94-M91, CSA Std C22.2 No. 142-M1987, CSA Std C22.2 No. 157-92, ANSI/ISA 12.27.01-2003, CSA Std

C22.2 No. 60529:05

Markings: Intrinsically Safe Class I, Division 1; suitable for Class 1, Zone 0, IIC, T3C; when connected per Rosemount drawing 03151-1010; Type 4X

## **Europe**

**I1** ATEX Intrinsic Safety

Certificate: Baseefa13ATEX0127X

Standards: EN 60079-0:2012, EN 60079-11:2012

Markings: B II 1 G Ex ia IIC T4 Ga, T4(-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +70 °C)

## Special Conditions for Safe Use (X):

- 1. The Rosemount 3051S Wireless and 3051SMV Wireless enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a zone 0 area.
- 2. The surface resistivity of the antenna is greater than 1 G $\Omega$ . To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or dry cloth.

#### International

17 IECEx Intrinsic Safety

Certificate: IECEx BAS 13.0068X

Standards: IEC 60079-0:2011, IEC 60079-11:2011 Markings: Ex ia IIC T4 Ga, T4( $-60 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ )

#### Special Conditions for Safe Use (X):

- The Rosemount 3051S Wireless and 3051SMV Wireless enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a zone 0 area.
- 2. The surface resistivity of the antenna is greater than  $1G\Omega$ . To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or dry cloth.

#### **Brazil**

INMETRO Intrinsic Safety

Certificate: UL-BR 14.0760X

Standards: ABNT NBR IEC60079-0:2008 + Errata 1:2011,

ABNT NBR IEC60079-11:2009

Markings: Ex ia IIC T4 Ga, T4( $-60 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ )

## Special Condition for Safe Use (X):

1. See certificate.

#### China

I3 China Intrinsic Safety

Certificate: Rosemount model

3051S Wireless: GYJ161250X 3051SFX: GYJ16.1465X [Flow Meters]

Standards: GB3836.1-2010, GB3836.4-2010,

GB3836.20-2010

Markings: Ex ia IIC T4 Ga, T4(-60 ~ 70 °C)

#### Special Condition for Safe Use (X):

1. See appropriate certificate.

## Note

Not currently available on the Rosemount 3051S MultiVariable Wireless Transmitter.

## Japan

14 TIIS Intrinsically Safe

Certificate: TC18649, TC18650, TC18657 Markings: Ex ia IIC T4, T4(-20 ~ 60 °C)

#### Note

Not currently available on the Rosemount 3051S MultiVariable Wireless Transmitter.

## EAC - Belarus, Kazakhstan, Russia

**IM** EAC Intrinsic Safety

Certificate: TC RU C-US.AA87.B.00378

Markings: 0Ex ia IIC T4 Ga X ( $-60 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ )

## Special Condition for Safe Use (X):

1. See certificate for special conditions.

## **Republic of Korea**

**IP** Korea Intrinsic Safety

Certificates: 12-KB4BO-0202X, 12-KB4BO-0203X Markings: Ex ia IIC T4,  $(-60 \, ^{\circ}\text{C} \le \text{T}_a \le +70 \, ^{\circ}\text{C})$ 

## Special Condition for Safe Use (X):

1. See certificate for special conditions.

#### Note

Not currently available on the Rosemount 3051S MultiVariable Wireless Transmitter.

#### Combination

**KQ** Combination of I1, I5, and I6

## **Rosemount 3051CF Flow Meter Series**

## Rosemount 3051CFA Annubar Flow Meter



The Rosemount 3051CFA Annubar Flow Meter utilizes the T-shaped sensor design that delivers best in class accuracy and performance while meeting the needs of diverse process applications, whether it is high accuracy for precision control or high strength for severe flow applications. Main capabilities include:

- Up to 1.8 percent of flow rate accuracy
- Available in 2- to 96-in. (50 to 2400 mm) line sizes
- Fully assembled and leak tested for out-of-the-box installation
- Power advisory can proactively detect degraded electrical loop integrity issues (option code DA0)
- LOI with straightforward menus and built-in configuration buttons (option code M4)

#### **Additional information:**

Specifications: page 83 Certifications: page 91

Dimensional drawings: page 207

See "Specifications" on page 83 and options for more details on each configuration.

Table 7. Rosemount 3051CFA Annubar Flow Meter Ordering Information

	additional delivery read times				
Model	Nodel Product description				
3051CFA	Rosemount Annubar Flow Meter				
Measureme	nt type				
D	Differential Pressure	*			
Fluid type					
L	Liquid	*			
G	Gas	*			
S	Steam	*			
Line size					
020	2-in. (50 mm)	*			
025	2 <sup>1</sup> / <sub>2</sub> -in. (63.5 mm)	*			
030	3-in. (80 mm)	*			
035	3 <sup>1</sup> / <sub>2</sub> -in. (89 mm)	*			
040	4-in. (100 mm)	*			
050	5-in. (125 mm)	*			
060	6-in. (150 mm)	*			
070	7-in. (175 mm)	*			

Table 7. Rosemount 3051CFA Annubar Flow Meter Ordering Information

to additionic	ar derivery read time.	
080	8-in. (200 mm)	*
100	10-in. (250 mm)	*
120	12-in. (300 mm)	*
140	14-in. (350 mm)	
160	16-in. (400 mm)	
180	18-in. (450 mm)	
200	20-in. (500 mm)	
240	24-in. (600 mm)	
300	30-in. (750 mm)	
360	36-in. (900 mm)	
420	42-in. (1066 mm)	
480	48-in. (1210 mm)	
600	60-in. (1520 mm)	
720	72-in. (1820 mm)	
780	78-in (1950 mm)	
840	84-in. (2100 mm)	
900	90-in. (2250 mm)	
960	96-in (2400 mm)	
Pipe I.D. (see "Pip	range be I.D. range code for Rosemount Annubar Flow Meters and Primary Elements" on page	146)
С	Range C from the pipe I.D. table	*
D	Range D from the pipe I.D. table	*
Α	Range A from the pipe I.D. table	
В	Range B from the pipe I.D. table	
E	Range E from the pipe I.D. table	
Z	Non-standard pipe I.D. range or line sizes greater than 12-in.	
Pipe mat	terial/mounting assembly material	
С	CS (A105)	*
S	316 SST	*
0	No mounting (customer supplied)	*
G	Chrome-moly grade F-11	
N	Chrome-moly grade F-22	
J	Chrome-moly grade F-91	
Piping o	rientation	
Н	Horizontal piping	*
_	Tionzontal piping	^
D	Vertical piping with downwards flow	*

## Table 7. Rosemount 3051CFA Annubar Flow Meter Ordering Information

Rosemo	unt Annubar type	
Р	Pak-lok	*
F	Flanged with opposite side support	*
L	Flange-lok	
G	Gear-drive flo-tap	
М	Manual flo-tap	
Sensor r	naterial	
S	316 SST	*
Н	Alloy C-276	
Sensor s	ize	
1	Sensor size 1 — line sizes 2- to 8-in. (50 to 200 mm)	*
2	Sensor size 2 — line sizes 6- to 96-in. (150 to 2400 mm)	*
3	Sensor size 3 — line sizes greater than 12-in. (300 mm)	
Mountir	ng type	
T1	Compression or threaded connection	*
A1	ANSI Class 150 RF	*
A3	ANSI Class 300 RF	*
A6	ANSI Class 600 RF	*
D1	DN PN 16 flange	*
D3	DN PN 40 flange	*
D6	DN PN 100 flange	*
A9 <sup>(1)</sup>	ANSI Class 900 RF	
AF <sup>(1)</sup>	ANSI Class 1500 RF	
AT <sup>(1)</sup>	ANSI Class 2500 RF	
R1	ANSI Class 150 flange RTJ	
R3	ANSI Class 300 flange RTJ	
R6	ANSI Class 600 flange RTJ	
R9 <sup>(1)</sup>	ANSI Class 900 flange RTJ	
RF <sup>(1)</sup>	ANSI Class 1500 flange RTJ	
RT <sup>(1)</sup>	ANSI Class 2500 flange RTJ	
Opposit	e side support or packing gland	
0	No opposite side support or packing gland (required for pak-lok and flange-lok models)	*
	Opposite side support – required for flanged models	
С	NPT threaded opposite support assembly – extended tip	*
D	Welded opposite support assembly – extended tip	*

Table 7. Rosemount 3051CFA Annubar Flow Meter Ordering Information

	Packing gland – required for flo-tap models			
	Packing gland material	Rod material	Packing material	
J <sup>(2)</sup>	SST packing gland/cage nipple	CS	PTFE	
K <sup>(2)</sup>	SST packing gland/cage nipple	SST	PTFE	
L(2)	SST packing gland/cage nipple	CS	Graphite	
N <sup>(2)</sup>	SST packing gland/cage nipple	SST	Graphite	
R	Alloy C-276 packing gland/cage nipple	SST	Graphite	
Isolatio	n valve for flo-tap models			
0	Not applicable or customer supplied			*
1	Gate valve, CS			$\top$
2	Gate valve, SST			$\top$
5	Ball valve, CS			$\top$
6	Ball valve, SST			
Temper	rature measurement			
T	Integral RTD – not available with flanged model g	reater than Class 600		*
0	No temperature sensor			
R	Remote thermowell and RTD			
Transmi	itter connection platform			
3	Direct-mount, Integral 3-valve manifold– not ava	ilable with flanged model gre	eater than Class 600	*
5	Direct -mount, 5-valve manifold – not available with flanged model greater than Class 600			*
7	Remote-mount NPT connections (1/2 NPT)			*
6	Direct-mount, high temperature 5-valve manifolo	Direct-mount, high temperature 5-valve manifold – not available with flanged model greater than Class 600		
8	Remote-mount SW connections (1/2-in.)			
Differer	ntial pressure range			
1	0 to 25 in H <sub>2</sub> O (0 to 62,16 mbar)			*
2	0 to 250 in H <sub>2</sub> O (0 to 621,60 mbar)			*
3	0 to 1000 in H <sub>2</sub> O (0 to 2,48 mbar)			*
Transm	itter output			
A <sup>(3)</sup>	4–20 mA with digital signal based on HART Proto	ocol		*
F	FOUNDATION Fieldbus Protocol			*
W <sup>(4)</sup>	PROFIBUS PA Protocol			*
X <sup>(5)</sup>	Wireless (requires wireless options and engineers	ed polymer housing)		*
M <sup>(6)</sup>	Low-power 1–5 Vdc with digital signal based on I	HART Protocol		

## Table 7. Rosemount 3051CFA Annubar Flow Meter Ordering Information

The starred offerings ( $\star$ ) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Transmi	tter housing material	Conduit entry size	
A	Aluminum	1/2-14 NPT	*
В	Aluminum	M20 x 1.5	*
J	SST	¹/2–14 NPT	*
K	SST	M20 x 1.5	*
P <sup>(7)</sup>	Engineered polymer	No conduit entries	*
D <sup>(8)</sup>	Aluminum	G <sup>1</sup> / <sub>2</sub>	
M <sup>(8)</sup>	SST	G <sup>1</sup> / <sub>2</sub>	
Transmi	tter performance class		
1	1.8% flow rate accuracy, 8:1 flow turndo	own, 10-yr. stability	*

## Wireless options (requires wireless output code X and engineered polymer housing code P)

Wireless transmit rate, operating frequency, and protocol			
WA3	WA3 User configurable transmit Rate, 2.4GHz WirelessHART Protocol		
Antenna aı	Antenna and SmartPower		
WP5	Internal antenna, compatible with Green Power Module (I.S. Power Module sold separately)	*	

## **Options** (include with selected model number)

Extended	product warranty	
WR3	3-year limited warranty	*
WR5	5-year limited warranty	*
Pressure	testing <sup>(9)</sup>	
P1	Hydrostatic testing with certificate	
PX	Extended hydrostatic testing	
Special cl	eaning	
P2	Cleaning for special services	
PA	Cleaning per ASTM G93 level D (section 11.4)	
Material	testing	
V1	Dye penetrant exam	
Material	examination	
V2	Radiographic examination	
Flow cali	oration	
W1	Flow calibration (average K)	
Special in	spection	
QC1	Visual and dimensional inspection with certificate	*
QC7	Inspection and performance certificate	*

## Table 7. Rosemount 3051CFA Annubar Flow Meter Ordering Information

	•	
Surface	finish	
RL	Surface finish for low pipe Reynolds number in gas and steam	*
RH	Surface finish for high pipe Reynolds number in liquid	*
Materia	l traceability certification <sup>(10)</sup>	
Q8	Material Traceability Certification per EN 10474:2004 3.1	*
Positive	material identification	·
Q76	PMI for primary elements	
Code co	onformance <sup>(11)</sup>	·
J2	ANSI/ASME B31.1	
J3	ANSI/ASME B31.3	
Materia	lls conformance <sup>(12)</sup>	
 J5	NACE MR-0175/ISO 15156	
Country	/ certification	
J6	European Pressure Directive (PED)	*
J1	Canadian Registration	
Installed	d in flanged pipe spool section	
H3	Class 150 flanged connection with Rosemount standard length and schedule	
H4	Class 300 flanged connection with Rosemount standard length and schedule	
H5	Class 600 flanged connection with Rosemount standard length and schedule	
Instrum	ent connections for remote mount options	
G2	Needle valves, SST	*
G6	OS&Y gate valve, SST	*
G1	Needle valves, CS	
G3	Needle valves, alloy C-276	
G5	OS&Y gate valve, CS	
G7	OS&Y gate valve, alloy C-276	
Special	shipment	
Y1	Mounting hardware shipped separately	*
Special	dimensions	
VM	Variable mounting	
VT	Variable tip	
VS	Variable length spool section	
Plantwe	eb control functionality <sup>(13)</sup>	
A01	FOUNDATION Fieldbus Control Function Block Suite	*

Table 7. Rosemount 3051CFA Annubar Flow Meter Ordering Information

Plantweb	diagnostic functionality	
DA0 <sup>(14)</sup>	Power Advisory HART Diagnostic	*
D01 <sup>(13)</sup>	FOUNDATION Fieldbus Diagnostics Suite	*
Product c	ertifications	
E8	ATEX Flameproof, Dust	*
I1 <sup>(15)</sup>	ATEX Intrinsic Safety and Dust	*
IA	ATEX FISCO Intrinsic Safety	*
N1	ATEX Type n and Dust	*
K8	ATEX Flameproof, Intrinsic Safety, Type n, Dust (combination of E8, I1 and N1)	*
E5	FM Explosion-proof, Dust Ignition-proof	*
I5 <sup>(16)</sup>	FM Intrinsically Safe, Nonincendive	*
IE	FM FISCO Intrinsically Safe	*
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, and Division 2 (combination of E5 and I5)	*
C6	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, and Division 2	*
I6 <sup>(7)</sup>	CSA Intrinsically Safe	*
K6	CSA and ATEX Explosion-proof, Intrinsically Safe, and Division 2 (combination of C6, E8, and I1)	*
E7	IECEx Flameproof, Dust Ignition-proof	*
17	IECEx Intrinsic Safety	*
N7	IECEx Type n	*
K7	IECEx Flameproof, Dust Ignition-proof, Intrinsic Safety, and Type n (combination of I7, N7 and E7)	*
E2	INMETRO Flameproof	*
12	INMETRO Intrinsic Safety	*
IB	INMETRO FISCO intrinsically safe	*
K2	INMETRO Flameproof, Intrinsic Safety	*
E3	China Flameproof	*
13	China Intrinsic Safety	*
KB	FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, and Division 2 (combination of K5 and C6)	*
KD	CSA, FM, and ATEX Explosion-proof, Intrinsically Safe (combination of K5, C6, I1, and E8)	*
EM	Technical Regulations Custom Union (EAC) Flameproof	*
IM	Technical Regulations Custom Union (EAC) Intrinsic Safety	*
KM	Technical Regulations Custom Union (EAC) Flameproof, Intrinsic Safety (combination of EM and IM)	*
Sensor fill	fluid and O-ring options	
L1 <sup>(17)</sup>	Inert sensor fill fluid (silicone fill fluid is standard)	*
L2	Graphite-filled (PTFE) O-ring	*
LA <sup>(17)</sup>	Inert sensor fill fluid and graphite-filled (PTFE) O-ring	*

## Table 7. Rosemount 3051CFA Annubar Flow Meter Ordering Information

Shipboa	rd approvals <sup>(17)</sup>	
SBS	American Bureau of Shipping	*
SLL <sup>(18)</sup>	Lloyds Register (LR)	
Display a	nd interface options	
M4 <sup>(19)</sup>	LCD display with LOI	*
M5	LCD display	*
Transmit	ter calibration certification	
Q4	Calibration Certificate for Transmitter	*
Quality o	ertification for safety <sup>(14)</sup>	
QS	Prior-use certificate of FMEDA data	*
QT	Safety certified to IEC 61508 with certificate of FMEDA	*
Transien	t protection <sup>(17)(20)</sup>	
T1	Transient terminal block	*
Manifold	for remote mount option	
F2	3-valve manifold, SST	*
F6	5-valve manifold, SST	*
F1	3-valve manifold, CS	
F3	3-valve manifold, alloy C-276	
F5	5-valve manifold, CS	
F7	5-valve manifold, alloy C-276	
Lower po	ower output	
C2	0.8–3.2 Vdc output with digital signal based on HART Protocol (available with output code M only)	
Alarm le	vels <sup>(14)</sup>	
C4	NAMUR alarm and saturation levels, high alarm	*
CN	NAMUR alarm and saturation levels, low alarm	*
CR	Custom alarm and saturation signal levels, high alarm	*
CS	Custom alarm and saturation signal levels, low alarm	*
CT	Rosemount Standard low alarm	*
Configur	ation buttons	
D4 <sup>(14)</sup>	Analog zero and span	*
DZ <sup>(21)</sup>	Digital zero trim	*
Ground	crew <sup>(17)(22)</sup>	
V5	External ground screw assembly	*

#### Table 7. Rosemount 3051CFA Annubar Flow Meter Ordering Information

HART Revision configuration (requires HART output code A) <sup>(3)</sup>				
HR5	Configured for HART Revision 5	*		
HR7	Configured for HART Revision 7	*		
Typical model number: 3051CFA D L 060 D C H P S 2 T1 0 0 0 3 2 A A 1				

- 1. Available in remote mount applications only.
- 2. The cage nipple is constructed of 304 SST.
- 3. Option HR5 configures the HART output to HART Revision 5. Option HR7 configures the HART output to HART Revision 7. The device can be field configured to HART Revision 5 or 7 if desired. HART Revision 5 is the default HART output.
- 4. For local addressing and configuration, M4 LOI is required.
- 5. Requires wireless options and engineered polymer housing. Available approvals are FM Intrinsically Safe, (option code I5), CSA Intrinsically Safe (option code I6), ATEX Intrinsic Safety (option code I1), and IECEx Intrinsic Safety (option code I7).
- 6. Only available with C6, E2, E5, I5, K5, KB, and E8 approval. Not available with GE, GM, SBS, DA0, M4, D4, DZ, QT, HR5, HR7, CR, CS, or CT.
- 7. Only available with wireless (output code X).
- 8. Transmitter conduit entry will be \(^1/2\) NPT and a \(^1/2\) NPT to \(G^1/2\) thread adapter will be provided. Not available with Product certifications options E8, K8, E5, K5, C6, K6, E7, K7, E2, K2, E3, KB, or KD.
- 9. Applies to assembled flow meter only, mounting not tested.
- 10. Instrument connections for remote mount options and isolation valves for flo-tap models are not included in the material traceability certification.
- 11. Not available with transmitter connection platform 6.
- 12. Materials of construction comply with metallurgical requirements within NACE MR0175/ISO for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.
- 13. Only valid with FOUNDATION Fieldbus (output code F).
- 14. Only available with 4–20 mA HART (output code A).
- 15. Dust approval not applicable to output code X. See "Rosemount 3051 Wireless" on page 98 for wireless approvals
- 16. Nonincendive certification not provided with wireless output option code (X).
- 17. Not available with wireless (output code X).
- 18. Only available with product certifications E7, E8, I1, I7, IA, K7, K8, KD, N1, and N7.
- 19. Not available with FOUNDATION Fieldbus (output code F) or wireless (output code X) or low power (output code M).
- 20. The T1 option is not needed with FISCO Product Certifications, transient protection is included with the FISCO Product Certification codes IA, IB, and IE.
- 21. Only available with 4–20 mA HART (output code A) and Wireless (output code X).
- 22. The V5 option is not needed with the T1 option; external ground screw assembly is included with the T1 option.



## **Rosemount 3051CFC Compact Flow Meter ordering information**

• Compact conditioning flow meters reduce straight piping requirements to 2D upstream and 2D downstream from most disturbances.

• Simple installation of compact flow meters between any existing raised-face flanges

## Table 8. Rosemount 3051CFC Compact Flow Meter Ordering Information

Model	Product description	
3051CFC	Compact flow meter	
Measureme	ent type	
D	Differential Pressure	*
Primary ele	ment technology	
A	Rosemount Annubar Averaging Pitot Tube	*
С	Conditioning orifice plate	*
Р	Orifice plate	*
Material typ	e e	
S	316 SST	*
Line size		
005 <sup>(1)</sup>	<sup>1</sup> / <sub>2</sub> -in. (15 mm)	*
010 <sup>(1)</sup>	1-in. (25 mm)	*
015 <sup>(1)</sup>	1 <sup>1</sup> / <sub>2</sub> -in. (40 mm)	*
020	2-in. (50 mm)	*
030	3-in. (80 mm)	*
040	4-in. (100 mm)	*
060	6-in. (150 mm)	*
080	8-in. (200 mm)	*
100(2)(3)	10-in. (250 mm)	*
120(2)(3)	12-in. (300 mm)	*
Primary ele	ment type	
N000	Rosemount Annubar sensor size 1	*
N040	0.40 beta ratio	*
N050	0.50 beta ratio	*
N065 <sup>(4)</sup>	0.65 beta ratio	*
Temperatur	e measurement	
0	No temperature sensor	*
R	Remote thermowell and RTD	
T <sup>(5)</sup>	Integral temperature	

## Table 8. Rosemount 3051CFC Compact Flow Meter Ordering Information

The starred offerings ( $\star$ ) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Transmit	ter connection platform		
3	Direct-mount, integral 3-valve manifold		*
7	Remote-mount, NPT connections		*
Different	tial pressure range		'
1	0 to 25 inH <sub>2</sub> O (0 to 62,16 mbar)		*
2	0 to 250 inH <sub>2</sub> O (0 to 621,60 mbar)		*
3	0 to 1000 inH <sub>2</sub> O (0 to 2,48 bar)		*
Transmit	ter output		
A <sup>(6)</sup>	4–20 mA with digital signal based on HART	Protocol	*
F	FOUNDATION Fieldbus Protocol		*
W <sup>(7)</sup>	PROFIBUS PA Protocol		*
X(8)	Wireless (requires wireless options and engineered polymer housing)		*
M <sup>(9)</sup>	Low-power 1–5 Vdc with Digital Signal Bas	ed on HART Protocol	
Transmit	ter housing material	Conduit entry size	
Α	Aluminum	¹/2–14 NPT	*
В	Aluminum	M20 x 1.5	*
J	SST	1/2–14 NPT	*
K	SST	M20 x 1.5	*
P <sup>(10)</sup>	Engineered polymer	No conduit entries	*
D <sup>(11)</sup>	Aluminum	G <sup>1</sup> / <sub>2</sub>	
M <sup>(11)</sup>	SST	G <sup>1</sup> / <sub>2</sub>	
Transmit	ter performance class		
1	Up to ±1.65 percent flow rate accuracy, 8:1	flow turndown, 10-year stability	*

## Wireless options (requires wireless output code X and engineered polymer housing code P)

Wireless transmit rate, operating frequency, and protocol				
WA3	User configurable transmit rate, 2.4GHz WirelessHART Protocol			
Antenna a	Antenna and SmartPower			
WP5	Internal antenna, compatible with Green Power Module (I.S. Power Module sold separately)	*		

## **Options** (include with selected model number)

Extended product warranty			
WR3	3-year limited warranty	*	
WR5	5-year limited warranty	*	

## Table 8. Rosemount 3051CFC Compact Flow Meter Ordering Information

Installatio	n accessories	
AB	ANSI alignment ring (Class 150) (only required for 10- and 12-in. [250 and 300 mm] line sizes)	*
AC	ANSI alignment ring (Class 300) (only required for 10- and 12-in. [250 and 300 mm] line sizes)	*
AD	ANSI alignment ring (Class 600) (only required for 10- and 12-in. [250 and 300 mm] line sizes)	*
DG	DIN alignment ring (PN16)	*
DH	DIN alignment ring (PN40)	*
DJ	DIN alignment ring (PN100)	*
JB	JIS alignment ring (10K)	
JR	JIS alignment ring (20K)	
JS	JIS alignment ring (40K)	
Remote a	lapters	
FE	Flange adapters 316 SST (1/2 NPT)	*
High temp	perature application	
HT	Graphite valve packing (T <sub>max</sub> = 850 °F)	$\Box$
Flow calib	ration <sup>(12)</sup>	
WC	Flow calibration, 3 pt, conditioning orifice option C (all pipe schedules)	
WD <sup>(13)</sup>	Flow calibration, 10 pt, conditioning option C (all schedules), Rosemount Annubar option A (schedule 40)	
Pressure t	esting	
P1	Hydrostatic testing with certificate	
Special cle	raning <sup>(14)</sup>	
P2	Cleaning for special services	$\neg \neg$
PA	Cleaning per ASTM G93 level D (section 11.4)	
Special in	spection	
QC1	Visual and dimensional inspection with certificate	*
QC7	Inspection and performance certificate	*
Transmitt	er calibration certification	
Q4	Calibration certificate for transmitter	*
Quality ce	rtification for safety <sup>(15)</sup>	
QS	Prior-use certificate of FMEDA data	*
QT	Safety certified to IEC 61508 with certificate of FMEDA	*
Material t	raceability certification	·
Q8	Material Traceability Certification per EN 10204:2004 3.1	*
Positive m	naterial identification	
Q76	PMI for primary elements	
	1 , ,	

## Table 8. Rosemount 3051CFC Compact Flow Meter Ordering Information

to additional del	•	
Code confor	mance	
J2	ANSI/ASME B31.1	
J3	ANSI/ASME B31.3	
J4	ANSI/ASME B31.8	
Materials co	nformance <sup>(16)</sup>	
J5	NACE MR-0175/ISO 15156	
Country cer	tification	
J1	Canadian registration	
Product cert	tifications	
E8	ATEX Flameproof, Dust	*
I1 <sup>(17)</sup>	ATEX Intrinsic Safety and Dust	*
IA	ATEX FISCO Intrinsic Safety; for FOUNDATION Fieldbus or PROFIBUS PA protocols only	*
N1	ATEX Type n and Dust	*
K8	ATEX Flameproof, Intrinsic Safety, Type n, Dust (combination of E8, I1 and N1)	*
E5	FM Explosion-proof, Dust Ignition-proof	*
I5 <sup>(18)</sup>	FM Intrinsically Safe, Nonincendive	*
IE	FM FISCO Intrinsically Safe; for FOUNDATION Fieldbus or PROFIBUS PA protocols only	
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, and Division 2 (combination of E5 and I5)	
C6	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, and Division 2	
I6 <sup>(10)</sup>	CSA Intrinsically Safe	*
K6	CSA and ATEX Explosion-proof, Intrinsically Safe, and Division 2 (combination of C6, E8, and I1)	
E7	IECEx Flameproof, Dust Ignition-proof	*
17	IECEx Intrinsic Safety	
N7	IECEx Type n	*
K7	IECEx Flameproof, Dust Ignition-proof, Intrinsic Safety, and Type n (combination of I7, N7 and E7)	*
E2	INMETRO Flameproof	*
12	INMETRO Intrinsic Safety	*
IB	INMETRO FISCO intrinsically safe; for FOUNDATION Fieldbus or PROFIBUS PA protocols only	*
K2	INMETRO Flameproof, Intrinsic Safety	*
E3	China Flameproof ★	
13	China Intrinsic Safety ★	
КВ	FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, and Division 2 (combination of K5 and C6)	*
KD	CSA, FM, and ATEX Explosion-proof, Intrinsically Safe (combination of K5, C6, I1, and E8)	*
EM	Technical Regulations Custom Union (EAC) Flameproof	*
IM	Technical Regulations Custom Union (EAC) Intrinsic Safety ★	
KM	Technical Regulations Custom Union (EAC) Flameproof, Intrinsic Safety (combination of EM and IM)	*

## Table 8. Rosemount 3051CFC Compact Flow Meter Ordering Information

Sensor fill	fluid and O-ring options		
L1 <sup>(19)</sup>	Inert sensor fill fluid		
L2	Graphite-filled (PTFE) O-ring		
LA <sup>(19)</sup>	Inert sensor fill fluid and graphite-filled (PTFE) O-ring	*	
Shipboard	l approvals <sup>(19)</sup>		
SBS	American Bureau of Shipping	*	
SLL <sup>(20)</sup>	Lloyds Register (LR)		
Display ar	nd interface options	·	
M4 <sup>(21)</sup>	LCD display with LOI	*	
M5	LCD display	*	
Transient	protection <sup>(19)(22)</sup>	,	
T1	Transient terminal block	*	
Manifold	for remote mount option	,	
F2	3-valve manifold, SST	*	
F6	5-valve manifold, SST	*	
Plantweb	control functionality <sup>(23)</sup>		
A01	FOUNDATION Fieldbus Control Function Block Suite	*	
Plantweb	diagnostic functionality		
DA0 <sup>(14)</sup>	Power Advisory HART Diagnostic	*	
D01 <sup>(23)</sup>	FOUNDATION Fieldbus Diagnostic Suite	*	
Low powe	er output	·	
C2	0.8–3.2 Vdc output with Digital Signal Based on HART Protocol (available with output code M only)		
Alarm lev	els <sup>(15)</sup>		
C4	NAMUR alarm and saturation levels, high alarm	*	
CN	NAMUR alarm and saturation levels, low alarm	*	
CR	Custom alarm and saturation signal levels, high alarm	*	
CS	Custom alarm and saturation signal levels, low alarm		
СТ	Rosemount Standard low alarm		
Ground so	rew <sup>(19)(24)</sup>		
V5	External ground screw assembly		
Configura	tion buttons	·	
D4 <sup>(15)</sup>	Analog zero and span	*	
DZ <sup>(25)</sup>	Digital zero trim	*	
	•		

#### Table 8. Rosemount 3051CFC Compact Flow Meter Ordering Information

HART Revision Configuration (requires HART output code A) <sup>(6)</sup>		
HR5	Configured for HART Revision 5	
HR7	Configured for HART Revision 7 ★	
Typical model number: 3051CFC D C S 060 N 065 0 3 2 A A 1 WC E5 M5		

- 1. Available with Primary Element Technology P only.
- 2. 10- and 12-in. (250 and 300 mm) line sizes not available with Primary Element Technology A.
- 3. For the 10- and 12-in. (250 and 300 mm) line size, the alignment ring must be ordered (installation accessories).
- 4. For 2-in. (50 mm) line sizes the primary element type is 0.6 for Primary Element Technology code C.
- 5. Available with Primary Element Technology A only.
- 6. Option HR5 configures the HART output to HART Revision 5. Option HR7 configures the HART output to HART Revision 7. The device can be field configured to HART Revision 5 or 7 if desired. HART Revision 5 is the default HART output.
- 7. For local addressing and configuration, M4 LOI is required.
- 8. Requires wireless options and engineered polymer housing. Available approvals are FM Intrinsically Safe, (option code I5), CSA Intrinsically Safe (option code I6), ATEX Intrinsic Safety (option code I1), and IECEx Intrinsic Safety (option code I7).
- 9. Only available with C6, E2, E5, I5, K5, KB, and E8 approval. Not available with GE, GM, SBS, DAO, M4, D4, DZ, QT, HR5, HR7, CR, CS, or CT.
- 10. Only available with wireless (output code X).
- 11. Transmitter conduit entry will be \(^1/2\) NPT and a \(^1/2\) NPT to \(G^1/2\) thread adapter will be provided. Not available with Product certifications options E8, K8, E5, K5, C6, K6, E7, K7, E2, K2, E3, KB, or KD.
- 12. Available with Primary Element Technology C only.
- 13. For Rosemount Annubar option A, consult factory for pipe schedules other than schedule 40.
- 14. Available with Primary Element Technology C or P only.
- 15. Only available with HART 4–20 mA (output code A).
- 16. Materials of Construction comply with metallurgical requirements within NACE MR0175/ISO for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.
- 17. Dust approval not applicable to output code X. See "Rosemount 3051 Wireless" on page 98 for wireless approvals.
- 18. Nonincendive certification not provided with wireless (option code X).
- 19. Not available with wireless (output code X).
- 20. Only available with Product certifications E7, E8, I1, I7, IA, K7, K8, KD, N1, and N7
- $21. \quad \text{Not available with output code } F \text{FOUNDATION Fieldbus or wireless (output code X) or low power (output code M)}.$
- 22. The T1 option is not needed with FISCO Product Certifications, transient protection is included with the FISCO Product Certification code IA, IB, and IE.
- 23. Only valid with FOUNDATION Fieldbus (output code F).
- 24. The V5 option is not needed with the T1 option; external ground screw assembly is included with the T1 option.
- 25. Only available with 4–20 mA HART (output code A) and Wireless (output code X).

## **Rosemount 3051CFP Integral Orifice Flow Meter ordering information**



- Precision honed pipe section for increased accuracy in small line sizes
- Self-centering plate design prevents alignment errors that magnify measurement inaccuracies in small line sizes

## Table 9. Rosemount 3051CFP Integral Orifice Flow Meter Ordering Information

Model	Product description			
3051CFP	Integral orifice flow meter			
Measurem	ent type			
D	Differential Pressure			
Body mate	rial and type			
F	316 SST, enhanced support body	*		
Line size				
005	¹/2-in. (15 mm)	*		
010	1-in. (25 mm)	*		
015	1 <sup>1</sup> / <sub>2</sub> -in. (40 mm)	*		
Process co	nnection			
T1	NPT female body (not available with thermowell and RTD)	*		
S1 <sup>(1)</sup>	Socket weld body (not available with thermowell and RTD)	*		
P1	Pipe ends: NPT threaded			
P2	Pipe ends: Beveled			
D1	Pipe ends: Flanged, DIN PN16, slip-on			
D2	Pipe ends: Flanged, DIN PN40, slip-on			
D3	Pipe ends: Flanged, DIN PN100, slip-on	*		
W1	Pipe ends: Flanged, RF, ANSI Class 150, weld-neck	*		
W3	Pipe ends: Flanged, RF, ANSI Class 300, weld-neck	*		
W6	Pipe ends: Flanged, RF, ANSI Class 600, weld-neck	*		
W9	Pipe ends: Flanged, RF, ANSI Class 900, weld-neck	*		
A1	Pipe ends: Flanged, RF, ANSI Class 150, slip-on			
A3	Pipe ends: Flanged, RF, ANSI Class 300, slip-on			
A6	Pipe ends: Flanged, RF, ANSI Class 600, slip-on			
R1	Pipe ends: Flanged, RTJ, ANSI Class 150, slip-on			
R3	Pipe ends: Flanged, RTJ, ANSI Class 300, slip-on			
R6	Pipe ends: Flanged, RTJ, ANSI Class 600, slip-on			
R9	Pipe ends: Flanged, RTJ, ANSI Class 900, weld-neck			
P9	Special process connection			

Table 9. Rosemount 3051CFP Integral Orifice Flow Meter Ordering Information

Orifice pla	ate material		
S	316/316L SST	*	
Н	Alloy C-276		
M	Alloy 400		
Bore size	option	·	
0066	0.066-in. (1.68 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	*	
0109	0.109-in. (2.77 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	*	
0160	0.160-in. (4.06 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	*	
0196	0.196-in. (4.98 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	*	
0260	0.260-in. (6.60 mm) for 1/2-in. pipe	*	
0340	0.340-in. (8.64 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	*	
0150	0.150-in. (3.81 mm) for 1-in. pipe	*	
0250	0.250-in. (6.35 mm) for 1-in. pipe	*	
0345	0.345-in. (8.76 mm) for 1-in. pipe	*	
0500	0.500-in. (12.70 mm) for 1-in. pipe	*	
0630	0.630-in. (16.00 mm) for 1-in. pipe	*	
0800	0.800-in. (20.32 mm) for 1-in. pipe	*	
0295	0.295-in. (7.49 mm) for 11/2-in. pipe	*	
0376	0.376-in. (9.55 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	*	
0512	0.512-in. (13.00 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	*	
0748	0.748-in. (19.00 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	*	
1022	1.022-in. (25.96 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	*	
1184	1.184-in. (30.07 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	*	
0010	0.010-in. (0.25 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe		
0014	0.014-in. (0.36 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe		
0020	0.020-in. (0.51 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe		
0034	0.034-in. (0.86 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe		
XXXX	Special bore size		
Transmitt	ter connection platform		
D3	Direct-mount, 3-valve manifold, SST	*	
D5	Direct-mount, 5-valve manifold, SST		
R3	Remote-mount, 3-valve manifold, SST		
R5	Remote-mount, 5-valve manifold, SST		
D4	Direct-mount, 3-valve manifold, alloy C-276	Direct-mount, 3-valve manifold, alloy C-276	
D6	Direct-mount, 5-valve manifold, alloy C-276		
R4	Remote-mount, 3-valve manifold, alloy C-276	Remote-mount, 3-valve manifold, alloy C-276	
R6	Remote-mount, 5-valve manifold, alloy C-276	Remote-mount, 5-valve manifold, alloy C-276	
Emorcon c	om/Posomount	77	

## Table 9. Rosemount 3051CFP Integral Orifice Flow Meter Ordering Information

The starred offerings ( $\star$ ) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Different	tial pressure ranges		
1	0 to 25 inH <sub>2</sub> O (0 to 62,16 mbar)	0 to 25 inH <sub>2</sub> O (0 to 62,16 mbar)	
2	0 to 250 inH <sub>2</sub> O (0 to 621,60 mbar)		*
3	0 to 1000 inH <sub>2</sub> O (0 to 2,48 bar)		*
Transmit	ter output		
A <sup>(2)</sup>	4–20 mA with digital signal based on HAR	T Protocol	*
F	FOUNDATION Fieldbus Protocol		*
W <sup>(3)</sup>	PROFIBUS PA Protocol		*
X <sup>(4)</sup>	Wireless		*
M <sup>(5)</sup>	Low-power 1–5 Vdc with digital signal bas	Low-power 1–5 Vdc with digital signal based on HART Protocol	
Transmit	ter housing material	Conduit entry size	
Α	Aluminum	1/2-14 NPT	*
В	Aluminum	M20 x 1.5	*
J	SST	¹/2-14 NPT	*
K	SST	M20 x 1.5	*
P <sup>(6)</sup>	Engineered polymer	No conduit entries	*
D <sup>(7)</sup>	Aluminum	G1/2	
M <sup>(7)</sup>	SST	G1/2	
Transmit	ter performance class	·	
1	up to ±1.8 percent flow rate accuracy, 8:1 flow turndown,10-year stability ★		

## Wireless options (requires wireless output code X and engineered polymer housing code P)

Wireless transmit rate, operating frequency, and protocol		
WA3	User configurable transmit rate, 2.4GHz WirelessHART Protocol ★	
Antenna and SmartPower		
WP5	Internal antenna, compatible with Green Power Module (I.S. Power Module sold separately)	*

## **Options** (include with selected model number)

Extended product warranty		
WR3	3-year limited warranty	*
WR5	5-year limited warranty	*
Transmitter body/bolt material		
GT	High temperature (850 °F/454 °C)	
Temperature sensor <sup>(8)</sup>		
RT	Thermowell and RTD	

## Table 9. Rosemount 3051CFP Integral Orifice Flow Meter Ordering Information

to additional	delivery lead time.			
Optional o	connection			
G1	DIN 19213 transmitter connection			
Pressure t	Pressure testing <sup>(9)(10)</sup>			
P1	Hydrostatic testing with certificate			
Special cle	eaning			
P2	Cleaning for special services			
PA	Cleaning per ASTM G93 level D (section 11.4)			
Material t	esting			
V1	Dye penetrant exam			
Material e	examination			
V2	Radiographic examination			
Flow calib	pration <sup>(11)</sup>	·		
WD	Discharge coefficient verification			
Special ins	spection	·		
QC1	Visual and dimensional inspection with certificate	*		
QC7	Inspection and performance certificate	*		
Material t	raceability certification			
Q8	Material traceability certification per EN 10204:2004 3.1	*		
Positive m	naterial identification	·		
Q76	PMI for primary elements			
Code conf	formance <sup>(12)</sup>	·		
J2	ANSI/ASME B31.1			
J3	ANSI/ASME B31.3			
J4	ANSI/ASME B31.8			
Materials	conformance <sup>(13)</sup>			
J5	NACE MR-0175/ISO 15156			
Country c	ertification			
J6	European Pressure Directive (PED)	*		
J1	Canadian Registration			
Transmitt	er calibration certification			
Q4	Calibration certificate for transmitter	*		
Quality ce	ertification for safety <sup>(14)</sup>			
QS	Prior-use certificate of FMEDA data	*		
QT	Safety certified to IEC 61508 with certificate of FMEDA	*		
_	-	·		

Table 9. Rosemount 3051CFP Integral Orifice Flow Meter Ordering Information

Product o	rertifications <sup>(15)</sup>			
E8	ATEX Flameproof, Dust	*		
I1 <sup>(16)</sup>	ATEX Intrinsic Safety and Dust			
IA	ATEX FISCO Intrinsic Safety; for FOUNDATION Fieldbus or PROFIBUS PA protocols only			
N1	ATEX Type n and Dust	*		
K8	ATEX Flameproof, Intrinsic Safety, Type n, Dust (combination of E8, I1 and N1)	*		
E5	FM Explosion-proof, Dust Ignition-proof	*		
I5 <sup>(17)</sup>	FM Intrinsically Safe, Nonincendive	*		
IE	FM FISCO Intrinsically Safe; for FOUNDATION Fieldbus or PROFIBUS PA protocols only	*		
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, and Division 2 (combination of E5 and I5)	*		
C6	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, and Division 2	*		
I6 <sup>(6)</sup>	CSA Intrinsically Safe	*		
K6	CSA and ATEX Explosion-proof, Intrinsically Safe, and Division 2 (combination of C6, E8, and I1)	*		
E7	IECEx Flameproof, Dust Ignition-proof	*		
17	IECEx Intrinsic Safety	*		
N7	IECEx Type n	*		
K7	IECEx Flameproof, Dust Ignition-proof, Intrinsic Safety, and Type n (combination of I7, N7 and E7)	*		
E2	INMETRO Flameproof	*		
12	INMETRO Intrinsic Safety			
IB	INMETRO FISCO intrinsically safe; for FOUNDATION Fieldbus or PROFIBUS PA protocols only	*		
K2	INMETRO Flameproof, Intrinsic Safety	*		
E3	China Flameproof	*		
13	China Intrinsic Safety	*		
KB	FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, and Division 2 (combination of K5 and C6)	*		
KD	CSA, FM, and ATEX Explosion-proof, Intrinsically Safe (combination of K5, C6, I1, and E8)	*		
EM	Technical Regulations Custom Union (EAC) Flameproof	*		
IM	Technical Regulations Custom Union (EAC) Intrinsic Safety	*		
KM	Technical Regulations Custom Union (EAC) Flameproof, Intrinsic Safety (combination of EM and IM)	*		
Sensor fil	l fluid and O-ring options			
L1 <sup>(18)</sup>	Inert sensor fill fluid	*		
L2	Graphite-filled (PTFE) O-ring			
LA <sup>(18)</sup>	Inert sensor fill fluid and graphite-filled (PTFE) O-ring			
Shipboar	d approvals <sup>(18)</sup>			
SBS	American Bureau of Shipping	*		
SLL <sup>(19)</sup>	Lloyds Register (LR)			

#### Table 9. Rosemount 3051CFP Integral Orifice Flow Meter Ordering Information

Display ar	d interface options			
M4 <sup>(20)</sup>	LCD display with LOI			
M5	LCD display			
Transient	protection <sup>(18)(21)</sup>			
T1	Transient terminal block	*		
Plantweb	control functionality <sup>(22)</sup>			
A01	FOUNDATION Fieldbus control function block suite	*		
Plantweb	diagnostic functionality			
DA0 <sup>(14)</sup>	Power Advisory HART diagnostic	*		
D01 <sup>(22)</sup>	FOUNDATION Fieldbus diagnostic suite	*		
Low powe	er output			
C2	0.8–3.2 Vdc output with digital signal based on HART Protocol (available with output code M only)			
Alarm lev	els <sup>(14)</sup>	,		
C4	NAMUR alarm and saturation levels, high alarm	*		
CN	NAMUR alarm and saturation levels, low alarm	*		
CR	Custom alarm and saturation signal levels, high alarm			
CS	Custom alarm and saturation signal levels, low alarm			
СТ	Rosemount standard low alarm			
Ground so	rew <sup>(18)(23)</sup>			
V5	External ground screw assembly	*		
Configura	tion buttons			
D4 <sup>(14)</sup>	Analog zero and span	*		
DZ <sup>(24)</sup>	Digital zero trim			
HART revi	sion configuration (requires HART output code A) <sup>(2)</sup>	·		
HR5	Configured for HART Revision 5	*		
HR7	Configured for HART Revision 7			
Typical mo	odel number: 3051CFP D F010 W1 S 0500 D3 2 A A 1 E5 M5			

- 1. To improve pipe perpendicularity for gasket sealing, socket diameter is smaller than standard pipe O.D.
- 2. Option HR5 configures the HART output to HART Revision 5. Option HR7 configures the HART output to HART Revision 7. The device can be field configured to HART Revision 5 or 7 if desired. HART Revision 5 is the default HART output.
- 3. For local addressing and configuration, M4 LOI is required.
- 4. Requires wireless options and engineered polymer housing. Available approvals are FM Intrinsically Safe, (option code I5), CSA Intrinsically Safe (option code I6), ATEX Intrinsic Safety (option code I1), and IECEx Intrinsic Safety (option code I7).
- 5. Only available with C6, E2, E5, I5, K5, KB, and E8 approval. Not available with GE, GM, SBS, DA0, M4, D4, DZ, QT, HR5, HR7, CR, CS, or CT.
- 6. Only available with wireless (output code X).

7. Transmitter conduit entry will be \(^1/2\) and a \(^1/2\) NPT to \(G^1/2\) thread adapter will be provided. Not available with Product certifications options E8, K8, E5, K5, C6, K6, E7, K7, E2, K2, E3, KB, or KD.

- 8. Thermowell material is the same as the body material.
- 9. Does not apply to process connection codes T1 and S1.
- 10. Option P1 may not be ordered in combination with P2 or PA.
- 11. Not available for bore sizes 0010, 0014, 0020, 0034, 0066, or 0109.
- 12. Not available with DIN process connection codes D1, D2, or D3.
- 13. Materials of Construction comply with metallurgical requirements within NACE MR0175/ISO for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.
- 14. Only available with HART 4–20 mA output (option code A).
- 15. If select body material and type code F, consult the factory for product certifications availability.
- 16. Dust approval not applicable to output code X. See "Rosemount 3051 Wireless" on page 98 for wireless approvals.
- 17. Nonincendive certification not provided with Wireless output option code (X).
- 18. Not available with wireless (output code X).
- 19. Only available with product certifications E7, E8, I1, I7, IA, K7, K8, KD, N1, and N7.
- 20. Not available with FOUNDATION Fieldbus (output code F) or wireless (output code X) or low power (output code M).
- 21. The T1 option is not needed with FISCO Product Certifications, transient protection is included with the FISCO Product Certification code IA, IB, and IE.
- 22. Only valid with FOUNDATION Fieldbus (output code F).
- 23. The V5 option is not needed with E1, E2, E3, E4, E7, E8, EM, EP, K1, K2, K4, K6, K7, K8, KA, KC, KD, KP, KM, N1, N3, N7, ND, or NK, or T1 as the external ground screw assembly is included with these options.
- 24. Only available with 4–20 mA (output code A) and wireless (output code X).

## **Specifications**

## **Performance specifications**

This product data sheet covers HART, Wireless HART, FOUNDATION Fieldbus, and PROFIBUS PA Protocols unless specified. For zero-based spans, reference conditions, silicone oil fill, glass-filled PTFE o-rings, SST materials, coplanar flange digital trim values set to equal range points.

## **Conformance to specification**

Flow performance - Flow reference accuracy (1)

Rosemount 3051CFA Annubar Flow Meter			
Ranges 2–3		±1.80% of flow rate at 8:1 flow turndown	
Rosemount 3051CFC_A Compact Annubar Flow Meter - Rosemount Annubar option A			
Danges 2, 2	Standard	±2.10% of flow rate at 8:1 flow turndown	
Ranges 2–3	Calibrated	±1.80% of flow rate at 8:1 flow turndown	
Rosemount 3051CFC Compact Orifice Flow Meter – conditioning option C			
Ranges 2–3		±1.95% of flow rate at 8:1 flow turndown	
Rosemount 3051CFC Compact Orifice Flow Meter - orifice option P <sup>(2)</sup>			
Ranges 2–3		±2.00% of flow rate at 8:1 flow turndown	
Rosemount 3051CFP Integral Orifice Flow Meter			
	Bore < 0.160	±3.00% of flow rate at 8:1 flow turndown	
Danges 2, 2	0.160 < Bore < 0.500	±1.95% of flow rate at 8:1 flow turndown	
Ranges 2–3	0.500 < Bore < 1.000	±1.75% of flow rate at 8:1 flow turndown	
	1.000 < Bore	±2.15% of flow rate at 8:1 flow turndown	

<sup>1.</sup> Range 1 flow meters may experience an additional uncertainty up to 0.9 percent. Consult your Emerson representative for exact specifications.

## **Total performance**

Total performance is based on combined errors of reference accuracy, ambient temperature effect, and static pressure effect.

For ±50 °F (28 °C) temperature changes, up to 1000 psi (6,9 MPa) line pressure (CD only), from 1:1 to 5:1 rangedown.

Models	Total performance
Rosemount 3051CF	
Ranges 2–5	±0.15%of span

## Long term stability

Models	Long term stability
Rosemount 3051CF Ranges 2–5	$\pm 0.2\%$ of URL for 10 years $\pm 50$ °F (28 °C) temperature changes, and up to 1000 psi (6,9 MPa) line pressure
Rosemount 3051CF Low/Draft Range	
Ranges 0–1	±0.2% of URL for 1 year

<sup>2.</sup> For line size less than 2-in. (50 mm) or greater than 8-in. (200 mm), add an additional 0.5 percent uncertainly.

## Warranty<sup>(1)</sup>

Models	Standard <sup>(2)</sup>	Optional extended warranty <sup>(3)</sup>
All Rosemount 3051	1-year limited warranty	WR5: 5-year limited warranty WR3: 3-year limited warranty

- Warranty details can be found in Emerson Terms and Conditions of Sale, Document 63445, Rev G (10/06). 1.
- 2. Goods are warranted for 12 months from the date of initial installation or 18 months from the date of shipment by seller, whichever period expires first.
- Rosemount extended warranties have a limited warranty of five or three years from date of shipment. 3.

## **Dynamic performance**

	4–20 mA HART <sup>(1)</sup> 1–5 Vdc HART Low Power	FOUNDATION Fieldbus and PROFIBUS PA Protocols (3)	Typical HART transmitter response time	
Total response time (T <sub>d</sub> + T <sub>c</sub> )	( <sup>2</sup> ):			
Rosemount 3051CF, ranges 2–5:	100 ms	152 ms		
Range 1:	255 ms	307 ms	Transmitter output vs. Time	l
Range 0:	700 ms	N/A	Pressure released	l
Dead time (Td)	45 ms (nominal)	97 ms		l
Update Rate <sup>(4)</sup>	22 times per second	22 times per second	$T_d = Dead time$	l
1. Dead time and update rate apply to a	all models and ranges; analog output	t only.	$\begin{array}{c c} & & & & & & & & & \\ \hline & & & & & & & \\ \hline & & & &$	l
2. Nominal total response time at 75 °F	. Nominal total response time at 75 °F (24 °C) reference conditions.			l
3. Transducer block response time, analog Input block execution time not included.		63,2% of total	l	
<ol> <li>Does not apply to wireless (output code x). See "WirelessHart (output code X)" on page 87 for wireless update rate.</li> </ol>		36.8% step change 0% Time		

## Vibration effect for Rosemount 3051CFA, 3051CFC

Less than ±0.1% of URL when tested per the requirements of IEC60770-1 field with general application or pipeline with low vibration level (10–1000 Hz test frequency range, 0.15 mm displacement peak amplitude, 20 m/s<sup>2</sup> acceleration amplitude).(1)

## Vibration effect for Rosemount 3051CFC\_A

Less than  $\pm 0.1\%$  of URL when tested per the requirements of IEC60770-1 field or pipeline with high vibration level (10-60 Hz, 0.15 mm displacement peak amplitude/60-2000  $Hz 2q).^{(1)}$ 

SST temperature housing is not recommended with Primary Element Technology A in applications with mechanical vibration.

## Vibration effect for Rosemount 3051CFP

Less than ±0.1% of URL when tested per the requirements of IEC60068-2-6 (10-1000 Hz test frequency range, 0.075 mm displacement peak amplitude, 10 m/s<sup>2</sup> acceleration amplitude).

## **Power supply effect**

Less than  $\pm 0.005\%$  of calibrated span per volt.

## Electromagnetic Compatibility (EMC)

Meets all industrial environment requirements of EN61326 and NAMUR NE-21<sup>(1)</sup>. Maximum deviation < 1% span during EMC disturbance<sup>(2)</sup>.

- NAMUR NE-21 does not apply to low-power (transmitter option code M) and wireless (transmitter output code X).
- During surge event device may exceed maximum EMC deviation limit or reset; however, device will self-recover and return to normal operation within specified start-up time.

## Transient protection (option code T1)

Meets IEEE C62.41, category location B

- 6 kV crest (0.5 μs 100 kHz)
- 3 kV crest (8 x 20 microseconds)
- 6 kV crest (1.2 x 50 microseconds)

#### Note

Calibrations at 68 °F (20 °C) per ASME Z210.1 (ANSI)

## **Functional specifications**

## Range and sensor limits

### Table 10. Rosemount 3051CF Range and Sensor Limits

Range <sup>(1)</sup>	Minimum span <sup>(2)</sup>	Upper (URL)	Lower (LRL)
1	0.50 inH <sub>2</sub> O (1,24 mbar)	25.00 inH <sub>2</sub> O (62,16 mbar)	–25.00 inH <sub>2</sub> O (–62,16 mbar)
2	1.67 inH <sub>2</sub> O (4,15 mbar)	250.00 inH <sub>2</sub> O (621,60 mbar)	–250.00 inH <sub>2</sub> O (–621,60 bar)
3	6.67 inH <sub>2</sub> O (16,58 mbar)	1000.00 inH <sub>2</sub> O (2,48 bar)	–1000.00 inH <sub>2</sub> O (–2,48 bar)

- 1. inH<sub>2</sub>O referenced at 68 °F.
- 2. For output options W and M. minimum span are:

Range 1–0.50 inH<sub>2</sub>O (1,24 mbar)

Range 3-2.50 inH<sub>2</sub>O (24,86 mbar)

Range 4-3.00 psi (0,21 bar)

Range 5–20.00 psi (1,38 bar)

## 4-20 mA HART (output code A)


#### **Power supply**

External power supply required. Standard transmitter (4–20 mA) operates on 10.5–42.4 Vdc with no load

#### **Load limitations**

Maximum loop resistance is determined by the voltage level of the external power supply described by:

Max. loop resistance = 43.5 (power supply voltage – 10.5)

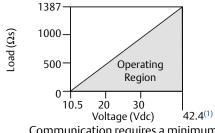

Communication requires a minimum loop resistance of 250 ohms.

1. For CSA approval, power supply must not exceed 42.4 V.

#### Indication

Optional two line LOI/LCD display

#### **Optional configuration buttons**

Configuration buttons need to be specified: digital zero trim (option code DZ) changes digital value of the transmitter and is used for performing a sensor zero trim. analog zero span (option code D4) changes analog value and can be used to rerange the transmitter with an applied pressure.

#### Output

Two-wire 4–20mA, user selectable for linear or square root output. Digital process variable superimposed on 4–20 mA signal, available to any host that conforms to HART Protocol. The Rosemount 3051 comes with Selectable HART Revisions. Digital communications based on HART Revision 5 (default) or Revision 7 (option code HR7) protocol can be selected. The HART Revision can be switched in the field using any HART based configuration tool or the optional LOI (M4).

#### **Power advisory diagnostics**

Power advisory diagnostics pro-actively detect and notify you of degraded electrical loop integrity before it can affect your process operation. Example loop problems that can be detected include water in the terminal compartment, corrosion of terminals, improper grounding, and unstable power supplies. The device dashboard presents the diagnostics in a graphical, task-based interface that provides single-click access to critical process/device information and descriptive graphical troubleshooting.

#### LOI

The LOI utilizes a two button menu with internal and external configuration buttons. Internal buttons are always configured for LOI. External buttons can be configured for either LOI (option code M4), analog zero and span (option code D4) or digital zero trim (option code DZ). For LOI configuration menu see Rosemount 3051 Product Manual.

## FOUNDATION Fieldbus (output code F)

#### **Power supply**

External power supply required; transmitters operate on 9.0 to 32.0 V dc transmitter terminal voltage. FISCO transmitters operate on 9.0 to 17.5 Vdc.

#### **Current draw**

17.5 mA for all configurations (including LCD display option)

#### Indication

Optional 2-line LCD display

#### FOUNDATION Fieldbus block execution times

Block	Execution time
Resource	N/A
Sensor and SPM Transducer	N/A
LCD Display	N/A
Analog Input 1, 2	20 milliseconds
PID	25 milliseconds
Input Selector	20 milliseconds
Arithmetic	20 milliseconds
Signal Characterizer	20 milliseconds
Integrator	20 milliseconds
Output Splitter	20 milliseconds
Control Selector	20 milliseconds

#### FOUNDATION Fieldbus parameters

Links	25 (max.)
Virtual Communications Relationships (VCR)	20 (max.)

#### FOUNDATION Fieldbus function blocks (option A01)

#### **Resource block**

The resource block contains diagnostic, hardware, and electronics information. There are no linkable inputs or outputs to the resource block.

#### Sensor transducer block

The sensor transducer block contains sensor information and the ability to calibrate the pressure sensor or recall factory calibration.

## LCD transducer block

The LCD transducer block is used to configure the LCD display meter.

#### Analog input (AI) block

The AI block processes the measurements from the sensor and makes them available to other function blocks. The output value from the AI block is in engineering units and contains a status indicating the quality of the measurement. The AI Block is widely used for scaling functionality.

### Input selector (ISEL) block

The ISEL block can be used to select the first good, hot backup, maximum, minimum, or average of as many as eight input values and place it at the output. The block supports signal status propagation.

## Integrator (INT) block

The INT block integrates one or two variables over time. The block compares the integrated or accumulated value to pre-trip and trip limits and generates discrete output signals when the limits are reached.

The INT block is used as a totalizer. This block will accept up to two inputs, has six options how to totalize the inputs, and two trip outputs.

#### Arithmetic (ARTH) block

The ARTH block provides the ability to configure a range extension function for a primary input. It can also be used to compute nine different arithmetic functions including flow with partial density compensation, electronic remote seals, hydrostatic tank gaging, ratio control, and others.

#### Signal characterizer (SGCR) block

The SGCR block characterizes or approximates any function that defines an input/output relationship. The function is defined by configuring as many as twenty X,Y coordinates. The block interpolates an output value for a given input value using the curve defined by the configured coordinates. Two separate analog input signals can be processed simultaneously to give two corresponding separate output values using the same defined curve.

## Proportional/Integral/Derivative (PID) block

The PID function block combines all of the necessary logic to perform PID control. The block supports mode control, signal scaling and limiting, feed forward control, override tracking, alarm limit detection, and signal status propagation.

#### Control selector block

The control selector function block selects one of two or three inputs to be the output. The inputs are normally connected to the outputs of PID or other function blocks. One of the inputs would be considered normal and the other two overrides.

#### **Output splitter block**

The output splitter function block provides the capability to drive two control outputs from a single input. It takes the output of one PID or other control block to control two valves or other actuators.

## **Backup Link Active Scheduler (LAS)**

The transmitter can function as a LAS if the current link master device fails or is removed from the segment.

# FOUNDATION Fieldbus diagnostics suite (option code D01)

The Rosemount 3051C FOUNDATION Fieldbus diagnostics suite features SPM technology to detect changes in the process, process equipment, or installation conditions (such as plugged impulse lines) of the transmitter. This is done by modeling the process noise signature (using the statistical values of mean and standard deviation) under normal conditions and then comparing the baseline values to current values over time. If a significant change in the current values is detected, the transmitter can generate an alert.

## PROFIBUS PA (output code W)

#### **Profile version**

3.02

#### **Power supply**

External power supply required; transmitters operate on 9.0 to 32.0 Vdc transmitter terminal voltage.

#### **Current draw**

17.5 mA for all configurations (including LCD display option)

#### **Output update rate**

Four times per second

#### Standard function blocks

#### Analog input (AI block)

The AI function block processes the measurements and makes them available to the host device. The output value from the AI block is in engineering units and contains a status indicating the quality of the measurement.

## **Physical block**

The physical block defines the physical resources of the device including type of memory, hardware, electronics and diagnostic information.

#### **Transducer block**

Contains actual sensor measurement data including the sensor diagnostics and the ability to trim the pressure sensor or recall factory defaults.

#### Indication

Optional 2-line LCD display

#### LOI

Optional external configuration buttons

## WirelessHart (output code X)

#### Output

IEC 62591 (WirelessHART), 2.4 GHz DSSS

#### Wireless radio (internal antenna, WP5 option)

- Frequency: 2.400-2.485 GHz
- Channels: 15
- Modulation: IEEE 802.15.4 compliant DSSS
- Transmission: Maximum of 10 dBm EIRP

#### Local display

The optional 3-line, 7-digit LCD display can display user-selectable information such as primary variable in engineering units, scaled variable, percent of range, sensor module temperature, and electronics temperature. The display updates based on the wireless update rate.

#### Digital zero trim

Digital zero trim (option DZ) is an offset adjustment to compensate for mounting position effects, up to 5 percent of URL.

#### **Update** rate

User selectable 1 sec. to 60 min.

#### Power module

Field replaceable, keyed connection eliminates the risk of incorrect installation, Intrinsically Safe Lithium-thionyl chloride Power Module with PBT/PC enclosure. Ten-year life at one minute update rate. (1)

 Reference conditions are 70°F (21°C), and routing data for three additional network devices.

#### Note

Continuous exposure to ambient temperature limits of –40 or 185 °F (–40 or 85 °C) may reduce specified life by less than 20 percent.

## 1–5 Vdc HART low power (output code M)

#### Output

Three wire 1–5 Vdc or 0.8–3.2 Vdc (option code C2) user-selectable output. Also user selectable for linear or square root output configuration. Digital process variable superimposed on voltage signal, available to any host conforming to the HART protocol. Low-power transmitter operates on 6–12 Vdc with no load.

#### **Power consumption**

3.0 mA, 18-36 mW

#### Minimum load impedance

 $100 kΩ (V_{out} wiring)$ 

#### Indication

Optional 5-digit LCD display

## **Overpressure limits**

Transmitters withstand the following limits without damage.

#### Rosemount 3051CFX

Range 1: 2000 psig (137,9 bar)

Ranges 2-3: 3626 psig (250 bar)

4500 psig (310,3 bar) for option code P9

### Failure mode alarm

#### HART 4-20 mA (output option code A)

If self-diagnostics detect a sensor or microprocessor failure, the analog signal is driven either high or low to alert the user. High or low failure mode is user-selectable with a jumper/switch on the transmitter. The values to which the transmitter drives its output in failure mode depend on whether it is factory-configured to standard or NAMUR-compliant, or custom levels (see Alarm Configuration ). The values for each are as follows:

**Table 11. Alarm Configuration** 

	High alarm	Low alarm
Default	≥21.75 mA	≤3.75 mA
NAMUR compliant <sup>(1)</sup>	≥22.5 mA	≤3.6 mA
Custom levels <sup>(2)</sup>	20.2–23.0 mA	3.4-3.8 mA

- Analog output levels are compliant with NAMUR recommendations NE 43, see option codes C4 or C5.
- 2. Low alarm must be 0.1 mA less than low saturation and high alarm must be 0.1 mA greater than high saturation.

#### Output code M

If self-diagnostics detect a gross transmitter failure, the analog signal will be driven either below 0.94 or above 5.4 V to alert the user (below 0.75 or above 4.4 V for option C2). High or low alarm signal is user-selectable by internal jumper.

#### Output code F, W, and X

If self-diagnostics detect a gross transmitter failure, that information gets passed as a status along with the process variable.

## **Temperature limits**

## For Rosemount 3051CFA temperature limits

#### **Process temperature limits**

#### **Direct mount transmitter**

- 500 °F (260 °C)
- 750 °F (398 °C) when used with a direct mount, high temperature 5-valve manifold (transmitter connection platform code 6).
   Maximum temperature limit for steam processes is 650 °F (343 °C).
- 400 °F (204 °C) when top mounted in steam service

#### Remote mount transmitter

- 1250 °F (677 °C) Alloy C-276 sensor material (for superheated steam applications above 1000 °F (538 °C), it is recommended that the Rosemount 585 with alloy 800H sensor material is used.)
- 850 °F (454 °C) SST sensor material

## Pressure and temperature limits (1)

#### Direct mount transmitter

Up to Class 900 ANSI (2160 psig at 100 °F [149 bar at 38 °C])

#### Remote mount transmitter

- Up to Class 2500 ANSI (6000 psig at 100 °F [416 bar at 38 °C])
- Integral temperature measurement is not available with flanged mounting type greater than Class 900

#### For Rosemount 3051CFC temperature limits

## **Process temperature limits**

#### **Direct mount transmitter**

- -40 to 450 °F (-40 to 232 °C)
- Up to 400 °F (204 °C) when top mounted in steam service

#### **Remote mount transmitter**

-148 to 850 °F (-100 to 454 °C) - SST

#### For Rosemount 3051CFP temperature limits

## **Process temperature limits**

#### Standard (direct/remote mount)

-40 to 450 °F (-40 to 232 °C)

## Extended (remote mount only with option code G)

-112 to 850 °F (-80 to 454 °C)(1)

Consult factory for all-welded design for extended temperature.

#### **Table 12. Temperature Limits**

Sensor	Limit
Silicone fill sensor <sup>(1)</sup>	N/A
with Coplanar flange	-40 to 250 °F (-40 to 121 °C) <sup>(2)</sup>

- . Process temperatures above 185 °F (85 °C) require derating the ambient limits by a 1.5:1 ratio.
- 2.  $220 \,^{\circ}\text{F} (104 \,^{\circ}\text{C})$  limit in vacuum service;  $130 \,^{\circ}\text{F} (54 \,^{\circ}\text{C})$  for pressures below 0.5 psia.

<sup>1.</sup> Static pressure selection may effect pressure limitations.

#### **Humidity limits**

0-100 percent relative humidity

#### Turn-on time

Performance within specifications less than 2.0 seconds (20.0 s for PROFIBUS PA and FOUNDATION Fieldbus protocols) after power is applied to the transmitter.<sup>(1)</sup>

Does not apply to wireless option code X.

## **Volumetric displacement**

Less than 0.005 in<sup>3</sup> (0,08 cm<sup>3</sup>)

## **Damping**

#### 4-20 mA HART Protocol

Analog output response to a step input change is user-selectable from 0 to 60 seconds for one time constant. This software damping is in addition to sensor module response time.

#### **FOUNDATION Fieldbus Protocol**

Transducer block: 0.4 seconds fixed

AI Block: user configurable

#### **PROFIBUS PA Protocol**

AI Block only: user configurable

## **Physical specifications**

#### **Electrical connections**

<sup>1</sup>/<sub>2</sub>–14 NPT, G<sup>1</sup>/<sub>2</sub>, and M20 x 1.5 (CM20) conduit. The polymer housing (code P) has no conduit entries. HART interface connections fixed to terminal block for output code A and to Rosemount 701P Power Module for option code X.

## **Process-wetted parts**

#### Rosemount 3051CFA- Rosemount Annubar sensor material

- 316 SST
- Alloy C-276

### Note

Cage nipple is made from 304 SST.

#### Rosemount 3051CFC-material of construction

#### Body/plate

- 316/316L SST
- 50 micro-inch Ra surface finish

#### Manifold head/valves

316 SST

#### Flange studs and nuts

- · Customer supplied
- Available as a spare part

#### Transmitter connection studs and nuts

- Studs-A193 Grade B8M.
- Nuts-A194 Grade 8M.

#### Gasket and O-rings

- · Gaskets are customer supplied.
- Durlon 8500 fiber gaskets are recommended. Consult an Emerson representative for use with other gaskets.
- Available as a spare part

#### Rosemount 3051CFP-material of construction

#### **Orifice plate**

- 316/316L SST
- Alloy C-276
- Alloy 400

#### Body

316 SST (CF8M), material per ASTM A351

#### Pipe material (if applicable)

A312 Gr 316/316L

#### Flange

- A182 Gr 316/316L
- Flange pressure limits are per ANSI B16.5 or DIN EN 1092-1
- Flange face finish per ANSI B16.5 or DIN EN 1092-1, 125, to 250 RMS

#### Body bolts/studs

- ASTM A193 Gr B8M studs
- ASTM A193 Gr B8M Class 2 body studs provided for high temperature option code GT
- ASTM A193 Gr B8M Class 2 body studs provided for 1–1/2-in. (code 015) line size units ordered with high pressure process connection option codes W9, R9, T1, S1, or P2.

#### **Transmitter connection studs**

ASTM A193 Gr B8M studs

#### Gaskets/O-rings

- Glass filled PTFE
- Alloy X-750 provided for high temperature option code GT
- Gaskets and O-rings must be replaced each time the Rosemount 3051CFP is disassembled for installation or maintenance.

## Orifice type

#### Square edge-orifice bore sizes

0.066-in. and larger

# Quadrant edge-orifice bore sizes (for 1/2-in. [15 mm] line size only)

- 0.034-in. (0.86 mm)
- 0.020-in. (0.51 mm)
- 0.014-in. (0.35 mm)
- 0.010-in. (0.25 mm)

## Note

Integral orifice bodies contain corner tapped pressure ports.

## **Transmitter process wetted parts**

## Drain/vent valves

316 SST, alloy C-276, or alloy 400 material

## **Wetted O-rings**

Glass-filled PTFE or graphite-filled PTFE

## Non-wetted parts

#### **Electronics housing**

Low-copper aluminum or CF-8M (cast version of 316 SST). Enclosures meet NEMA type 4X, IP66, and IP68 when properly installed.

Housing material code P: PBT/PC with NEMA 4X and IP66/67/68

## Coplanar sensor module housing

CF-3M (Cast version of 316L SST, material per ASTM-A743)

#### **Bolts**

- TM A449, type 1 (zinc-cobalt plated CS)
- ASTM F593G, condition CW1 (austenitic 316 SST)
- ASTM A193, grade B7M (zinc plated alloy steel)
- Alloy K-500

## Sensor module fill fluid

Silicone oil (D.C. 200)

#### **Paint**

Polyurethane

## **Cover O-rings**

Nitirile Butadiene (NBR)

## **Product certifications**

## Rosemount 3051

Rev 1.15

## **European Directive Information**

A copy of the EU Declaration of Conformity can be found at the end of the Quick Start Guide. The most recent revision of the EU Declaration of Conformity can be found at Emerson.com/Rosemount.

## **Ordinary Location Certification**

As standard, the transmitter has been examined and tested to determine that the design meets the basic electrical, mechanical, and fire protection requirements by a nationally recognized test laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

## **North America**

**E5** USA Explosionproof (XP) and Dust-Ignitionproof (DIP)

Range 1–5

Certificate: FM16US0121

Standards: FM Class 3600 - 2011, FM Class 3615 - 2006,

FM Class 3810 - 2005, ANSI/NEMA 250 - 2003

Markings: XP CL I, DIV 1, GP B, C, D; DIP CL II, DIV 1, GP

E, F, G; CL III; T5(-50 °C  $\leq$  T<sub>a</sub>  $\leq$  +85 °C); Factory

Sealed; Type 4X

Range 6

Certificate: 1053834

Standards: ANSI/ISA 12.27.01-2003, CSA Std. C22.2 No.

30 -M1986, CSA Std. C22.2 No.142-M1987,

CSA Std. C22.2 No. 213 - M1987

Markings: XP Class I, Division 1, Groups B, C and D, T5,

 $(-50 \text{ °C} \le T_a \le +85 \text{ °C})$  Suitable for Class I, Zone 1, Group IIB+H2, T5; DIP Class II and Class III,

Division 1, Groups E, F and G, T5,

 $(-50 \text{ °C} \le T_a \le +85 \text{ °C})$ ; Type 4X; Factory Sealed;

Single Seal (See drawing 03031-1053)

15 FM Intrinsic Safety (IS) and Nonincendive (NI)

Range 1–5

Certificate: FM16US0120X

Standards: FM Class 3600 - 2011, FM Class 3610 - 2010,

FM Class 3611 - 2004, FM Class 3810 - 2005,

ANSI/NEMA 250 - 2008

Markings: IS CL I, DIV 1, GP A, B, C, D; CL II, DIV 1, GP E, F,

G; Class III; DIV 1 when connected per

Rosemount drawing 03031-1019; NI CL 1, DIV

2, GP A, B, C, D;

 $T4(-50 \text{ °C} \le T_a \le +70 \text{ °C})$  [HART],

 $T4(-50 \text{ °C} \le T_a \le +60 \text{ °C})$  [Fieldbus/PROFIBUS];

Type 4x

#### Special Conditions for Safe Use (X):

 The Rosemount 3051 Transmitter housing contains aluminum and is considered a potential risk of ignition by impact or friction. Care must be taken into account during installation and use to prevent impact and friction.

2. The Rosemount 3051 Transmitter with the transient terminal block (option code T1) will not pass the 500 Vrms dielectric strength test and this must be taken into account during installation.

Range 6

Certificate: 1053834

Standards: ANSI/ISA 12.27.01-2003, CSA Std. C22.2

No.142-M1987, CSA Std. C22.2. No.157-92

Markings: IS Class I, II, III, Division 1 Groups A, B, C, D, E,

F, and G when connected in accordance with Rosemount drawing 03031-1024, Suitable

for Class I, Zone 0 Group IIC;

Class I, Division 2, Groups A, B, C and D; NIFW; Suitable for

Class I Zone 2, Group IIC; HART: T4 ( $-60 \degree C \le T_a \le 70 \degree C$ );

T5 ( $-60 \,^{\circ}\text{C} \leq \text{T}_a \leq 40 \,^{\circ}\text{C}$ ) Fieldbus/PROFIBUS:

T4 (-60 °C  $\leq$  T<sub>a</sub>  $\leq$  60 °C) Type 4X

IE USA FISCO

Range 1–5

Certificate: FM16US0120X

Standards: FM Class 3600 - 2011, FM Class 3610 - 2010,

FM Class 3611 - 2004, FM Class 3810 - 2005

Markings: IS CL I, DIV 1, GP A, B, C, D when connected

per Rosemount drawing 03031-1019  $(-50 \text{ °C} \le T_a \le +60 \text{ °C})$ ; Type 4x

#### Special Conditions for Safe Use (X):

 The Rosemount 3051 Transmitter housing contains aluminum and is considered a potential risk of ignition by impact or friction. Care must be taken into account during installation and use to prevent impact and friction.

2. The Rosemount 3051 Transmitter with the transient terminal block (option code T1) will not pass the 500 Vrms dielectric strength test and this must be taken into account during installation.

Range 6

Certificate: 1053834

Standards: ANSI/ISA 12.27.01-2003, CSA Std. C22.2

No.142-M1987, CSA Std. C22.2. No.157-92

Markings: IS Class I, Division 1 Groups A, B, C, D, T4

 $(-60 \text{ °C} \le T_a \le +60 \text{ °C})$  when connected in accordance with Rosemount drawing 03031-1024, Suitable for Class I, Zone 0 Group IIC; Type 4X; Factory Sealed; Single

Seal (See drawing 03031-1053)

C6 Canada Explosionproof, Dust-Ignitionproof, Intrinsic Safety and Nonincendive

Certificate: 1053834

Standards: ANSI/ISA 12.27.01-2003, CSA Std. C22.2 No.

30 -M1986, CSA Std. C22.2 No.142-M1987, CSA Std. C22.2. No.157-92, CSA Std. C22.2

No. 213 - M1987

Markings: Explosionproof for Class I, Division 1, Groups

B, C and D; Suitable for Class I, Zone 1, Group

IIB+H2, T5 ( $-50 \,^{\circ}\text{C} \le T_a \le 85 \,^{\circ}\text{C}$ );

Dust-Ignitionproof Class II, III, Division 1, Groups E, F, G, T5 ( $-50\,^{\circ}\text{C} \le \text{T}_{a} \le 85\,^{\circ}\text{C}$ ); Class III Division 1; Intrinsically Safe Class I, Division 1 Groups A, B, C, D when connected in accordance with Rosemount drawing 03031-1024, Temperature Code T4; Suitable for Class I, Zone 0; Class I Division 2 Groups A,

B, C and D, T5. Suitable for Class I Zone 2, Group IIC; Type 4X; Factory Sealed; Single Seal (See drawing 03031-1053)

**E6** Canada Explosionproof, Dust-Ignitionproof and Division 2

Certificate: 1053834

Standards: ANSI/ISA 12.27.01-2003, CSA Std. C22.2 No.

30 -M1986, CSA Std. C22.2 No.142-M1987,

CSA Std. C22.2 No. 213 - M1987

Markings: Explosionproof Class I, Division 1, Groups B, C

and D; Suitable for Class I, Zone 1, Group IIB+H2, T5. Dust-Ignitionproof for Class II and Class III, Division 1, Groups E, F and G; T5 (-50 °C  $\leq$   $T_a$   $\leq$  85 °C); Class I, Division 2, Groups A, B, C and D; T5. Suitable for Class I Zone 2, Group IIC; Type 4X; Factory Sealed; Single Seal (See drawing 03031-1053)

## **Europe**

**E8** ATEX Flameproof and Dust

Certificate: KEMA00ATEX2013X; Baseefa11ATEX0275X

Standards: EN60079-0:2012 + A11:2013,

EN60079-1:2014, EN60079-26:2015,

EN60079-31:2009

Markings: ⟨⟨⟨⟨⟩ | II 1/2 G Ex db IIC T6...T4 Ga/Gb, T6

 $(-60 \text{ °C} \le T_a \le +70 \text{ °C}),$ T4/T5(-60 °C  $\le T_a \le +80 \text{ °C});$ 

Ex II 1 D Ex ta IIIC T95 °C T<sub>500</sub>105 °C Da

 $(-20 \text{ °C} \le T_a \le +85 \text{ °C})$ 

### **Table 13. Process Temperature**

Temperature class	Process temperature
T6	−60 to +65 °C
T5	−60 to +80 °C
T4	−60 to +120 °C

#### Special Conditions for Safe Use (X):

- 1. This device contains a thin wall diaphragm less than 1 mm thick that forms a boundary between Category 1 (process connection) and Category 2 (all other parts of the equipment). The model code and datasheet are to be consulted for details of the diaphragm material. During installation, maintenance, and use the environmental conditions to which the diaphragm will be subjected shall be taken into account. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
- 2. Flameproof joints are not intended for repair.
- Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.
- 4. Some variants of the equipment have reduced markings on the nameplate. Refer to the Certificate for full equipment marking.
- **I1** ATEX Intrinsic Safety and Dust

Certificate: BAS97ATEX1089X; Baseefa11ATEX0275X

Standards: EN60079-0:2012 + A11:2013,

EN60079-11:2012, EN60079-31:2014

Markings: HART: Ex II 1 G Ex ia IIC T5/T4 Ga, T5

 $(-60 \text{ °C} \le T_a \le +40 \text{ °C}),$ T4 $(-60 \text{ °C} \le T_a \le +70 \text{ °C})$ 

Fieldbus/PROFIBUS: Ex II 1 G Ex ia IIC Ga

 $T4(-60^{\circ}C \le T_a \le +60^{\circ}C)$ 

DUST: Ex II 1 D Ex ta IIIC T95 °C  $T_{500}$ 105 °C Da (-20 °C  $\leq T_a \leq +85$  °C)

#### **Table 14. Input Parameters**

•		
Parameter	HART	Fieldbus/PROFIBUS
Voltage U <sub>i</sub>	30 V	30 V
Current I <sub>i</sub>	200 mA	300 mA
Power P <sub>i</sub>	0.9 W	1.3 W
Capacitance C <sub>i</sub>	0.012 μF	0 μF
Inductance L <sub>i</sub>	0 mH	0 mH

#### Special Conditions for Safe Use (X):

 The apparatus is not capable of withstanding the 500 V insulation test required by clause 6.3.12 of EN60079-11:2012. This must be taken into account when installing the apparatus.

2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however care should be taken to protect it from impact or abrasion if located in Zone 0.

3. Some variants of the equipment have reduced markings on the nameplate. Refer to the Certificate for full equipment marking.

IA ATEX FISCO

Certificate: BAS97ATEX1089X

Standards: EN60079-0:2012 + A11:2013,

EN60079-11:2012

Markings: Ex II 1 G Ex ia IIC T4 Ga  $(-60 \,^{\circ}\text{C} \le \text{T}_a \le +60 \,^{\circ}\text{C})$ 

#### **Table 15. Input Parameters**

Parameters	Fieldbus/PROFIBUS
Voltage U <sub>i</sub>	17.5 V
Current I <sub>i</sub>	380 mA
Power P <sub>i</sub>	5.32 W
Capacitance C <sub>i</sub>	≤5 nF
Inductance L <sub>i</sub>	≤10 μH

#### Special Conditions for Safe Use (X):

- The apparatus is not capable of withstanding the 500 V insulation test required by clause 6.3.12 of EN60079-11:2012. This must be taken into account when installing the apparatus.
- 2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however care should be taken to protect it from impact or abrasion if located in Zone 0.

**N1** ATEX Type n and Dust

Certificate: BAS00ATEX3105X; Baseefa11ATEX0275X

Standards: EN60079-0:2012 + A11:2013,

EN60079-15:2010. EN60079-31:2014

Markings: Ex II 3 G Ex nA IIC T5 Gc

 $(-40 \,^{\circ}\text{C} \le \text{T}_{a} \le +70 \,^{\circ}\text{C})$ ; Ex II 1 D Ex ta IIIC T95  $^{\circ}\text{C}$  T<sub>500</sub>105  $^{\circ}\text{C}$  Da  $(-20 \,^{\circ}\text{C} \le \text{T}_{a} \le +85 \,^{\circ}\text{C})$ 

#### Special Conditions for Safe Use (X):

- This apparatus is not capable of withstanding the 500 V insulation test that is required by clause 6.8.1 of EN60079-15. This must be taken into account when installing the apparatus.
- Some variants of the equipment have reduced markings on the nameplate. Refer to the Certificate for full equipment marking.

## International

**E7** IECEx Flameproof and Dust

Certificate: IECEx KEM 09.0034X; IECEx BAS 10.0034X

Standards: IEC60079-0:2011, IEC60079-1:2014-06,

IEC60079-26:2014-10,IEC60079-31:2013

Markings: Ex db IIC T6...T4 Ga/Gb,

T6( $-60 \degree C \le T_a \le +70 \degree C$ ), T4/T5( $-60 \degree C \le T_a \le +80 \degree C$ ); Ex ta IIIC T95  $\degree C T_{500} 105 \degree C$  Da ( $-20 \degree C \le T_a \le +85 \degree C$ )

#### Table 16. Process Temperature

Temperature class	Process temperature	
T6	−60 °C to +70 °C	
T5	60°C+2.180°C	
T4	− −60 °C to +80 °C	

#### Special Conditions for Safe Use (X):

- This device contains a thin wall diaphragm. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
- 2. Flameproof joints are not intended for repair.
- Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.
- Some variants of the equipment have reduced markings on the nameplate. Refer to the Certificate for full equipment marking.

17 IECEx Intrinsic Safety

Certificate: IECEx BAS 09.0076X

Standards: IEC60079-0:2011, IEC60079-11:2011

Markings: HART: Ex ia IIC T5/T4 Ga,

T5(-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +40 °C), T4(-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +70 °C) Fieldbus/PROFIBUS: Ex ia IIC T4(-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +60 °C)

## **Table 17. Input Parameters**

Parameter	HART	Fieldbus/PROFIBUS
Voltage U <sub>i</sub>	30 V	30 V
Current I <sub>i</sub>	200 mA	300 mA
Power P <sub>i</sub>	0.9 W	1.3 W
Capacitance C <sub>i</sub>	0.012 μF	0 μF
Inductance L <sub>i</sub>	0 mH	0 mH

## Special Conditions for Safe Use (X):

- If the apparatus is fitted with an optional 90V transient suppressor, it is not capable of withstanding the 500 V insulation test required by clause 6.3.12 of IEC60079-11. This must be taken into account when installing the apparatus.
- 2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in Zone 0.

IECEx Mining (Special A0259) Certificate: IECEx TSA 14.0001X

Standards: IEC60079-0:2011, IEC60079-11:2011 Markings: Ex ia I Ma (-60 °C ≤  $T_a$  ≤ +70 °C)

Parameter	HART	Fieldbus/ PROFIBUS	FISCO
Voltage U <sub>i</sub>	30 V	30 V	17.5 V
Current I <sub>i</sub>	200 mA	300 mA	380 mA
Power P <sub>i</sub>	0.9 W	1.3 W	5.32 W
Capacitance C <sub>i</sub>	0.012 μF	0 μF	<5 nF
Inductance L <sub>i</sub>	0 mH	0 mH	<10 μH

#### Special Conditions for Safe Use (X):

- If the apparatus is fitted with an optional 90 V transient suppressor, it is not capable of withstanding the 500 V insulation test required by IEC 60079-11. This must be taken into account when installing the apparatus.
- 2. It is a condition of safe use that the above input parameters shall be taken into account during installation.
- 3. It is a condition of manufacture that only the apparatus fitted with housing, covers and sensor module housing made out of stainless steel are used in Group I applications.

#### IG IECEx FISCO

Certificate: IECEx BAS 09.0076X

Standards: IEC60079-0:2011, IEC60079-11:2011 Markings: Ex ia IIC T4 Ga ( $-40 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ )

#### **Table 18. Input Parameters**

Parameter	Fieldbus/PROFIBUS
Voltage U <sub>i</sub>	17.5 V
Current I <sub>i</sub>	300 mA
Power P <sub>i</sub>	5.32 W
Capacitance C <sub>i</sub>	≤5 nF
Inductance L <sub>i</sub>	≤10 μH

#### Special Conditions for Safe Use (X):

- If the apparatus is fitted with an optional 90 V transient suppressor, it is not capable of withstanding the 500 V insulation test required by clause 6.3.12 of IEC 60079-11. This must be taken into account when installing the apparatus.
- 2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in Zone 0.

## N7 IECEx Type n

Certificate: IECEx BAS 09.0077X Standards: IEC60079-0:2011, IEC60079-15:2010 Markings: Ex nA IIC T5 Gc (-40 °C  $\leq T_a \leq +70$  °C)

#### Special Conditions for Safe Use (X):

 The apparatus is not capable of withstanding the 500 V insulation test required by clause 6.5.1 of IEC 60079-15. This must be taken into account when installing the apparatus.

#### **Brazil**

**E2** INMETRO Flameproof

Certificate: UL-BR 13.0643X

Standards: ABNT NBR IEC 60079-0:2013;

ABNT NBR IEC 60079-1:2016; ABNT NBR IEC 60079-26:2016

Markings: Ex db IIC T6...T4 Ga/Gb,

 $T6(-60 \text{ °C} \le T_a \le +70 \text{ °C}),$  $T4/T5(-60 \text{ °C} \le T_a \le +80 \text{ °C})$ 

#### Special Conditions for Safe Use (X):

- This device contains a thin wall diaphragm less than

   mm thickness that forms a boundary between zone 0
   (process connection) and zone 1 (all other parts of the equipment). The model code and datasheet are to be consulted for details of the diaphragm material.

   Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
- 2. Flameproof joints are not intended for repair.
- Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.
- **I2** INMETRO Intrinsic Safety

Certificate: UL-BR 13.0584X

Standards: ABNT NBR IEC60079-0:2013,

ABNT NBR IEC60079-11:2013

Markings: HART: Ex ia IIC T5/T4 Ga,

T5( $-60 \,^{\circ}\text{C} \le \text{T}_{a} \le +40 \,^{\circ}\text{C}$ ), T4( $-60 \,^{\circ}\text{C} \le \text{T}_{a} \le +70 \,^{\circ}\text{C}$ )

Fieldbus/PROFIBUS: Ex ia IIC T4 Ga

 $(-60 \, ^{\circ}\text{C} \le T_a \le +60 \, ^{\circ}\text{C})$ 

#### **Table 19. Input Parameters**

Parameter	HART	Fieldbus/PROFIBUS
Voltage U <sub>i</sub>	30 V	30 V
Current I <sub>i</sub>	200 mA	300 mA
Power P <sub>i</sub>	0.9 W	1.3 W
Capacitance C <sub>i</sub>	0.012 μF	0 μF
Inductance L <sub>i</sub>	0 mH	0 mH

#### Special Conditions for Safe Use (X):

- If the equipment is fitted with an optional 90V transient suppressor, it is not capable of withstanding the 500 V insulation test required by ABNT NBR IRC 60079-11. This must be taken into account when installing the equipment.
- The enclosure may be made of aluminum alloy and given protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if equipment requires EPL Ga.
- IB INMETRO FISCO

Certificate: UL-BR 13.0584X

Standards: ABNT NBR IEC60079-0:2013, ABNT NBR

IEC60079-11:2013

Markings: Ex ia IIC T4 Ga  $(-60 \,^{\circ}\text{C} \le T_a \le +60 \,^{\circ}\text{C})$ 

#### **Table 20. Input Parameters**

Parameters	FISCO
Voltage U <sub>i</sub>	17.5 V
Current I <sub>i</sub>	380 mA
Power P <sub>i</sub>	5.32 W
Capacitance C <sub>i</sub>	≤5 nF
Inductance L <sub>i</sub>	≤10 µH

#### Special Conditions for Safe Use (X):

- If the equipment is fitted with an optional 90V transient suppressor, it is not capable of withstanding the 500 V insulation test required by ABNT NBR IEC 60079-11. This must be taken into account when installing the equipment.
- 2. The enclosure may be made of aluminum alloy and given protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if equipment requires EPL Ga.

#### China

E3 China Flameproof

Certificate: GYJ14.1041X; GYJ15.1368X [Flow Meters]

Standards: GB12476-2000; GB3836.1-2010,

GB3836.2-2010, GB3836.20-2010

Markings: Ex d IIC T6/T5 Ga/Gb,

T6( $-50 \,^{\circ}\text{C} \le \text{T}_{a} \le +65 \,^{\circ}\text{C}$ ), T5( $-50 \,^{\circ}\text{C} \le \text{T}_{a} \le +80 \,^{\circ}\text{C}$ )

#### Special Conditions for Safe Use (X):

1. The relation between ambient temperature arrange and temperature class is as follows:

T <sub>a</sub>	Temperature class
−50 °C~ +80 °C	T5
−50 °C~ +65 °C	T6

When used in a combustible dust environment, the maximum ambient temperature is 80 °C.

- The earth connection facility in the enclosure should be connected reliably.
- 3. Cable entry certified by notified body with type of protection Ex d IIC in accordance with GB3836.1-2000 and GB3836.2-2000, should be applied when installed in a hazardous location. When used in combustible dust environment, cable entry in accordance with IP66 or higher level should be applied.
- 4. Obey the warning "Keep tight when the circuit is alive."
- 5. End users are not permitted to change any internal components.
- 6. During installation, use and maintenance of this product, observe the following standards: GB3836.13-1997, GB3836.15-2000, GB3836.16-2006, GB50257-1996, GB12476.2-2006, GB15577-2007.
- I3 China Intrinsic Safety

Certificate: GYJ13.1362X; GYJ15.1367X [Flow Meters] Standards: GB3836.1-2010, GB3836.4-2010,

GB3836.20-2010, GB12476.1-2000

Markings: Ex ia IIC T4/T5 Ga

#### Special Conditions for Safe Use (X):

- 1. Symbol "X" is used to denote specific conditions of use:
  - a. If the apparatus is fitted with an optional 90 V transient suppressor, it is not capable of withstanding the 500 V insulation test for one minute. This must be taken into account when installing the apparatus.
  - b. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in Zone 0.

2. The relation between T code and ambient temperature range is:

Model	T code	Temperature range
HART	T5	-60 °C ≤ T <sub>a</sub> ≤ +40 °C
HAKI		-60 °C ≤ T <sub>a</sub> ≤ +70 °C
Fieldbus/PROFIBUS/ FISCO	T4	-60 °C ≤ T <sub>a</sub> ≤ +60 °C

3. Intrinsically Safe parameters:

Parameter	HART	Fieldbus/ PROFIBUS	FISCO
Voltage U <sub>i</sub>	30 V	30 V	17.5 V
Current I <sub>i</sub>	200 mA	300 mA	380 mA
Power P <sub>i</sub>	0.9 W	1.3 W	5.32 W
Capacitance C <sub>i</sub>	0.012 μF	0 μF	<5 nF
Inductance L <sub>i</sub>	0 mH	0 mH	<10 μH

#### Note

FISCO parameters apply to both Group IIC and IIB.

[For Flow Meters] When Rosemount 644 Transmitter should be used with Ex-certified associated apparatus to establish explosion protection system that can be used in explosive gas atmospheres. Wiring and terminals should comply with the instruction manual of both Rosemount 644 Transmitter and associated apparatus. The cables between Rosemount 644 Transmitter and associated apparatus should be shielded cables (the cables must have insulated shield). The shielded cable has to be grounded reliably in a non-hazardous area.

- 4. Transmitters comply with the requirements for FISCO field devices specified in IEC60079-27:2008. For the connection of an intrinsically safe circuit in accordance with FISCO Model, FISCO parameters are listed in the table above.
- 5. The product should be used with Ex-certified associated apparatus to establish explosion protection system that can be used in explosive gas atmospheres. Wiring and terminals should comply with the instruction manual of the product and associated apparatus.
- The cables between this product and associated apparatus should be shielded cables (the cables must have insulated shield). The shielded cable has to be grounded reliably in a non-hazardous area.

7. End users are not permitted to change any intern components but to settle the problem in conjunction with the manufacturer to avoid damage to the product.

8. During installation, use and maintenance of this product, observe the following standards: GB3836.13-1997, GB3836.15-2000, GB3836.16-2006, GB50257-1996, GB12476.2-2006, GB15577-2007.

N3 China Type n

Certificate: GY|15.1105X

Standards: GB3836.1-2010, GB3836.8-2003 Markings: Ex nA nL IIC T5 Gc (−40  $^{\circ}$ C ≤ T<sub>a</sub> ≤ +70  $^{\circ}$ C)

## Special Condition for Safe Use (X):

 Symbol "X" is used to denote specific conditions of use: The apparatus is not capable of withstanding the 500 V test to earth for one minute. The must be taken into consideration during installation.

## Japan

**E4** Japan Flameproof

Certificate: TC20577, TC20578, TC20583, TC20584

[HART]; TC20579, TC20580, TC20581,

TC20582 [Fieldbus]

Markings: Ex d IIC T5

## **Republic of Korea**

**EP** Republic of Korea Flameproof

Certificate: 11-KB4BO-0188X [Mfg Singapore]

Markings: Ex d IIC T6...T4

IP Republic of Korea Intrinsic Safety

Certificate: 13-KB4BO-0203X [HART - Mfg USA],

13-KB4BO-0204X [Fieldbus – Mfg USA], 10-KB4BO-0138X [HART – Mfg Singapore], 13-KB4BO-0206X [Fieldbus – Mfg

Singapore]

Markings: Ex ia IIC T5/T4 (HART)

Ex ia IIC T4 (Fieldbus)

## **Technical Regulations Customs Union (EAC)**

**EM** EAC Flameproof

Markings: Ga/Gb Ex d IIC T4... T6 X,

 $T4/T5(-60 \text{ °C} \le T_a \le +80 \text{ °C}),$ 

 $T6(-60 \text{ °C} \le T_a \le +70 \text{ °C})$ 

#### Special Condition for Safe Use (X):

See certificate for special conditions.

**IM** EAC Intrinsically Safe

Markings: HART: 0Ex ia IIC T4/T5 Ga X,

T4(-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +70 °C), T5(-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +40 °C)

Fieldbus/PROFIBUS: 0Ex ia IIC T4 Ga X

 $(-60 \, ^{\circ}\text{C} \le T_a \le +60 \, ^{\circ}\text{C})$ 

#### Special Condition for Safe Use (X):

1. See certificate for special conditions.

### **Combinations**

**K2** Combination of E2 and I2

K5 Combination of E5 and I5

K6 Combination of C6, E8, and I1

**K7** Combination of E7, I7, and N7

**K8** Combination of E8, I1, and N1

**KB** Combination of E5, I5, and C6

**KD** Combination of E8, I1, E5, I5, and C6

KM Combination of EM and IM

**KP** Combination of EP and IP

## Conduit plugs and adapters

IECEx Flameproof and Increased Safety Certificate: IECEx FMG 13.0032X

Standards: IEC60079-0:2011, IEC60079-1:2007,

IEC60079-7:2006-2007

Markings: Ex de IIC Gb

ATEX Flameproof and Increased Safety

Certificate: FM13ATEX0076X

Standards: EN60079-0:2012, EN60079-1:2007,

IEC60079-7:2007 Ex II 2 G Ex de IIC Gb

## **Table 21. Conduit Plug Thread Sizes**

Markings:

Thread	Identification mark
M20 x 1.5	M20
1/2 –14 NPT	1/2 NPT

#### **Table 22. Thread Adapter Thread Sizes**

•	
Male Thread	Identification mark
M20 x 1.5 – 6H	M20
¹/2–14 NPT	¹/2 –14 NPT
<sup>3</sup> /4 –14 NPT	³/4-14 NPT
Female Thread	Identification mark
M20 x 1.5 – 6H	M20
¹/2-14 NPT	¹/2-14 NPT
G <sup>1</sup> / <sub>2</sub>	G <sup>1</sup> / <sub>2</sub>

#### Special Conditions for Safe Use (X):

- When the thread adapter or blanking plug is used with an enclosure in type of protection increased safety "e" the entry thread shall be suitably sealed in order to maintain the ingress protection rating (IP) of the enclosure.
- 2. The blanking plug shall not be used with an adapter.
- 3. Blanking Plug and Threaded Adapter shall be either NPT or Metric thread forms. G<sup>1</sup>/<sub>2</sub> thread forms are only acceptable for existing (legacy) equipment installations.

### **Additional Certifications**

SBS American Bureau of Shipping (ABS) Type Approval

Certificate: 09-HS446883A-5-PDA

Intended Use: Marine & Offshore Applications -

Measurement of either gauge or absolute pressure for liquid, gas and

vapor.

**SBV** Bureau Veritas (BV) Type Approval

Certificate: 23155

Requirements: Bureau Veritas Rules for the Classification

of Steel Ships

Application: Class notations: AUT-UMS, AUT-CCS,

AUT-PORT and AUT-IMS; Pressure transmitter type 3051 cannot be installed on diesel engines

**SDN** Det Norske Veritas (DNV) Type Approval

Certificate: TAA000004F

Intended Use: DNV GL Rules for Classification - Ships

and offshore units

**Application:** 

Location Classes	
Temperature	D
Humidity	В
Vibration	A
EMC	В
Enclosure	D

SLL Lloyds Register (LR) Type Approval

Certificate: 11/60002

Application: Environmental categories ENV1, ENV2,

ENV3, and ENV5

**C5** Custody Transfer - Measurement Canada Accuracy

**Approval** 

Certificate: AG-0226; AG-0454; AG-0477

## Rosemount 3051 Wireless

**Rev 1.4** 

## **European Directive Information**

A copy of the EU Declaration of Conformity can be found at the end of the Quick Start Guide. The most recent revision of the EU Declaration of Conformity can be found at Emerson.com/Rosemount.

## Telecommunication compliance

All wireless devices require certification to ensure that they adhere to regulations regarding the use of the RF spectrum. Nearly every country requires this type of product certification. Emerson<sup>™</sup> is working with governmental agencies around the world to supply fully compliant products and remove the risk of violating country directives or laws governing wireless device usage.

#### FCC and IC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: This device may not cause harmful interference. This device must accept any interference received, including interference that may cause undesired operation. This device must be installed to ensure a minimum antenna separation distance of 20 cm from all persons.

## **Ordinary Location Certification**

As standard, the transmitter has been examined and tested to determine that the design meets the basic electrical, mechanical, and fire protection requirements by a nationally recognized test laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

#### **Installing in North America**

The US National Electrical Code (NEC) and the Canadian Electrical Code (CEC) permit the use of Division marked equipment in Zones and Zone marked equipment in Divisions. The markings must be suitable for the area classification, gas, and temperature class. This information is clearly defined in the respective codes.

#### **USA**

U.S.A. Intrinsically Safe (IS)

Range 1-5

Certificate: FM 3046325

Standards: FM Class 3600 - 2011. FM Class 3610 - 2010. FM Class 3810 - 2005, ANSI/ISA 60079-0 - 2009, ANSI/ISA 60079-11 - 2009, NEMA® 250 - 2003,

ANSI/IEC 60529

Markings: IS CL I, DIV 1, GP A, B, C, D T4; CL 1, Zone 0 AEx ia IIC T4; T4( $-40 \,^{\circ}\text{C} \le \text{T}_a \le +70 \,^{\circ}\text{C}$ ) when installed per Rosemount drawing 03031-1062; Type 4X/IP66/IP68

## Special Conditions for Safe Use (X):

- 1. The Rosemount 3051 Wireless Pressure Transmitter shall only be used with the 701PGNKF Rosemount SmartPower Battery Pack.
- 2. The inline pressure sensor may contain more than 10% aluminum and is considered a potential risk of ignition by impact or friction. Care must be taken into account during installation and used to prevent impact and friction.
- 3. The surface resistivity of the transmitter housing is greater than one gigaohm. To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or a dry cloth.

Range 6

Certificate: CSA 2526009

Standards: FM Class 3600 - 2011, FM Class 3610 - 2010,

FM Class 3810 - 2005, ANSI/ISA 60079-0 -2009, ANSI/ISA 60079-11 - 2009, UL 61010-1

(3rd edition), UL50E (1st Edition)

Markings: IS CL I, DIV 1, GP A, B, C, D T4; CL 1, Zone 0 AEx

ia IIC T4; T4(-40 °C $\leq$ T<sub>a</sub> $\leq$ +70 °C) when installed per Rosemount drawing 03031-1063; Type

4X/IP66/IP68

## Canada

Canada Intrinsically Safe

Certificate: CSA 2526009

Standards: CAN/CSA C22.2 No. 0-M91, CAN/CSA C22.2 No.94-M91, CSA Std C22.2 No. 142-M1987, CSA Std C22.2 No. 157-92, CSA Std C22.2 No.

60529:05

Markings: Intrinsically Safe for Class I, Division 1, Groups A, B, C, D, T4 when installed per Rosemount drawing 03031-1063; Type 4X/IP66/IP68

## **Europe**

**ATEX Intrinsic Safety** 

Certificate: Baseefa12ATEX0228X

Standards:EN 60079-0: 2012, EN 60079-11: 2012

Markings: Ex II 1 G Ex ia IIC T4 Ga, T4( $-40 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ )

IP66/IP68

#### Special Conditions for Safe Use (X):

- The plastic enclosure may constitute a potential electrostatic ignition risk and must not be rubbed or cleaned with a dry cloth.
- 2. The Model 701PGNKF Power Module may be replaced in a hazardous area. The power module has a surface resistivity greater than  $1G\Omega$  and must be properly installed in the wireless device enclosure. Care must be taken during transportation to and from the point of installation to prevent electrostatic charge build-up.

## International

**17** IECEx Intrinsic Safety

Certificate: IECEx BAS 12.0124X

Standards: IEC 60079-0: 2011, IEC 60079-11: 2011 Markings: Ex ia IIC T4 Ga, T4( $-40 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ ) IP66/IP68

### Special Conditions for Safe Use (X):

- The plastic enclosure may constitute a potential electrostatic ignition risk and must not be rubbed or cleaned with a dry cloth.
- 2. The Model 701PGNKF Power Module may be replaced in a hazardous area. The power module has a surface resistivity greater than  $1G\Omega$  and must be properly installed in the wireless device enclosure. Care must be taken during transportation to and from the point of installation to prevent electrostatic charge build-up.

## **Brazil**

I2 INMETRO Intrinsic Safety Certificate: UL-BR 13.0534X

Standards: ABNT NBR IEC 60079-0:2008 + Errata 1:2011,

ABNT NBR IEC 60079-11:2009

Markings:Ex ia IIC T4 IP66 Ga, T4( $-40 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ )

#### Special Condition for Safe Use (X):

1. See certificate for special conditions.

#### China

**13** China Intrinsic Safety

Certificate: GYJ13.1362X, GYJ15.1367X [Flow Meters]

Standards: GB3836.1-2010, GB3836.4-2010,

GB3836.20-2010

Markings: Ex ia IIC T4 Ga, T4( $-40 \sim +70 \degree$ C)

#### Special Condition for Safe Use (X):

1. See certificate for special conditions.

#### Japan

**I4** TIIS Intrinsic Safety

Certificate: TC22022X (Rosemount 3051C/L), TC22023X (Rosemount 3051T), TC22024X (Rosemount

3051CFx)

Markings: Ex ia IIC T4 Ga, T4(-20 ~ +60 °C)

#### Special Condition for Safe Use (X):

1. See certificate for special conditions.

## EAC - Belarus, Kazakhstan, Russia

IM Technical Regulation Customs Union (EAC) Intrinsic Safety Certificate: TU RU C-US.AA87.B.00534
Markings: 0Ex ia IIC T4 Ga X;  $(-40 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C})$ 

## Special Condition for Safe Use (X):

1. See certificate for special conditions.

#### Korea

IP Korea Intrinsic Safety
Certificate: 13-KB4BO-0295X
Markings: Ex ia IIC T4 (−40 °C ≤ T<sub>a</sub> ≤ +70 °C)

### Special Condition for Safe Use (X):

1. See certificate for special conditions.

## **Rosemount 2051CF Flow Meter Series**

## Rosemount 2051CFA Annubar Flow Meter





Rosemount 2051CF Flow Meters integrate industry leading transmitters with industry leading primary elements. Capabilities include:

- Flow meters are fully assembled and leak tested for out-of-the-box installation
- 4–20 mA HART, WirelessHART, and FOUNDATION Fieldbus Protocols
- Integral temperature measurement (option code T)
- Advanced diagnostic (option code DA2)
- Direct or remote mount configuration available
- Rosemount Annubar Flow Meters reduce permanent pressure loss by creating less blockage in the pipe
- Ideal for large line size installations when cost, size, and weight of the flow meter are concerns

#### **Additional information**

Specifications: page 121 Certifications: page 128 Dimensional drawings: page 216

Specification and selection of product materials, options, or components must be made by the purchaser of the equipment. See page 126 for more information on material selection.

## Table 15. Rosemount 2051CFA Annubar Flow Meter Ordering Information

Model	Product description	
2051CFA	Rosemount Annubar Flow Meter	
Measureme	nt type	
D	Differential Pressure	*
Fluid type		
L	Liquid	*
G	Gas	*
S	Steam	*
Line size		
020	2-in. (50 mm)	*
025	2 <sup>1</sup> / <sub>2</sub> -in. (63.5 mm)	*
030	3-in. (80 mm)	*
035	3 <sup>1</sup> / <sub>2</sub> -in. (89 mm)	*
040	4-in. (100 mm)	*
050	5-in. (125 mm)	*

Table 15. Rosemount 2051CFA Annubar Flow Meter Ordering Information

060	6-in. (150 mm)	*
070	7-in. (175 mm)	*
080	8-in. (200 mm)	*
100	10-in. (250 mm)	*
120	12-in. (300 mm)	*
140	14-in. (350 mm)	
160	16-in. (400 mm)	
180	18-in. (450 mm)	
200	20-in. (500 mm)	
240	24-in. (600 mm)	
300	30-in. (750 mm)	
360	36-in. (900 mm)	
420	42-in. (1066 mm)	
480	48-in. (1210 mm)	
600	60-in. (1520 mm)	
720	72-in. (1820 mm)	
780	78-in. (1950 mm)	
840	84-in. (2100 mm)	
900	90-in. (2250 mm)	
960	96-in. (2400 mm)	
Pipe I.D. ra (see "Pipe	ange I.D. range code for Rosemount Annubar Flow Meters and Primary Elements" on page 146)	
С	Range C from the pipe I.D. table	*
D	Range D from the pipe I.D. table	*
A	Range A from the pipe I.D. table	
В	Range B from the pipe I.D. table	
E	Range E from the pipe I.D. table	
Z	Non-standard pipe I.D. range or line sizes greater than 12-in.	
Pipe mate	rial/mounting assembly material	
С	CS (A105)	*
S	316 SST	*
0(1)	No mounting (customer supplied)	*
G	Chrome-moly grade F-11	
N	Chrome-moly grade F-22	
J	Chrome-moly grade F-91	
Piping ori	entation	
Н	Horizontal piping	*
D	Vertical piping with downwards flow	*
U	Vertical piping with upwards flow	*
_		

## Table 15. Rosemount 2051CFA Annubar Flow Meter Ordering Information

Rosemo	ount Annubar type	
P	Pak-lok	*
F	Flanged with opposite side support	*
Sensor	material	
S	316 SST	*
Sensor	size	
1	Sensor size 1 — line sizes 2- to 8-in. (50 to 200 mm)	*
2	Sensor size 2 — line sizes 6- to 96-in. (150 to 2400 mm)	*
3	Sensor size 3 — line sizes greater than 12-in. (300 mm)	
Mounti	ing type	
T1	Compression or threaded connection	*
A1	ANSI Class 150 RF	*
A3	ANSI Class 300 RF ANSI	*
A6	ANSI Class 600 RF ANSI	*
D1	DN PN 16 flange	*
D3	DN PN 40 flange	*
D6	DN PN 100 flange	*
R1	ANSI Class 150 RTJ flange	
R3	ANSI Class 300 RTJ flange	
R6	ANSI Class 600 RTJ flange	
Opposi	te side support or packing gland	
0	No opposite side support or packing gland (required for pak-lok and flange-lok models)	*
	Opposite side support (required for flanged models)	
С	NPT threaded opposite support assembly – extended tip	*
D	Welded opposite support assembly – extended tip	*
	Isolation valve for flo-tap models	
0	Not applicable or customer supplied	*
Temper	rature measurement	
T	Integral RTD – not available with flanged model greater than Class 600	*
0	No temperature sensor	*
R	Remote thermowell and RTD	
Transm	itter connection platform	
3	Direct-mount, Integral 3-valve manifold – not available with flanged model greater than Class 600	*
5	Direct -mount, 5-valve manifold – not available with flanged model greater than Class 600	*
7	Remote-mount NPT connections (1/2-in. FNPT)	*
8	Remote-mount SW connections (1/2-in.)	

## Table 15. Rosemount 2051CFA Annubar Flow Meter Ordering Information

The starred offerings (★) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

tial pressure range		
0 to 25 inH <sub>2</sub> O (0 to 62,3 mbar)		*
0 to 250 inH <sub>2</sub> O (0 to 623 mbar)		*
0 to 1000 inH <sub>2</sub> O (0 to 2,5 bar)		*
ter output		
4–20 mA with digital signal based on HART Protoc	col	*
FOUNDATION Fieldbus Protocol		*
PROFIBUS PA Protocol		*
Wireless		*
Low-power, 1–5 Vdc with digital signal based on H	IART Protocol	
ter housing material	Conduit entry size	
Aluminum	<sup>1</sup> /2–14 NPT	*
Aluminum	M20 x 1.5	*
SST	1/2-14 NPT	*
SST	M20 x 1.5	*
Engineered polymer	No conduit entries	*
Aluminum	G <sup>1</sup> / <sub>2</sub>	
SST	G <sup>1</sup> / <sub>2</sub>	
ter performance class		
2.3 percent flow rate accuracy, 5:1 flow turndown	, 2-year stability	*
	0 to 25 inH <sub>2</sub> O (0 to 62,3 mbar) 0 to 250 inH <sub>2</sub> O (0 to 623 mbar) 0 to 1000 inH <sub>2</sub> O (0 to 2,5 bar)  ter output  4-20 mA with digital signal based on HART Protocol FOUNDATION Fieldbus Protocol Wireless Low-power, 1-5 Vdc with digital signal based on H ter housing material Aluminum Aluminum SST SST Engineered polymer Aluminum SST SST Engineered polymer Aluminum SST ter performance class	0 to 25 inH <sub>2</sub> O (0 to 62,3 mbar) 0 to 250 inH <sub>2</sub> O (0 to 623 mbar) 0 to 1000 inH <sub>2</sub> O (0 to 2,5 bar)  ter output  4–20 mA with digital signal based on HART Protocol FOUNDATION Fieldbus Protocol PROFIBUS PA Protocol Wireless Low-power, 1–5 Vdc with digital signal based on HART Protocol  ter housing material  Aluminum  Aluminum  M20 x 1.5 SST  I/2–14 NPT  SST  M20 x 1.5 Engineered polymer  Aluminum  G1/2 SST  G1/2 SST  G1/2

## Wireless options (requires wireless output code X and engineered polymer housing code P)

Wireless trai	nsmit rate, operating frequency and protocol	
WA3	User configurable transmit rate, 2.4GHz WirelessHART	*
Antenna and	l SmartPower	
WP5	Internal antenna, compatible with Green Power Module (I.S. Power Module sold separately)	*

## **Options** (include with selected model number)

Extended pr	oduct warranty	
WR3	3-year limited warranty	*
WR5	5-year limited warranty	*
Pressure tes	ting	
P1	Hydrostatic testing with Certificate	
PX	Extended hydrostatic testing	
Special clear	ning	
P2	Cleaning for special services	
PA	Cleaning per ASTM G93 level D (section 11.4)	

## Table 15. Rosemount 2051CFA Annubar Flow Meter Ordering Information

to additiona	al delivery lead time.	
Material	testing	
V1	Dye penetrant exam	
Material	examination	
V2	Radiographic examination	
Special in	nspection	·
QC1	Visual and dimensional inspection with certificate	*
QC7	Inspection and performance certificate	*
Surface f	finish	
RL	Surface finish for low pipe Reynolds number in gas and steam	*
RH	Surface finish for high pipe Reynolds number in liquid	*
Material	traceability certification <sup>(5)</sup>	
Q8	Material Traceability Certification per EN 10474:2004 3.1	*
Positive	material Identification	·
Q76	PMI for primary elements	
Code cor	nformance	
J2	ANSI/ASME B31.1	
J3	ANSI/ASME B31.3	
Material	s conformance <sup>(6)</sup>	
J5	NACE MR-0175/ISO 15156	
Country	certification	
J6	European Pressure Directive (PED)	*
J1	Canadian Registration	
Instrume	ent connections for remote mount options	
G2	Needle valves, SST	*
G6	OS&Y gate valve, SST	*
G1	Needle valves, CS	
G3	Needle valves, alloy C-276	
G5	OS&Y gate valve, CS	
G7	OS&Y gate valve, alloy C-276	
Special s	hipment	
Y1	Mounting hardware shipped separately	*
Product	certifications	
E1 <sup>(3)</sup>	ATEX Flameproof	*
E2 <sup>(3)</sup>	INMETRO Flameproof	*
E3 <sup>(3)</sup>	China Flameproof	*

Table 15. Rosemount 2051CFA Annubar Flow Meter Ordering Information

addiciona	actively read differ	
E5	FM Explosion-proof, Dust Ignition-proof	*
E4	TIIS Flameproof	*
E6	CSA Explosion-proof, Dust Ignition-proof, Division 2	*
E7 <sup>(3)</sup>	IECEx Flameproof	*
EM	Technical Regulations Custom Union (EAC) Flameproof	*
I1 <sup>(3)</sup>	ATEX Intrinsic Safety	*
I2 <sup>(3)</sup>	INMETRO Intrinsically Safe	*
I3 <sup>(3)</sup>	China Intrinsic Safety	*
15	FM Intrinsically Safe, Division 2	*
16	CSA Intrinsically Safe	*
I7 <sup>(3)</sup>	IECEx Intrinsic Safety	*
IA <sup>(3)(7)</sup>	ATEX FISCO Intrinsic Safety; for FOUNDATION Fieldbus protocol only	*
IB	INMETRO FISCO Intrinsic Safety	*
IE <sup>(3)(7)</sup>	FM FISCO Intrinsically Safe	*
IF <sup>(3)(7)</sup>	CSA FISCO Intrinsically Safe	*
IG <sup>(3)(7)</sup>	IECEx FISCO Intrinsically Safe	*
IM	Technical Regulations Custom Union (EAC) Intrinsic Safety	*
K1 <sup>(3)</sup>	ATEX Flameproof, Intrinsic Safety, Type n, Dust	*
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E5 and I5)	*
K6	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E6 and I6)	*
K7 <sup>(3)</sup>	IECEx Flameproof, Dust Ignition-proof, Intrinsic Safety, Type n (combination of E7, I7, and N7)	*
KA <sup>(3)</sup>	ATEX and CSA Flameproof, Intrinsically Safe, Division 2	*
КВ	FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E5, E6, I5, and I6)	*
KC <sup>(3)</sup>	FM and ATEX Explosion-proof, Intrinsically Safe, Division 2	*
KD <sup>(3)</sup>	FM, CSA, and ATEX Explosion-proof, Intrinsically Safe (combination of E5, I5, E6, I6, E1, and I1)	*
KM	Technical Regulations Custom Union (EAC) Flameproof, Intrinsic Safety	*
N1 <sup>(3)</sup>	ATEX Type n	*
N7 <sup>(3)</sup>	IECEx Type n	*
ND <sup>(3)</sup>	ATEX Dust	*
Shipboar	d approvals	
SBS	American Bureau of Shipping	*
Sensor fil	l fluid and O-ring options	
L1 <sup>(8)</sup>	Inert sensor fill fluid	*
L2	Graphite-filled (PTFE) O-ring	*
LA <sup>(8)</sup>	Inert sensor fill fluid and graphite-filled (PTFE) O-ring	*
Display a	nd interface options	
M4 <sup>(9)</sup>	LCD II I WILLOW	Ι.
	LCD display with LOI	<b>*</b>

#### Table 15. Rosemount 2051CFA Annubar Flow Meter Ordering Information

Transmit	ter calibration certification	
Q4	Calibration Certificate for Transmitter	*
Quality c	ertification for safety <sup>(10)</sup>	
QS	Prior-use certificate of FMEDA data	*
QT	Safety certified to IEC 61508 with certificate of FMEDA	*
Transient	protection <sup>(8)(11)</sup>	
T1	Transient terminal block	*
Manifold	for remote mount option	
F2	3-valve manifold, SST	*
F6	5-valve manifold, SST	*
F1	3-valve manifold, CS	
F5	5-valve manifold, CS	
Plantwel	control functionality <sup>(7)</sup>	
A01	FOUNDATION Fieldbus advanced control function block suite	*
Hardwar	e adjustments	
D4 <sup>(12)</sup>	Zero and span hardware adjustments	*
DZ <sup>(13)</sup>	Digital zero trim	*
Alarm lin	nit <sup>(12)</sup>	
C4 <sup>(14)</sup>	NAMUR alarm and saturation levels, high alarm	*
CN <sup>(14)</sup>	NAMUR alarm and saturation levels, low alarm	*
CR	Custom alarm and saturation signal levels, high alarm (requires C1 and Configuration Data Sheet)	*
CS	Custom alarm and saturation signal levels, low alarm (requires C1 and Configuration Data Sheet)	*
CT	Low alarm (standard Rosemount alarm and saturation levels)	*
Ground s	crew <sup>(8)(15)</sup>	
V5	External ground screw assembly	*
HART rev	ision configuration <sup>(12)</sup>	
HR5 <sup>(16)</sup>	Configured for HART revision 5	*
HR7 <sup>(17)</sup>	Configured for HART revision 7	*
Typical m	odel number: 2051CFA D L 060 D C H P S 2 T1 0 0 0 3 2A A 1A 3	

- 1. Provide the "A" dimension for flanged (page 217) and Pak-Lok (page 216).
- 2. HART Revision 5 is the default HART output. The Rosemount 2051 with Selectable HART can be factory or field configured to HART Revision 7. To order HART Revision 7 factory configured, add option code HR7.
- 3. Not available with low power output code M.
- 4. Only available with output code X.
- 5. Instrument connections for remote mount options and isolation valves for flo-tap models are not included in the Material Traceability Certification.
- 6. Materials of Construction comply with metallurgical requirements within NACE MR0175/ISO for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.

- 7. Only valid with FOUNDATION Fieldbus output code F.
- 8. Not available with output code X.
- 9. Not available with FOUNDATION Fieldbus (output code F) or wireless (output code X).
- 10. Only available with 4–20 mA HART (output code A).
- 11. Not available with Housing code 00, 5A or 7J. The T1 option is not needed with FISCO Product Certifications, transient protection is included with the FISCO Product Certification code IA.
- 12. Only available with 4–20 mA HART (output codes A and M).
- 13. Only available with HART 4–20 mA (output codes A and M) and wireless (output code X).
- 14. NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field.
- 15. The V5 option is not needed with the T1 option; external ground screw assembly is included with the T1 option.
- 16. Configures the HART output to HART Revision 5. The device can be field configured to HART Revision 7 if needed.
- 17. Configures the HART output to HART Revision 7. The device can be field configured to HART Revision 5 if needed.



## **Rosemount 2051CFC Compact Flow Meter ordering information**

- Compact conditioning flow meters reduce straight piping requirements to 2D upstream and 2D downstream from most flow disturbances
- Simple installation of compact flow meters between any existing raised-face flanges

Specification and selection of product materials, options, or components must be made by the purchaser of the equipment. See page 126 for more information on material selection.

## Table 16. Rosemount 2051CFC Compact Flow Meter Ordering Information

Model	Product description	
2051CFC	Compact flow meter	
Measurem	ent type	
D	Differential Pressure	*
Primary ele	ement technology	
A	Rosemount Annubar Averaging Pitot Tube	*
С	Conditioning orifice plate	*
Р	Orifice plate	*
Material ty	pe	
S	316 SST	*
Line size		
005 <sup>(1)</sup>	¹/₂-in. (15 mm)	*
010 <sup>(1)</sup>	1-in. (25 mm)	*
015 <sup>(1)</sup>	1 <sup>1</sup> / <sub>2</sub> -in. (40 mm)	*
020	2-in. (50 mm)	*
030	3-in. (80 mm)	*
040	4-in. (100 mm)	*
060	6-in. (150 mm)	*
080	8-in. (200 mm)	*
100(2)(3)	10-in. (250 mm)	*
120 <sup>(2)(3)</sup>	12-in. (300 mm)	*
Primary ele	ement type	
N000	Rosemount Annubar sensor size 1	*
N040	0.40 beta ratio	*
N050	0.50 beta ratio	*
N065 <sup>(4)</sup>	0.65 beta ratio	*
Temperatu	re measurement	
0	No temperature sensor	*
T <sup>(5)</sup>	Integral RTD	
R	Remote thermowell and RTD	

## Table 16. Rosemount 2051CFC Compact Flow Meter Ordering Information

The starred offerings ( $\star$ ) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Transm	itter connection platform		
3	Direct-mount, integral 3-valve manifold		*
7	Remote-mount, NPT connections		*
Differer	ntial pressure range		
1	0 to 25 inH <sub>2</sub> O (0 to 62,3 mbar)		*
2	0 to 250 inH <sub>2</sub> O (0 to 623 mbar)		*
3	0 to 1000 inH <sub>2</sub> O (0 to 2,5 bar)		*
Transm	itter output		·
A <sup>(6)</sup>	4–20 mA with digital signal based on HAR	T Protocol	*
F	FOUNDATION Fieldbus Protocol		*
W	PROFIBUS PA Protocol		*
Х	Wireless		*
М	Low-power, 1–5 Vdc with digital signal bas	sed on HART Protocol	
Transm	itter housing material	Conduit entry size	
A	Aluminum	1/2–14 NPT	*
В	Aluminum	M20 x 1.5	*
J	SST	¹/2–14 NPT	*
K <sup>(7)</sup>	SST	M20 x 1.5	*
P <sup>(8)</sup>	Engineered polymer	No conduit entries	*
D	Aluminum	G <sup>1</sup> / <sub>2</sub>	
M <sup>(7)</sup>	SST	G <sup>1</sup> / <sub>2</sub>	
Transm	itter performance class		
1	up to ±2.25% flow rate accuracy, 5:1 flow t	curndown, 3-year stability	*
	1		

## Wireless options (requires wireless output code X and engineered polymer housing code P)

Wireless transmit rate, operating frequency and protocol		
WA3	User configurable transmit rate, 2.4GHz WirelessHART Protocol	*
Antenna and SmartPower		
WP5	Internal antenna, compatible with Green Power Module (I.S. Power Module sold separately)	*

## **Options** (include with selected model number)

Extended product warranty		
WR3	3-year limited warranty	*
WR5	5-year limited warranty	*

## Table 16. Rosemount 2051CFC Compact Flow Meter Ordering Information

	elivery lead time.	
Installation	accessories	
AB	ANSI alignment ring (Class 150) (only required for 10- and 12-in. [250 and 300 mm] line sizes)	*
AC	ANSI alignment ring (Class 300) (only required for 10- and 12-in. [250 and 300 mm] line sizes)	*
AD	ANSI alignment ring (Class 600) (only required for 10- and 12-in. [250 and 300 mm] line sizes)	*
DG	DIN alignment ring (PN16)	*
DH	DIN alignment ring (PN40)	*
DJ	DIN alignment ring (PN100)	*
JB	JIS alignment ring (10K)	
JR	JIS alignment ring (20K)	
JS	JIS alignment ring (40K)	
Remote ada	apters	
FE	Flange adapters 316 SST (1/2-in NPT)	*
High tempe	erature application	
HT	Graphite valve packing (T <sub>max</sub> = 850 °F)	
Flow calibr	ation	
WC <sup>(9)</sup>	Flow calibration, 3 Pt, conditioning orifice option C (all pipe schedules)	
WD <sup>(10)</sup> (11)	Flow calibration, 10 Pt, conditioning orifice option C (all schedules), Rosemount Annubar option A (schedule 40)	
Pressure te	sting	
P1	Hydrostatic testing with certificate	
Special clea	ning <sup>(12)</sup>	
P2	Cleaning for special services	
PA	Cleaning per ASTM G93 level D (section 11.4)	
Special insp	pection	·
QC1	Visual and dimensional inspection with certificate	*
QC7	Inspection and performance certificate	*
Transmitte	r calibration certification	
Q4	Calibration certificate for transmitter	*
Quality cer	tification for safety <sup>(13)</sup>	
QS	Prior-use certificate of FMEDA data	*
QT	Safety certified to IEC 61508 with certificate of FMEDA	*
Material tra	ceability certification	
Q8	Material Traceability Certification per EN 10204:2004 3.1	*
Positive ma	iterial identification	
Q76	PMI for primary elements	
	<u> </u>	

## Table 16. Rosemount 2051CFC Compact Flow Meter Ordering Information

Code cor	oformance The Control of the Control	
J2	ANSI/ASME B31.1	
<u>.                                    </u>	ANSI/ASME B31.3	
<u> </u>	ANSI/ASME B31.8	
Material	s conformance <sup>(14)</sup>	,
 J5	NACE MR-0175/ISO 15156	
	certification	
J1	Canadian Registration	
Product	certifications	,
E1 <sup>(7)</sup>	ATEX Flameproof	*
E2 <sup>(7)</sup>	INMETRO Flameproof	*
E3 <sup>(7)</sup>	China Flameproof	*
E5	FM Explosion-proof, Dust Ignition-proof	*
E6	CSA Explosion-proof, Dust Ignition-proof, Division 2	*
E7 <sup>(7)</sup>	IECEx Flameproof	*
EM	Technical Regulations Customs Union (EAC) Flameproof	*
I1 <sup>(7)</sup>	ATEX Intrinsic Safety	*
I2 <sup>(7)</sup>	INMETRO Intrinsically Safe	*
I3 <sup>(7)</sup>	China Intrinsic Safety	*
15	FM Intrinsically Safe, Division 2	*
16	CSA Intrinsically Safe	*
17 <sup>(7)</sup>	IECEx Intrinsic Safety	*
IA <sup>(7)</sup>	ATEX FISCO Intrinsic Safety; for FOUNDATION Fieldbus protocol only	*
IB	INMETRO FISCO Intrinsic Safety	*
IE <sup>(7)(15)</sup>	FM FISCO Intrinsically Safe	*
IF <sup>(7)(15)</sup>	CSA FISCO Intrinsically Safe	*
IG <sup>(7)(15)</sup>	IECEx FISCO Intrinsically Safe	*
IM	Technical Regulations Customs Union (EAC) Intrinsic Safety	*
K1 <sup>(7)</sup>	ATEX Flameproof, Intrinsic Safety, Type n, Dust	*
K2	INMETRO Flameproof, Intrinsic Safety, Type n	*
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E5 and I5)	*
K6	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E6 and I6)	*
K7 <sup>(7)</sup>	IECEx Flameproof, Dust Ignition-proof, Intrinsic Safety, Type n (combination of E7, I7, and N7)	*
KA <sup>(7)</sup>	ATEX and CSA Flameproof, Intrinsically Safe, Division 2	*
КВ	FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E5, E6, I5, and I6)	*
KC <sup>(7)</sup>	FM and ATEX Explosion-proof, Intrinsically Safe, Division 2	*

## Table 16. Rosemount 2051CFC Compact Flow Meter Ordering Information

KD <sup>(7)</sup>	FM, CSA, and ATEX Explosion-proof, Intrinsically Safe (combination of E5, I5, E6, I6, E1, and I1)	*
KM	Technical Regulations Customs Union (EAC) Flameproof, Intrinsic Safety (combination of EM and IM)	*
N1 <sup>(7)</sup>	ATEX Type n	*
N7 <sup>(7)</sup>	IECEx Type n	*
ND <sup>(7)</sup>	ATEX Dust	*
Shipboard	approvals	·
SBS	American Bureau of Shipping	*
Sensor fill	fluid and O-ring options	
L1 <sup>(16)</sup>	Inert sensor fill fluid	*
L2	Graphite-filled (PTFE) O-ring	*
LA <sup>(16)</sup>	Inert sensor fill fluid and graphite-filled (PTFE) O-ring	*
Display an	d interface options	
M4 <sup>(17)</sup>	LCD display with LOI	*
M5	LCD display	*
Transient p	protection <sup>(16)(18)</sup>	
T1	Transient terminal block	*
Manifold f	or remote mount option	<u> </u>
F2	3-valve manifold, SST	*
F6	5-valve manifold, SST	*
Alarm limi	t(19)	'
C4 <sup>(20)</sup>	NAMUR alarm and saturation levels, high alarm	*
CN <sup>(20)</sup>	NAMUR alarm and saturation levels, low alarm	*
CR	Custom alarm and saturation signal levels, high alarm (requires C1 and Configuration Data Sheet)	*
CS	Custom alarm and saturation signal levels, low alarm (requires C1 and Configuration Data Sheet)	*
CT	Low alarm (standard Rosemount alarm and saturation levels)	*
Plantweb	control functionality <sup>(15)</sup>	
A01	FOUNDATION Fieldbus Advanced Control Function Block Suite	*
Hardware	adjustments	
D4 <sup>(19)</sup>	Zero and span hardware adjustments	*
DZ <sup>(21)</sup>	Digital zero trim	*
Ground sc	rew <sup>(22)</sup>	
V5	External ground screw assembly	*
HART revis	ion configuration <sup>(19)</sup>	
HR5 <sup>(23)</sup>	Configured for HART Revision 5	*
HR7 <sup>(24)</sup>	Configured for HART Revision 7	*
Typical mo	del number: 2051CFC D C S 060 N 065 0 3 2 A A 1 WC E5 M5	

- 1. Only available with Primary Element Technology P.
- 2. For the 10- and 12-in. (250 and 300 mm) line size, the alignment ring must be ordered (installation accessories).
- 3. 10- and 12-in. (250 and 300 mm) line sizes not available with Primary Element Technology A.
- 4. For 2-in. (50 mm) line sizes the Primary Element Type is 0.6 for Primary Element Technology code C.
- 5. Available with Primary Element Technology A only.
- 6. HART Revision 5 is the default HART output. The Rosemount 2051 with Selectable HART can be factory or field configured to HART Revision 7. To order HART Revision 7 factory configured, add option code HR7.
- 7. Not available with low power output code M.
- 8. Only available with output code X.
- 9. Available with Primary Element Technology C only.
- 10. Available with Primary Element Technology C or A only.
- 11. For Rosemount Annubar option A, consult factory for pipe schedules other than Sch. 40.
- 12. Available with primary element technology C or P only.
- 13. Only available with 4–20 mA HART (output code A).
- 14. Materials of construction comply with metallurgical requirements within NACE MR0175/ISO for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.
- 15. Only valid with FOUNDATION Fieldbus output code F.
- 16. Not available with output code X.
- 17. Not available with FOUNDATION Fieldbus (output code F) or wireless (output code X).
- 18. Not available with housing code 00, 5A, or 7J. The T1 option is not needed with FISCO Product Certifications, transient protection is included with the FISCO Product Certification code IA.
- 19. Only available with 4–20 mA HART (output codes A and M).
- 20. NAMUR-compliant operation is pre-set at the factory and cannot be changed to standard operation in the field.
- 21. Only available with HART 4–20 mA (output codes A and M) and wireless (output code X).
- 22. The V5 option is not needed with the T1 option; external ground screw assembly is included with the T1 option.
- 23. Configures the HART output to HART Revision 5. The device can be field configured to HART Revision 7 if needed.
- 24. Configures the HART output to HART Revision 7. The device can be field configured to HART Revision 5 if needed.



# Rosemount 2051CFP Integral Orifice Flow Meter ordering information

- Precision honed pipe section for increased accuracy in small line sizes.
- Self-centering plate design prevents alignment errors that magnify measurement inaccuracies in small line sizes.

Specification and selection of product materials, options, or components must be made by the purchaser of the equipment. See page 126 for more information on material selection.

## Table 17. Rosemount 2051CFP Integral Orifice Flow Meter Ordering Information

Model	Product description	
2051CFP	Integral orifice flow meter	
	ent type and type	
D	Differential Pressure	*
Material typ		
F	316 SST, enhanced support body	*
Line size		
005	¹/₂-in. (15 mm)	*
010	1-in. (25 mm)	*
015	1 <sup>1</sup> / <sub>2</sub> -in. (40 mm)	*
Process con	nection	
T1	NPT female body (not available with thermowell and RTD)	*
S1 <sup>(1)</sup>	Socket weld body (not available with thermowell and RTD)	*
P1	Pipe ends: NPT threaded	*
P2	Pipe ends: Beveled	*
D1	Pipe ends: Flanged, DIN PN16, slip-on	*
D2	Pipe ends: Flanged, DIN PN40, slip-on	*
D3	Pipe ends: Flanged, DIN PN100, slip-on	*
W1	Pipe ends: Flanged, RF, ANSI Class 150, weld-neck	*
W3	Pipe ends: Flanged, RF, ANSI Class 300, weld-neck	*
W6	Pipe ends: Flanged, RF, ANSI Class 600, weld-neck	*
W9	Pipe ends: Flanged, RF, ANSI Class 900, weld-neck	*
A1	Pipe ends: Flanged, RF, ANSI Class 150, slip-on	
A3	Pipe ends: Flanged, RF, ANSI Class 300, slip-on	
A6	Pipe ends: Flanged, RF, ANSI Class 600, slip-on	
R1	Pipe ends: Flanged, RTJ, ANSI Class 150, slip-on	
R3	Pipe ends: Flanged, RTJ, ANSI Class 300, slip-on	
R6	Pipe ends: Flanged, RTJ, ANSI Class 600, slip-on	
R9	Pipe ends: Flanged, RTJ, ANSI Class 900, weld-neck	

Table 17. Rosemount 2051CFP Integral Orifice Flow Meter Ordering Information

Orifice plate	e material	
S	316/316L SST	*
Bore size op	tion	
0066	0.066-in. (1.68 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	*
0109	0.109-in. (2.77 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	*
0160	0.160-in. (4.06 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	*
0196	0.196-in. (4.98 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	*
0260	0.260-in. (6.60 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	*
0340	0.340-in. (8.64 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	*
0150	0.150-in. (3.81 mm) for 1-in. pipe	*
0250	0.250-in. (6.35 mm) for 1-in. pipe	*
0345	0.345-in. (8.76 mm) for 1-in. pipe	*
0500	0.500-in. (12.70 mm) for 1-in. pipe	*
0630	0.630-in. (16.00 mm) for 1-in. pipe	*
0800	0.800-in. (20.32 mm) for 1-in. pipe	*
0295	0.295-in. (7.49 mm) for 11/2-in. pipe	*
0376	0.376-in. (9.55 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	*
0512	0.512-in. (13.00 mm) for 11/2-in. pipe	*
0748	0.748-in. (19.00 mm) for 11/2-in. pipe	*
1022	1.022-in. (25.96 mm) for 11/2-in. pipe	*
1184	1.184-in. (30.07 mm) for 11/2-in. pipe	*
0010	0.010-in. (0.25 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	
0014	0.014-in. (0.36 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	
0020	0.020-in. (0.51 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	
0034	0.034-in. (0.86 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	
XXXX	Special bore size	
Transmitter	connection platform	
D3	Direct-mount, 3-valve manifold, SST	*
D5	Direct-mount, 5-valve manifold, SST	*
R3	Remote-mount, 3-valve manifold, SST	*
R5	Remote-mount, 5-valve manifold, SST	*
Differential	pressure ranges	
1	0 to 25 inH <sub>2</sub> O (0 to 62,3 mbar)	*
2	0 to 250 inH <sub>2</sub> O (0 to 623 mbar)	*
3	0 to 1000 inH <sub>2</sub> O (0 to 2,5 bar)	*
Transmitter	output	
A <sup>(2)</sup>	4–20 mA with digital signal based on HART Protocol	*
F	FOUNDATION Fieldbus Protocol	*
W	PROFIBUS PA Protocol	*

## Table 17. Rosemount 2051CFP Integral Orifice Flow Meter Ordering Information

The starred offerings ( $\star$ ) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Х	Wireless		*
М	Low-power, 1–5 Vdc with digital signal ba	sed on HART Protocol	
Transm	itter housing material	Conduit entry size	
A	Aluminum	¹/2-14 NPT	*
В	Aluminum	M20 x 1.5	*
J	SST	1/2–14 NPT	*
K <sup>(3)</sup>	SST	M20 x 1.5	*
P <sup>(4)</sup>	Engineered polymer	No conduit entries	*
D	Aluminum	G <sup>1</sup> / <sub>2</sub>	
M <sup>(3)</sup>	SST	G <sup>1</sup> / <sub>2</sub>	
Transm	itter performance class		
1	Up to ±2.25% flow rate accuracy, 5:1 flow	turndown, 2-year stability	*

## Wireless options (requires wireless output code X and engineered polymer housing code P)

Wireless transmit rate, operating frequency and protocol		
WA3	User configurable transmit rate, 2.4 GHz WirelessHART Protocol	*
Antenna and SmartPower		
WP5	Internal antenna, compatible with Green Power Module (I.S. Power Module sold separately)	*

## **Options** (include with selected model number)

Extende	d product warranty	
WR3	3-year limited warranty	*
WR5	5-year limited warranty	*
Tempera	ture sensor	
RT <sup>(5)</sup>	Thermowell and RTD	$\top$
Optiona	connection	
G1	DIN 19213 transmitter connection	*
Pressure	testing <sup>(6)</sup>	
P1	Hydrostatic testing with certificate	$\top$
Special c	leaning	
P2	Cleaning for special services	
PA	Cleaning per ASTM G93 level D (section 11.4)	
Material	testing	
V1	Dye penetrant exam	
Material	examination	
V2	Radiographic examination (available only with process connection code W1, W3, W6, and W9)	

## Table 17. Rosemount 2051CFP Integral Orifice Flow Meter Ordering Information

	. (3)	
Flow calibra	rtion <sup>(7)</sup>	
WD	Discharge coefficient verification	
Special insp	ection	
QC1	Visual and dimensional inspection with certificate	*
QC7	Inspection and performance certificate	*
Material tra	ceability certification	
Q8	Material traceability certification per EN 10204:2004 3.1	*
Positive ma	terial identification	
Q76	PMI for primary elements	
Code confo	rmance <sup>(8)</sup>	
 J2	ANSI/ASME B31.1	
<u>J</u> 3	ANSI/ASME B31.3	
J4	ANSI/ASME B31.8	
Materials co	onformance <sup>(9)</sup>	
 J5	NACE MR-0175/ISO 15156	
Country cer	tification	
 J6	European Pressure Directive (PED)	*
J1	Canadian Registration	
Transmitter	calibration certification	
Q4	Calibration Certificate for Transmitter	*
Quality cert	ification for safety <sup>(10)</sup>	
QS	Prior-use certificate of FMEDA data	*
QT	Safety certified to IEC 61508 with certificate of FMEDA	*
Product cer	tifications <sup>(11)</sup>	
E1 <sup>(3)</sup>	ATEX Flameproof	*
E2 <sup>(3)</sup>	INMETRO Flameproof	*
E3 <sup>(3)</sup>	China Flameproof	*
E5	FM Explosion-proof, Dust Ignition-proof	*
E6	CSA Explosion-proof, Dust Ignition-proof, Division 2	*
E7 <sup>(3)</sup>	IECEx Flameproof	*
EM	Technical Regulations Customs Union (EAC) Flameproof	*
EP	Republic of Korea Flameproof	*
I1 <sup>(3)</sup>	ATEX Intrinsic Safety	*
12 <sup>(3)</sup>	INMETRO Intrinsically Safe	*
I3 <sup>(3)</sup>	China Intrinsic Safety	*
15	FM Intrinsically Safe, Division 2	*

Table 17. Rosemount 2051CFP Integral Orifice Flow Meter Ordering Information

16	CSA Intrinsically Safe	*
I7 <sup>(3)</sup>	IECEx Intrinsic Safety	*
IA <sup>(3)(12)</sup>	ATEX FISCO Intrinsic Safety; for FOUNDATION Fieldbus protocol only	*
IB	INMETRO FISCO Intrinsic Safety	*
ID	TIIS FISCO Intrinsic Safety	*
IE <sup>(3)(12)</sup>	FM FISCO Intrinsically Safe	*
IF <sup>(3)(12)</sup>	CSA FISCO Intrinsically Safe	*
IG <sup>(3)(12)</sup>	IECEx FISCO Intrinsically Safe	*
IP	Republic of Korea Intrinsic Safety	*
IM	Technical Regulations Customs Union (EAC) Intrinsic Safety	*
K1 <sup>(3)(12)</sup>	ATEX Flameproof, Intrinsic Safety, Type n, Dust	*
K2	INMETRO Flameproof, Intrinsic Safety, Type n	*
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E5 and I5)	*
K6	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E6 and I6)	*
K7 <sup>(3)</sup>	IECEx Flameproof, Dust Ignition-proof, Intrinsic Safety, Type n (combination of E7, I7, and N7)	*
KA <sup>(3)</sup>	ATEX and CSA Flameproof, Intrinsically Safe, Division 2	*
КВ	FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E5, E6, I5, and I6)	*
KC <sup>(3)</sup>	FM and ATEX Explosion-proof, Intrinsically Safe, Division 2	*
KD <sup>(3)</sup>	FM, CSA, and ATEX Explosion-proof, Intrinsically Safe (combination of E5, I5, E6, I6, E1, and I1)	*
KM	Technical Regulations Customs Union (EAC) Flameproof, Intrinsic Safety	*
KP	Republic of Korea Flameproof, Intrinsic Safety	*
N1 <sup>(3)</sup>	ATEX Type n	*
N7 <sup>(3)</sup>	IECEx Type n	*
Shipboard	l approvals	·
SBS	American Bureau of Shipping	*
Sensor fill	fluid and O-ring options	
L1 <sup>(13)</sup>	Inert sensor fill fluid	*
L2	Graphite-filled (PTFE) O-ring	*
LA <sup>(13)</sup>	Inert sensor fill fluid and graphite-filled (PTFE) O-ring	*
Display ar	nd interface options	·
M4 <sup>(17)</sup>	LCD display with LOI	*
M5	LCD display	*
Transient	protection <sup>(13)(14)</sup>	
T1	Transient terminal block	*
Plantweb	control functionality <sup>(12)</sup>	
A01	FOUNDATION Fieldbus advanced control function block suite	*
	I control of the second of the	

## Table 17. Rosemount 2051CFP Integral Orifice Flow Meter Ordering Information

	o additional delivery lead time.			
Plantweb diagnostic functionality <sup>(12)</sup>				
FOUNDATION Fieldbus diagnostic suite	*			
Alarm levels <sup>(15)</sup>				
NAMUR alarm and saturation levels, high alarm	*			
NAMUR alarm and saturation levels, low alarm	*			
Custom alarm and saturation signal levels, high alarm (requires C1 and Configuration Data Sheet)	*			
Custom alarm and saturation signal levels, low alarm (requires C1 and Configuration Data Sheet)	*			
Low alarm (standard Rosemount alarm and saturation levels)	*			
adjustments				
Zero and span hardware adjustments	*			
Digital zero trim	*			
Ground screw <sup>(13)(18)</sup>				
External ground screw assembly	*			
HART revision configuration <sup>(15)</sup>				
Configured for HART revision 5	*			
Configured for HART revision 7	*			
Typical model number: 2051CFP D F 010 W1 S 0500 D3 2 A A 1 E5 M5				
	FOUNDATION Fieldbus diagnostic suite  els(15)  NAMUR alarm and saturation levels, high alarm  NAMUR alarm and saturation levels, low alarm  Custom alarm and saturation signal levels, high alarm (requires C1 and Configuration Data Sheet)  Custom alarm and saturation signal levels, low alarm (requires C1 and Configuration Data Sheet)  Low alarm (standard Rosemount alarm and saturation levels)  e adjustments  Zero and span hardware adjustments  Digital zero trim  crew(13)(18)  External ground screw assembly  sion configuration(15)  Configured for HART revision 5  Configured for HART revision 7			

- $1. \hspace{1.5cm} \hbox{To improve pipe perpendicularity for gasket sealing, socket diameter is smaller than standard pipe O.D.} \\$
- 2. HART Revision 5 is the default HART output. The Rosemount 2051 with Selectable HART can be factory or field configured to HART Revision 7. To order HART Revision 7 factory configured, add option code HR7.
- 3. Not available with low power output code M.
- 4. Only available with output code X.
- Thermowell material is the same as the body material.
- 6. Does not apply to process connection codes T1 and S1.
- 7. Not available for bore sizes 0010, 0014, 0020, 0034, 0066, or 0109.
- 8. Not available with DIN process connection codes D1, D2, or D3.
- 9. Materials of construction comply with metallurgical requirements within NACE MR0175/ISO for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.
- 10. Only available with 4–20 mA HART (output code A).
- 11. If select body material and type code F, consult the factory for product certifications availability
- 12. Only valid with FOUNDATION Fieldbus output code F.
- 13. Not available with output code X.
- 14. Not available with Housing code 00, 5A, or 7J. The T1 option is not needed with FISCO Product Certifications, transient protection is included with the FISCO Product Certification code IA.
- 15. Only available with 4–20 mA HART (output codes A and M).
- 16. NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field.
- 17. Only available with HART 4–20 mA (output codes A and M) and wireless (output code X).
- 18. The V5 option is not needed with E1, E2, E3, E4, E7, EM, EP, K1, K2, K4, K7, KA, KC, KD, KP, KM, N1, N2, N3, N7, ND, NK, or T1 as the external ground screw assembly is included with these options.
- 19. Configures the HART output to HART Revision 5. The device can be field configured to HART Revision 7 if needed.
- 20. Configures the HART output to HART Revision 7. The device can be field configured to HART Revision 5 if needed.

# **Specifications**

## **Performance specifications**

Performance assumptions include: measured pipe I.D., transmitter is trimmed for optimum flow accuracy, and performance is dependent on application parameters.

## Table 18. Flow Performance - Flow Reference Accuracy<sup>(1)</sup>

Rosemount 2051CFA Annubar Flow Meter				
Ranges 2–3	±1.105% of flow rate at 5:1 flow turndown			
Rosemount 2051CFC_A Compact Annubar Flow Meter - Rosemount Annubar option A				
D 2.2	Standard	±2.60% of flow rate at 5:1 flow turndown		
Ranges 2–3	Calibrated	±2.30% of Flow rate at 5:1 flow turndown		
Rosemount 205	Rosemount 2051CFC Compact Orifice Flow Meter – conditioning option C			
Ranges 2–3		±2.45% of flow rate at 5:1 flow turndown		
Rosemount 2051CFC Compact Orifice Flow Meter - orifice option P <sup>(2)</sup>				
Ranges 2–3		±2.50% of flow rate at 5:1 flow turndown		
Rosemount 2051CFP Integral Orifice Flow Meter				
	Bore < 0.160	±3.10% of flow rate at 5:1 flow turndown		
D 2.2	0.160 ≤ Bore < 0.500	±2.75% of flow Rate at 5:1 flow turndown		
Ranges 2–3	0.500 ≤ Bore ≤ 1.000	±2.25% of flow rate at 5:1 flow turndown		
	1.000 < Bore	±3.00% of flow rate at 5:1 flow turndown		

<sup>1.</sup> Range 1 flow meters may experience an additional uncertainty up to 0.9%. Consult your Emerson representative for exact specifications.

## Table 19. Warranty<sup>(1)</sup>

Models	Standard <sup>(2)</sup>	Optional extended warranty <sup>(3)</sup>
All Rosemount 3051	1-year limited warranty	WR5: 5-year limited warranty WR3: 3-year limited warranty

<sup>1.</sup> Warranty details can be found in Emerson Terms and Conditions of Sale, Document 63445, Rev G (10/06).

<sup>2.</sup> For smaller line sizes, see Rosemount Compact Orifice.

<sup>2.</sup> Goods are warranted for 12 months from the date of initial installation or 18 months from the date of shipment by seller, whichever period expires first.

<sup>3.</sup> Rosemount extended warranties have a limited warranty of five or three years from date of shipment.

## **Dynamic performance**

	4–20 mA HART <sup>(1)</sup> 1–5 Vdc HART low power	FOUNDATION Fieldbus Protocol <sup>(3)</sup>	Typical HART transmitter response time
Total response time (T <sub>d</sub> + T <sub>c</sub> ) (2):			Transmitter output vs. time
Rosemount 2051CF Range 3-5: Range 1: Range 2: Dead time (Td)		152 milliseconds 307 milliseconds 152 milliseconds 97 milliseconds	Pressure released $T_d$ = Dead time $T_c$ = Time constant Response time = $T_d + T_c$
Nominal total response time     Transmitter Fieldbus output of	bodate rate <sup>(4)</sup> 22 times per second  1. Dead time and update rate apply to all models and ranges; analog output only.  2. Nominal total response time at 75 °F (24 °C) reference conditions.  3. Transmitter Fieldbus output only, segment macro-cycle not included.  4. Does not apply to wireless (output code X). See "WirelessHART (output code X)" on page 124.		36.8% 63.2% of Total Step Change 0% Time

# Vibration effect for Rosemount 2051CFA, 2051CFC

Less than  $\pm 0.1$  percent of URL when tested per the requirements of IEC60770-1 field or pipeline with high vibration level (10–60 Hz 0.21 mm displacement peak amplitude/60–2000 Hz 3 g).

## Vibration effect for Rosemount 2051CFC\_A

Less than  $\pm 0.1$  percent of URL when tested per the requirements of IEC60770-1 field or pipeline with high vibration level (10–60 Hz, 0.15 mm displacement peak amplitude/60–2000 Hz 2q).<sup>(1)</sup>

 SST temperature housing is not recommended with primary element technology A in applications with mechanical vibration.

### Vibration effect for Rosemount 2051CFP

Less than  $\pm 0.1$  percent of URL when tested per the requirements of IEC60068-2-6

(10–1000 Hz test frequency range, 0.075 mm displacement peak amplitude,  $10 \text{ m/s}^2$  acceleration amplitude).

## **Functional specifications**

## Range and sensor limits

Range	2051CF minimum span	Range and sensor limits
1	0.5 inH <sub>2</sub> O (1,24 mbar)	0 to 25 inH <sub>2</sub> O (62,16 mbar)
2	2.5 inH <sub>2</sub> O (4,14 mbar)	0 to 250 inH <sub>2</sub> O (0,62 bar)
3	10 inH <sub>2</sub> O (24,88 mbar)	0 to 1000 inH <sub>2</sub> O (2,49 bar)

## **Service**

Liquid, gas, and steam applications

### **Protocols**

## 4-20 mA HART (output code A)

## Output

Two-wire 4–20 mA, user-selectable for linear or square root output. Digital process variable superimposed on 4–20 mA signal, available to any host that conforms to the HART Protocol.

#### **Power supply**

External power supply required. Standard transmitter operates on 10.5 to 42.4 Vdc with no load.


#### Turn-on time

Performance within specifications less than 2.0 seconds after power is applied to the transmitter.

#### **Load limitations**

Maximum loop resistance is determined by the voltage level of the external power supply, as described by:

Maximum loop resistance = 43.5 x (power supply voltage - 10.5)

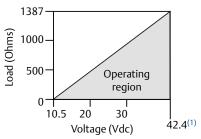

The Field Communicator requires a minimum loop resistance of 250 $\Omega$  for communication.

1. For CSA approval, power supply must not exceed 42.4.

## FOUNDATION Fieldbus (output code F)

## **Power supply**

External power supply required; transmitters operate on 9.0 to 32.0 Vdc transmitter terminal voltage for non-I.S. applications, 9.0 to 30 Vdc for entity model intrinsically safe applications and 9.0 to 17.5 Vdc for FISCO intrinsically safe applications.

#### **Current draw**

17.5 mA for all configurations (including LCD display option)

#### Indication

Optional 2-line LCD display

## FOUNDATION Fieldbus function block

#### **Execution times**

Block	Execution time
Resource	N/A
Transducer	N/A
LCD Display Block	N/A
Analog Input 1, 2	20 milliseconds
PID	25 milliseconds
Arithmetic	20 milliseconds
Input Selection	20 milliseconds
Signal Characterizer	20 milliseconds
Integrator	20 milliseconds
Output Splitter	20 milliseconds
Control Selector	20 milliseconds

FOUNDATION Fieldbus parameters

Schedule Entries	7 (max.)
Links	25 (max.)
Virtual Communications Relationships (VCR)	20 (max.)

#### Standard function blocks

#### Resource block

The resource block contains diagnostic, hardware and electronics information. There are no linkable inputs or outputs to the Resource Block.

#### Sensor transducer block

The sensor transducer block contains sensor information including the sensor diagnostics and the ability to trim the pressure sensor or recall factory calibration.

## LCD display transducer block

The LCD display transducer block is used to configure the LCD display meter.

## Analog input (AI) block

The AI block processes the measurements from the sensor and makes them available to other function blocks. The output value from the AI block is in engineering units and contains a status indicating the quality of the measurement. The AI block is widely used for scaling functionality.

#### Note

The channel, Set XD\_Scale, Set L\_Type, and sometimes Set Out\_Scale are typically configured by instrument personnel. Other AI block parameters, block links, and schedule are typically configured by the control systems configuration engineer.

## Input selector (ISEL) block

The ISEL block can be used to select the first good, Hot Backup, maximum, minimum, or average of as many as eight input values and place it at the output. The block supports signal status propagation.

### Integrator (INT) block

The INT block integrates one or two variables over time. The block compares the integrated or accumulated value to pre-trip and trip limits and generates discrete output signals when the limits are reached.

The INT block is used as a totalizer. This block will accept up to two inputs, has six options how to totalize the inputs, and two trip outputs.

#### Arithmetic (ARTH) block

The ARTH block provides the ability to configure a range extension function for a primary input. It can also be used to compute nine different arithmetic functions including flow with partial density compensation, electronic remote seals, hydrostatic tank gauging, ratio control and others.

#### Signal characterizer (SGCR) block

The SGCR block characterizes or approximates any function that defines an input/output relationship. The function is defined by configuring as many as twenty X,Y coordinates. The block interpolates an output value for a given input value using the curve defined by the configured coordinates. Two separate analog input signals can be processed simultaneously to give two corresponding separate output values using the same defined curve.

#### PID block

The PID function block combines all of the necessary logic to perform PID control. The block supports mode control, signal scaling and limiting, feed forward control, override tracking, alarm limit detection, and signal status propagation.

### **Control selector block**

The control selector Function Block selects one of two or three inputs to be the output. The inputs are normally connected to the outputs of PID or other function blocks. One of the inputs would be considered Normal and the other two overrides.

## **Output splitter block**

The output splitter function block provides the capability to drive two control outputs from a single input. It takes the output of one PID or other control block to control two valves or other actuators.

## **Backup Link Active Scheduler (LAS)**

The transmitter can function as a LAS if the current link master device fails or is removed from the segment.

## PROFIBUS PA (output code W)

#### **Profile version**

3.02

### **Power supply**

External power supply required; transmitters operate on 9.0 to 32.0 Vdc transmitter terminal voltage for non-I.S. applications, 9.0 to 30 Vdc for entity model intrinsically safe applications and 9.0 to 17.5 Vdc for FISCO intrinsically safe applications.

#### **Current draw**

17.5 mA for all configurations (including LCD display option)

### **Output update rate**

Four times per second

#### Standard function blocks

## **Analog Input (AI Block)**

The AI function block processes the measurements and makes them available to the host device. The output value from the AI block is in engineering units and contains a status indicating the quality of the measurement.

## **Physical block**

The physical block defines the physical resources of the device including type of memory, hardware, electronics, and diagnostic information.

#### **Transducer block**

Contains actual sensor measurement data including the sensor diagnostics and the ability to trim the pressure sensor or recall factory defaults.

#### Indication

Optional 2-line LCD display

#### LOI

Optional external configuration buttons.

## WirelessHART (output code X)

#### Output

IEC 62591 (WirelessHART), 2.4 GHz DSSS

## Wireless radio (internal antenna, WP5 option)

■ Frequency: 2.400–2.485 GHz

Channels: 15

■ Modulation: IEEE 802.15.4 compliant DSSS

Transmission: Maximum of 10 dBm EIRP

### Local display

The optional 3-line, 7-digit LCD display can display user-selectable information such as primary variable in engineering units, scaled variable, percent of range, sensor module temperature, and electronics temperature. The display updates based on the wireless update rate.

## Digital zero trim

Digital Zero trim (option DZ) is an offset adjustment to compensate for mounting position effects, up to 5% of URL.

## **Update rate**

User selectable 1 sec. to 60 min.

#### Power module

Field replaceable, keyed connection eliminates the risk of incorrect installation, Intrinsically Safe Lithium-thionyl chloride Power Module with PBT/PC enclosure. Ten-year life at one minute update rate. (1)

. Reference conditions are 70 °F (21 °C), and routing data for three additional

#### Note

Continuous exposure to ambient temperature limits of -40 to  $185\,^{\circ}$ F (-40 to  $85\,^{\circ}$ C) may reduce specified life by less than 20 percent.

## HART 1-5 Vdc low power (output code M)

### Output

Three wire 1–5 Vdc output, user-selectable for linear or square root output. Digital process variable superimposed on voltage signal, available to any host conforming to the *HART* protocol.

## Rosemount 2051

Digital communications based on HART Revision 5 Protocol.

#### Rosemount 2051 with selectable HART

The 2051 with Selectable HART comes with Selectable HART Revisions. Digital communications based on HART Revision 5 (default) or Revision 7 (option code HR7) protocol can be selected. The HART revision can be switched in the field using any HART based configuration tool or the optional LOI.

#### LOI

The LOI utilizes a two button menu with internal and external configuration buttons. Internal buttons are always configured for LOI. External buttons can be configured for either LOI, (option code M4), analog zero and span (option code D4) or Digital Zero Trim (option code DZ). For LOI configuration menu, see Rosemount 2051 with Selectable HART Reference Manual.

## **Power supply**

External power supply required. Standard transmitter operates on 9 to 28 Vdc with no load.

#### **Power consumption**

3.0 mA, 27-84 mW

## **Output load**

100 kΩ or greater (meter input impedance)

#### Turn-on time

Performance within specifications less than 2.0 seconds after power is applied to the transmitter.

## **Overpressure limits**

Transmitters withstand the following limits without damage:

### **Rosemount 2051CF Flow Meters**

- Ranges 2–3: 3626 psig (250 bar)
   4500 psig (310,3 bar) for option code P9
- Range 1: 2000 psig (137,9 bar)

## Static pressure limit

- Operates within specifications between static line pressures of –14.2 psiq (0.034 bar) and 3626 psiq (250 bar)
- Range 1: 0.5 psia to 2000 psig (34 mbar and 137,9 bar)

## **Temperature limits**

# For Rosemount 2051CFA temperature limits-process temperature limits

### **Direct mount transmitter**

- 500 °F (260 °C)
- 750 °F (398 °C) when used with a direct mount, high temperature 5-valve manifold (transmitter connection platform code 6).
   Maximum temperature limit for steam processes is 650 °F (343 °C).
- 400 °F (204 °C) when top mounted in steam service

#### Remote mount transmitter

- 1250 °F (677 °C) Alloy C-276 sensor material (for superheated steam applications above 1000 °F (538 °C), it is recommended that the Rosemount 585 with alloy 800H sensor material is used.)
- 850 °F (454 °C) SST sensor material

## Pressure and temperature limits (1)

#### Direct mount transmitter

- Up to Class 900 ANSI (2160 psig at 100 °F [149 bar at 38 °C])
- Integral temperature measurement is not available with flanged mounting type greater than Class 900

#### Remote mount transmitter

Up to Class 2500 ANSI (6000 psig at 100 °F [416 bar at 38 °C]).

1. Static pressure selection may effect pressure limitations.

# For Rosemount 2051CFC temperature limits-process temperature limits

#### **Direct mount transmitter**

- -40 to 450 °F (-40 to 232 °C)
- Up to 400 °F (204 °C) when top mounted in steam service

## Remote mount transmitter

-148 to 850 °F (-100 to 454 °C) - SST

# For Rosemount 2051CFP temperature limits-process temperature limits<sup>(1)</sup>

#### Standard (direct/remote mount)

-40 to 450 °F (-40 to 232 °C)

### Extended (remote mount only with option code GT)

-112 to 850 °F (-80 to 454 °C)

1. Consult factory for all-welded design for extended temperatures.

#### Transmitter temperature limits(1)

#### **Ambient**

-40 to 185 °F (-40 to 85 °C) with LCD display<sup>(2)</sup>: -40 to 175 °F (-40 to 80 °C)

## Storage

-50 to 230 °F (-46 to 110 °C) with LCD display: -40 to 185 °F (-40 to 85 °C)

- 1. Limits for silicone fill fluid only.
- LCD display may not be readable and LCD display updates will be slower at temperatures below –4 °F (–20 °C).

## Remote mount transmitter temperature limits

At atmospheric pressures and above.

**Table 20. Temperature Limits** 

Sensors	Limits
Silicone fill sensor <sup>(1)</sup>	-40 to 250 °F (-40 to 121 °C)
Inert fill sensor <sup>(1)</sup>	–40 to 185 °F (–40 to 85 °C)

Process temperatures above 185 °F (85 °C) require derating the ambient limits by a 1.5:1 ratio.

## **Humidity limits**

0-100% relative humidity

## **Volumetric displacement**

Less than 0.005 in<sup>3</sup> (0,08 cm<sup>3</sup>)

## **Damping**

### 4-20 mA HART Protocol

### **Rosemount 2051 with Selectable HART**

Analog output response to a step input change is user-enterable from 0.0 to 60.0 seconds for one time constant. This software damping is in addition sensor module response time.

#### Rosemount 2051

Analog output response to a step input change is user-enterable from 0.4 to 60.0 seconds for one time constant. This software damping is in addition sensor module response time.

### FOUNDATION Fieldbus Protocol

Transducer block: User configurable Al bock: User configurable

## PROFIBUS PA Protocol

AI block only: User configurable

## Failure mode alarm

### HART 4-20 mA (option code A)

If self-diagnostics detect a sensor or microprocessor failure, the analog signal is driven either high or low to alert the user. High or low failure mode is user-selectable with a jumper on the transmitter. The values to which the transmitter drives its output in failure mode depend on whether it is factory-configured to standard or NAMUR-compliant operation. The values for each are as follows:

**Table 21. Standard Operation** 

Output code	Linear output	Fail high	Fail low
Α	3.9 ≤ 1 ≤ 20.8	I≥21.75 mA	I≤3.75 mA
M	0.97 ≤ V ≤ 5.2	V≥5.4 V	V ≤ 0.95 V

**Table 22. NAMUR-Compliant Operation** 

Output code	Linear output	Fail high	Fail low
А	3.8 ≤ I ≤ 20.5	I≥22.5 mA	I ≤ 3.6 mA

## Output code F and X

If self-diagnostics detect a gross transmitter failure, that information gets passed as a status along with the process variable.

## Long term stability

Models	Standard	Performance option, P8
Rosemount 2051CF Range 1 (CF)	±0.2% of URL for 1 year, Reference Stability	±0.125% of URL for 5 years,
Ranges 2–3	±0.1% of URL for 3 years, operating stability	operating stability

## **Physical specifications**

### **Electrical connections**

 $^{1}/_{2}$ –14 NPT,  $G^{1}/_{2}$ , and M20 x 1.5 conduit.

## **Process-wetted parts**

### Rosemount 2051CFA wetted parts-Annubar sensor material

- 316 SST
- Alloy C-276

## Note

Cage nipple is made from 304 SST.

# Rosemount 2051CFC wetted parts-Rosemount Annubar sensor material

## Body/plate

- 316/316L SST
- 50 micro-inch Ra surface finish

### Manifold head/valves

316 SST

## Flange studs and nuts

- · Customer supplied
- Available as a spare part

#### Transmitter connection studs and nuts

- Studs-A193 Grade B8M.
- Nuts-A194 Grade 8M.

## **Gasket and O-rings**

- · Gaskets are customer supplied.
- Durlon 8500 fiber gaskets are recommended. Consult an Emerson Process Management representative for use with other gaskets.
- Available as a spare part

#### Note

Gaskets and O-rings should be replaced when the Rosemount 405 is disassembled.

## Rosemount 2051CFP wetted parts-material of construction

## **Orifice plate**

316/316L SST

#### **Body**

316 SST (CF8M), material per ASTM A351

## Pipe material (if applicable)

A312 Gr 316/316L

#### Flange

- · A182 Gr 316/316L
- Flange pressure limits are per ANSI B16.5
- Flange face finish per ANSI B16.5, 125 to 250 RMS

## Body bolts/studs

- ASTM A193 Gr B8M studs
- ASTM A193 Gr B8M Class 2 body studs provided for 1–1/2-in. (code 015) line size units ordered with high pressure process connection option codes W9, R9, T1, S1, or P2.

## **Transmitter connection studs**

ASTM A193 Gr B8M studs

## Gaskets/O-rings

- · Glass filled PTFE
- Gaskets and O-rings must be replaced each time the Rosemount 2051CFP is disassembled for installation or maintenance.

#### Process isolating diaphragms

316L SST, Alloy C-276

## Non-wetted parts for Rosemount 2051CF

## **Electronics housing**

Low-copper aluminum or CF-8M (cast version of 316 SST). Enclosures meet NEMA Type 4X, IP66, and IP68 when properly installed

## Coplanar sensor module housing

CF-3M (cast version of 316L SST)

#### **Bolts**

- ASTM F593G, Condition CW1 (austenitic 316 SST)
- ASTM A193, Grade B7M (zinc plated alloy steel)

#### Sensor module fill fluid

Silicone or inert halocarbon

### Paint for aluminum housing

Polyurethane

### **Cover O-rings**

- Buna-N
- Silicone (for wireless option X)

## **Product certifications**

## Rosemount 2051

**Rev 1.8** 

## **European Directive Information**

A copy of the EU Declaration of Conformity can be found at the end of the Quick Start Guide. The most recent revision of the EU Declaration of Conformity can be found at Emerson.com/Rosemount.

## **Ordinary Location Certification**

As standard, the transmitter has been examined and tested to determine that the design meets the basic electrical, mechanical, and fire protection requirements by a nationally recognized test laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

#### **North America**

E5 USA Explosionproof (XP) and Dust-Ignitionproof (DIP)

Certificate: FM16US0232

Standards: FM Class 3600 – 2011, FM Class 3615 – 2006,

FM Class 3616 – 2011, FM Class 3810 – 2005, ANSI/NEMA 250 – 2008. ANSI/IEC 60529 2004

Markings: XP CL I, DIV 1, GP B, C, D; DIP CL II, DIV 1, GP E,

F, G; CL III; T5( $-50 \,^{\circ}\text{C} \le T_a \le +85 \,^{\circ}\text{C}$ );

Factory Sealed; Type 4X

USA Intrinsic Safety (IS) and Nonincendive (NI)

Certificate: FM16US0231X

Standards: FM Class 3600 – 2011, FM Class 3610 – 2010,

FM Class 3611 – 2004, FM Class 3810 – 2005,

ANSI/NEMA 250 – 2008

Markings: IS CL I, DIV 1, GP A, B, C, D; CL II, DIV 1, GP E, F,

G; Class III; DIV 1 when connected per

Rosemount drawing 02051-1009; Class I, Zone 0; AEx ia IIC T4; NI CL 1, DIV 2, GP A, B, C, D;

 $T4(-50 \text{ °C} \le T_a \le +70 \text{ °C})$ ; Type 4X

### Special Condition for Safe Use (X):

 Transmitter housing contains aluminum and is considered a potential risk of ignition by impact or friction. Care must be taken into account during installation and use to prevent impact and friction.

IE USA FISCO

Certificate: FM16US0231X

Standards: FM Class 3600 - 2011, FM Class 3610 - 2010,

FM Class 3611 – 2004, FM Class 3810 – 2005

Markings: IS CLI, DIV 1, GPA, B, C, D when connected per

Rosemount drawing 02051-1009  $(-50 \text{ °C} \le T_a \le +60 \text{ °C})$ ; Type 4X

**E6** Canada Explosion-Proof, Dust Ignition Proof

Certificate: 2041384

Standards: CAN/CSA C22.2 No. 0-10,

CSA Std C22.2 No. 25-1966, CSA Std C22.2 No. 30-M1986, CAN/CSA-C22.2 No. 94-M91, CSA Std C22.2 No.142-M1987, CAN/CSA-C22.2 No.157-92, CSA Std C22.2 No. 213-M1987, CAN/CSA-E60079-0:07, CAN/CSA-E60079-1:07,

CAN/CSA-E60079-1:07, CAN/CSA-E60079-11-02, CAN/CSA-C22.2 No.60529:05, ANSI/ISA-12.27.01–2003

Markings: Explosion-Proof for Class I, Divisions 1, Groups

B, C, and D. Dust-Ignition Proof for Class II and Class III, Division 1, Groups E, F, and G. Suitable for Class I, Division 2; Groups A, B, C, and D for indoor and outdoor hazardous locations. Class I Zone 1 Ex d IIC T5. Enclosure type 4X, factory

sealed. Single Seal.

**16** Canada Intrinsic Safety

Certificate: 2041384

Standards: CSA Std. C22.2 No. 142 - M1987,

CSA Std. C22.2 No. 213 - M1987, CSA Std. C22.2 No. 157 - 92, CSA Std. C22.2 No. 213 - M1987, ANSI/ISA 12.27.01 – 2003, CAN/CSA-E60079-0:07,

CAN/CSA-E60079-0:07, CAN/CSA-E60079-11:02

Markings: Intrinsically safe for Class I, Division 1, Groups

A,B, C, and D when connected in accordance with Rosemount drawing 02051-1008. Ex ia IIC

T3C. Single Seal. Enclosure Type 4X

IF Canada FISCO

Certificate: 2041384

Standards: CSA Std. C22.2 No. 142 - M1987,

CSA Std. C22.2 No. 213 - M1987, CSA Std. C22.2 No. 157 - 92, CSA Std. C22.2 No. 213 - M1987, ANSI/ISA 12.27.01 - 2003,

CAN/CSA-E60079-0:07, CAN/CSA-E60079-11:02

Markings: Intrinsically safe for Class I, Division 1, Groups

A,B, C, and D when connected in accordance with Rosemount drawing 02051-1008. Ex ia IIC

T3C. Single Seal. Enclosure Type 4X

#### Europe

E1 ATEX Flameproof

Certificate: KEMA 08ATEX0090X

Standards: EN 60079-0:2012 + A11:2013, EN 60079-1:2014, EN 60079-26:2015

T6(-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +70 °C), T4/T5 (-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +80 °C)

**Table 23. Process Connection Temperature** 

Temperature class	Process temperature	Ambient temperature
T6	−60 °C to +70 °C	−60 °C to +70 °C
T5	−60 °C to +80 °C	−60 °C to +80 °C
T4	−60 °C to +120 °C	−60 °C to +80 °C

## Special Conditions for Safe Use (X):

- 1. Appropriate cable, glands and plugs need to be suitable for a temperature of 5 °C greater than maximum specified temperature for location where installed.
- 2. Non- standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.
- 3. The device contains a thin wall diaphragm less than 1 mm thickness that forms a boundary between zone 0 (process connection) and zone 1 (all other parts of the equipment). The model code and data sheet are to be consulted for details of the diaphragm material. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm shall be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
- 4. Flameproof joints are not intended for repair.

I1 ATEX Intrinsic Safety

Certificate: Baseefa08ATEX0129X

Standards: EN60079-0:2012, EN60079-11:2012 Markings: B II 1 G Ex ia IIC T4 Ga (-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +70 °C)

**Table 24. Input Parameters** 

Parameter	HART	Fieldbus/PROFIBUS
Voltage U <sub>i</sub>	30 V	30 V
Current I <sub>i</sub>	200 mA	300 mA
Power P <sub>i</sub>	1.0 W	1.3 W
Capacitance C <sub>i</sub>	0.012 μF	0 μF
Inductance L <sub>i</sub>	0 mH	0 mH

## Special Condition for Safe Use (X):

- If the equipment is fitted with an optional 90 V transient suppressor, it is incapable of withstanding the 500 V isolation from earth test and this must be taken into account during installation.
- 2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however care should be taken to protect it from impact and abrasion when located in Zone 0.

#### IA ATEX FISCO

Certificate: Baseefa08ATEX0129X Standards: EN60079-0:2012+A11:2013,

EN60079-11:2012

Markings: B II 1 G Ex ia IIC T4 Ga ( $-60 \, ^{\circ}\text{C} \le T_a \le +60 \, ^{\circ}\text{C}$ )

## **Table 25. Input Parameters**

Parameter	FISCO
Voltage U <sub>i</sub>	17.5 V
Current I <sub>i</sub>	380 mA
Power P <sub>i</sub>	5.32 W
Capacitance C <sub>i</sub>	0 μF
Inductance L <sub>i</sub>	0 mH

## Special Conditions for Safe Use (X):

- 1. If the equipment is fitted with an optional 90 V transient suppressor, it is incapable of withstanding the 500 V isolation from earth test and this must be taken into account during installation.
- 2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however care should be taken to protect it from impact and abrasion when located in Zone 0.

## N1 ATEX Type n

Certificate: Baseefa08ATEX0130X Standards: EN60079-0:2012+A11:2013,

EN60079-15:2010

Markings: B II 3G Ex nA IIC T4 Gc (-40 °C  $\leq$  T<sub>a</sub>  $\leq$  +70 °C)

### Special Condition for Safe Use (X):

1. If the equipment is fitted with an optional 90 V transient suppressor, it is incapable of withstanding the 500 V electrical strength test as defined in clause 6.5.1 of by EN 60079-15:2010. This must be taken into account during installation.

### **ND** ATEX Dust

Certificate: Baseefa08ATEX0182X Standards: EN60079-0:2012+A11:2013,

EN60079-31:2009

Markings: ᠍ II 1 D Ex ta IIIC T95 °C T<sub>500</sub> 105 °C Da

 $(-20 \,{}^{\circ}\text{C} \le T_a \le +85 \,{}^{\circ}\text{C})$ 

## Special Condition for Safe Use (X):

 If the equipment is fitted with an optional 90 V transient suppressor, it is incapable of withstanding the 500 V isolation from earth test and this must be taken into account during installation.

#### International

**E7** IECEx Flameproof

Certificate: IECExKEM08.0024X

Standards: IEC 60079-0:2011, IEC 60079-1:2014-06, IEC

60079-26:2014-10

Markings: Ex db IIC T6...T4 Ga/Gb; T6( $-60 \, ^{\circ}\text{C} \le T_a \le 100 \, ^{\circ}\text{C}$ 

 $+70 \,^{\circ}\text{C}$ ), T4/T5( $-60 \,^{\circ}\text{C} \le T_a \le +80 \,^{\circ}\text{C}$ )

**Table 26. Process Connection Temperature** 

Temperature class	Process temperature	Ambient temperature
T6	−60 °C to +70 °C	−60 °C to +70 °C
T5	−60 °C to +80 °C	−60 °C to +80 °C
T4	−60 °C to +120 °C	−60 °C to +80 °C

#### Special Conditions for Safe Use (X):

- 1. The device contains a thin wall diaphragm less than 1 mm thickness that forms a boundary between zone 0 (process connection) and zone 1 (all other parts of the equipment). The model code and data sheet are to be consulted for details of the diaphragm material. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm shall be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
- 2. Appropriate cable, glands and plugs need to be suitable for a temperature of 5 °C greater than maximum specified temperature for location where installed.
- 3. Flameproof joints are not intended for repair.
- 4. Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.

## 17 IECEx Intrinsic Safety

Certificate: IECExBAS08.0045X

Standards: IEC60079-0:2011, IEC60079-11:2011 Markings: Ex ia IIC T4 Ga ( $-60 \, ^{\circ}\text{C} \le T_a \le +70 \, ^{\circ}\text{C}$ )

**Table 27. Input Parameters** 

Parameter	HART	Fieldbus/PROFIBUS
Voltage U <sub>i</sub>	30 V	30 V
Current I <sub>i</sub>	200 mA	300 mA
Power P <sub>i</sub>	1.0 W	1.3 W
Capacitance C <sub>i</sub>	0.012 nF	0 μF
Inductance L <sub>i</sub>	0 mH	0 mH

#### Special Condition for Safe Use (X):

- If the equipment is fitted with an optional 90 V transient suppressor, it is incapable of withstanding the 500 V isolation from earth test and this must be taken into account during installation.
- 2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however care should be taken to protect it from impact and abrasion when located in Zone 0.

3. The equipment contains thin wall diaphragms. The installation, maintenance and use shall take into account the environmental conditions to which the diaphragms will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.

#### IG IECEx FISCO

Certificate: IECExBAS 08.0045X

Standards: IEC60079-0:2011, IEC60079-11:2011 Markings: Ex ia IIC T4 Ga  $(-60 \, ^{\circ}\text{C} \le T_a \le +60 \, ^{\circ}\text{C})$ 

**Table 28. Input Parameters** 

Parameter	FISCO
Voltage U <sub>i</sub>	17.5 V
Current l <sub>i</sub>	380 mA
Power P <sub>i</sub>	5.32 W
Capacitance C <sub>i</sub>	0 μF
Inductance L <sub>i</sub>	0 mH

## Special Condition for Safe Use (X):

- If the equipment is fitted with an optional 90 V transient suppressor, it is incapable of withstanding the 500 V isolation from earth test and this must be taken into account during installation.
- 2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however care should be taken to protect it from impact and abrasion when located in Zone 0.
- 3. The equipment contains thin wall diaphragms. The installation, maintenance and use shall take into account the environmental conditions to which the diaphragms will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.

## N7 IECEx Type n

Certificate: IECExBAS08.0046X

Standards: IEC60079-0:2011, IEC60079-15:2010 Markings: Ex nA IIC T4 Gc (-40 °C  $\leq$  T<sub>a</sub>  $\leq$  +70 °C)

### Special Condition for Safe Use (X):

1. If fitted with a 90 V transient suppressor, the equipment is not capable of withstanding the 500 V electrical strength test as defined in clause 6.5.1 of IEC60079-15:2010. This must be taken into account during installation.

## Brazil

#### **E2** INMETRO Flameproof

Certificate: UL-BR 14.0375X

Standards: ABNT NBR IEC60079-0:2008 + Errata 1:2011,

ABNT NBR IEC 60079-1:2009 + Errata 1:2011,

ABNT NBR IEC 60079-26:2008 + Errata 1:2009

Markings: Ex db IIC T6...T4 Ga/Gb IP66,

T6(-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +70 °C), T4/T5(-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +80 °C)

## Special Condition for Safe Use (X):

- 1. The device contains a thin wall diaphragm less than 1 mm thickness that forms a boundary between zone 0 (process connection) and zone 1 (all other parts of the equipment). The model code and datasheet are to be consulted for details of the diaphragm material. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for maintenance shall be followed in detail to assure safety during its expected lifetime.
- 2. Flameproof joints are not intended for repair.
- Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.
- INMETRO Intrinsic Safety

Certificate: UL-BR 14.0759X

Standards: ABNT NBR IEC 60079-0:2008 + Errata 1:2011;

ABNT NBR IEC 60079-11:2009 Markings: Ex ia IIC T4 Ga (-60 °C  $\leq T_a \leq +70$  °C)

**Table 29. Input Parameters** 

Parameter	HART	Fieldbus/PROFIBUS
Voltage U <sub>i</sub>	30 V	30 V
Current l <sub>i</sub>	200 mA	300 mA
Power P <sub>i</sub>	1 W	1.3 W
Capacitance C <sub>i</sub>	0.012 μF	0 μF
Inductance L <sub>i</sub>	0 mH	0 mH

## Special Conditions for Safe Use (X):

- If the equipment is fitted with an optional 90 V transient suppressor, it is incapable of withstanding the 500 V insulation from earth test and this must be taken into account during installation.
- 2. The enclosure may be made of aluminium alloy and given a protective polyurethane paint finish; however care should be taken to protect it from impact and abrasion when located in atmospheres that require ELP Ga.
- IB INMETRO FISCO

Certificate: UL-BR 14.0759X

Standards: ABNT NBR IEC 60079-0:2008 + Errata 1:2011;

ABNT NBR IEC 60079-11:2009 Markings: Ex ia IIC T4 Ga (-60 °C  $\leq$  T<sub>a</sub>  $\leq$  +60 °C)

**Table 30. Input Parameters** 

Parameter	FISCO
Voltage U <sub>i</sub>	17.5 V
Current I <sub>i</sub>	380 mA
Power P <sub>i</sub>	5.32 W
Capacitance C <sub>i</sub>	0 μF
Inductance L <sub>i</sub>	0 mH

## Special Condition for Safe Use (X):

- 1. If the equipment is fitted with an optional 90 V transient suppressor, it is incapable of withstanding the 500 V insulation from earth test and this must be taken into account during installation.
- 2. The enclosure may be made of aluminium alloy and given a protective polyurethane paint finish; however care should be taken to protect it from impact and abrasion when located in atmospheres that require EPL Ga.

## China

E3 China Flameproof

Certificate: GYJ13.1386X; GYJ5.1366X [Flowmeters] Standards: GB3836.1-2010, GB3836.2-2010, GB3836.20-2010-2010

Markings:

Pressure Transmitter: Ex d IIC Gb, T6( $-50 \,^{\circ}\text{C} \le T_a \le +65 \,^{\circ}\text{C}$ ), T5( $-50 \,^{\circ}\text{C} \le T_a \le +80 \,^{\circ}\text{C}$ )

Flowmeter: Ex d IIC Ga/Gb,

 $T6(-50 \text{ °C} \le T_a \le +65 \text{ °C}),$ 

 $T5(-50 \text{ °C} \le T_a \le +80 \text{ °C})$ 

## Special Conditions for Safe Use (X):

- 1. Symbol "X" is used to denote specific conditions of use:
  - The Ex d blanking elements, cable glands, and wiring shall be suitable for a temperature of 90 °C.
  - This device contains a thin wall diaphragm.
     Installation, maintenance and use shall take into account the environment conditions to which the diaphragm will be subjected.
- 2. The relation between T code and ambient temperature range is:

T <sub>a</sub>	Temperature class
$-50 ^{\circ}\text{C} \le T_a \le +80 ^{\circ}\text{C}$	T5
–50 °C ≤ T <sub>a</sub> ≤ +65 °C	T6

- 3. The earth connection facility in the enclosure should be connected reliably.
- During installation, use and maintenance of the product, observe the warning "Don't open the cover when the circuit is alive."
- 5. During installation, there should be no mixture harmful to flameproof housing
- Cable entry and conduit, certified by NEPSI with type of protection Ex d IIC and appropriate thread form, should be applied when installed in a hazardous location. Blanking elements should be used on the redundant cable entries.
- 7. End users are not permitted to change any internal components, but to settle the problem in conjunction with the manufacturer to avoid damage to the product.
- 8. Maintenance should be done in a non-hazardous location.
- During installation, use and maintenance of this product, observe the following standards: GB3836.13-2013, GB3836.15-2000, GB3836.16-2006, GB50257-2014.

**13** China Intrinsic Safety

Certificate: GYJ17.1225X; GYJ15.1365X [Flow meters]

Standards: GB3836.1-2010, GB3836.4-2010,

GB3836.20-2010

Markings: Ex ia IIC T4 Ga  $(-60 \,^{\circ}\text{C} \le \text{T}_a \le +70 \,^{\circ}\text{C})$ 

## Special Conditions for Safe Use (X):

1. The enclosure may contain light metal, attention should be taken to avoid ignition hazard due to impact or friction.

2. When transient protection board is chosen (option code T1), this apparatus is not capable of withstanding the 500 V r.m.s insulation test required by clause 6.3.12 of GB3836.4-2010.

3. The enclosure may contain Non-metallic material, shall only be cleaned with a damp cloth to avoid electrostatic charge.

## Korea

**EP** Korea Flameproof

Certificate: 12-KB4BO-0342X, 12-KB4BO-0344X

Markings: Ex d IIC T6...T4, T4/T5( $-60 \,^{\circ}\text{C} \le T_a \le +80 \,^{\circ}\text{C}$ ),

 $T6(-60 \text{ °C} \le T_a \le +70 \text{ °C})$ 

## Special Condition for Safe Use (X):

1. See certificate for special conditions

**IP** Korea Intrinsic Safety

Certificate: 12-KB4BO-0343X, 12-KB4BO-0345X,

13-KB4BO-0205X, 13-KB4BO-0207X

Markings: Ex ia IIC T4 ( $-60 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ )

#### Special Condition for Safe Use (X):

1. See certificate for special condition

## Japan

**E4** Japan Flameproof

Certificate: TC20598, TC20599, TC20602, TC20603

[HART]; TC20600, TC20601, TC20604,

TC20605 [Fieldbus]

Markings: Ex d IIC T5

## Technical Regulations Customs Union (EAC)

**EM** EAC Flameproof

Certificate: TC RU C-US.AA87.B.00588

Markings:  $Ga/Gb \to d \times T_1/T_2 \times T_2 \times T_3 \times T_$ 

 $T6(-50 \text{ °C} \le T_a \le +65 \text{ °C})$ 

#### Special Condition for Safe Use (X):

1. See certificate for special conditions.

**IM** EAC Intrinsically Safe

Certificate: TC RU C-US.AA87.B.00588

Markings: 0Ex ia IIC T4 Ga X ( $-60 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ )

## Special Condition for Safe Use (X):

1. See certificate for special conditions.

#### **Combinations**

**K1** Combination of E1, I1, N1, and ND

**K2** Combination of E2 and I2

**K5** Combination of E5 and I5

**K6** Combination of E6 and I6

**K7** Combination of E7, I7, N7 and IECEx Dust

**IECEx Dust** 

Certificate: IECExBAS08.0058X

Standards: IEC60079-0:2011, IEC60079-15:2010 Markings: Ex nA IIIC T95 °C T<sub>500</sub> 105 °C Da

 $(-20 \, ^{\circ}\text{C} \le T_a \le +85 \, ^{\circ}\text{C})$ 

## Special Condition for Safe Use (X):

 If the equipment is fitted with an optional 90 V transient suppressor, it is incapable of withstanding a 500 V isolation from earth test and this must be taken into account during installation.

KA Combination of E1, I1, and K6

KB Combination of K5 and K6

**KC** Combination of E1, I1, and K5

**KD** Combination of K1, K5, and K6

**KP** Combination of EP and IP

KM Combination of EM and IM

## **Additional certifications**

**SBS** American Bureau of Shipping (ABS) Type Approval

Certificate: 09-HS446883B-3-PDA

Intended Use: Marine and Offshore Applications

Measurement of either Gauge or Absolute

Pressure for Liquid, Gas, and Vapor

ABS Rules: 2013 Steel Vessels Rules 1-1-4/7.7,

1-1-Appendix 3, 4-8-3/1.7, 4-8-3/13.1

**SBV** Bureau Veritas (BV) Type Approval

Certificate: 23157/B0 BV

BV Rules: Bureau Veritas Rules for the Classification of

Steel Ships

Application: Class notations: AUT-UMS, AUT-CCS,

AUT-PORT and AUT-IMS; Pressure

transmitter type 2051 cannot be installed

on diesel engines.

**SDN** Det Norske Veritas (DNV) Type Approval Certificate: TAA00004F

Intended Use: DNV GL Rules for Classification — Ships and

offshore units

Application:

Locations classes		
Туре	2051	
Temperature	D	
Humidity	В	
Vibration	A	
EMC	В	
Enclosure	D	

**SLL** Lloyds Register (LR) Type Approval Certificate: 11/60002

Application: Environmental categories ENV1, ENV2, ENV3,

and ENV5

## **Rosemount 2051 Wireless**

Rev 1.3

## **European Directive Information**

A copy of the EU Declaration of Conformity can be found at the end of the Quick Start Guide. The most recent revision of the EU Declaration of Conformity can be found at Emerson.com/Rosemount.

## Telecommunication compliance

All wireless devices require certification to ensure that they adhere to regulations regarding the use of the RF spectrum. Nearly every country requires this type of product certification. Emerson is working with governmental agencies around the world to supply fully compliant products and remove the risk of violating country directives or laws governing wireless device usage.

### FCC and IC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: This device may not cause harmful interference. This device must accept any interference received, including interference that may cause undesired operation. This device must be installed to ensure a minimum antenna separation distance of 20 cm from all persons.

## **Ordinary Location Certification**

As standard, the transmitter has been examined and tested to determine that the design meets the basic electrical, mechanical, and fire protection requirements by a nationally recognized test laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

## **Installing in North America**

The US National Electrical Code (NEC) and the Canadian Electrical Code (CEC) permit the use of Division marked equipment in Zones and Zone marked equipment in Divisions. The markings must be suitable for the area classification, gas, and temperature class. This information is clearly defined in the respective codes.

### **USA**

U.S.A. Intrinsically Safe (IS) Certificate: FM 3046325

Standards: FM Class 3600 - 2011, FM Class 3610 - 2010,

FM Class 3810 – 2005, ANSI/ISA 60079-0 – 2009,

ANSI/ISA 60079-11 - 2009, NEMA 250 - 2003,

ANSI/IEC 60529

Markings: IS CL I, DIV 1, GP A, B, C, D T4; CL 1, Zone 0 AEx

ia IIC T4; T4(-40 °C  $\leq$  T<sub>a</sub>  $\leq$  +70 °C) when installed per Rosemount drawing 03031-1062;

Type 4X/IP66/IP68

#### Special Conditions for Safe Use (X):

- The Rosemount 2051 Wireless Pressure Transmitter shall only be used with the 701PGNKF Rosemount SmartPower Battery Pack.
- The in-line pressure sensor may contain more than 10% aluminum and is considered a potential risk of ignition by impact or friction. Care must be taken into account during installation and used to prevent impact and friction.
- 3. The surface resistivity of the transmitter housing is greater than one gigaohm. To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or a dry cloth.

### Canada

**16** Canada Intrinsically Safe

Certificate: CSA 2526009

Standards: CAN/CSA C22.2 No. 0-M91, CAN/CSA C22.2 No. 94-M91, CSA Std C22.2 No. 142-M1987, CSA Std C22.2 No. 157-92,

Markings: Intrinsically Safe for Class I, Division 1, Groups A, B, C, D, T4 when installed per Rosemount drawing 03031-1063; Type 4X/IP66/IP68

CSA Std C22.2 No. 60529:05

## **Europe**

**I1** ATEX Intrinsic Safety

Certificate: Baseefa12ATEX0228X

Standards: EN 60079-0: 2012, EN 60079-11: 2012 Markings: E II 1 G Ex ia IIC T4 Ga, T4(-40 °C  $\leq$  T $_a$   $\leq$  +70 °C)

IP66/IP68

#### Special Conditions for Safe Use (X):

- The plastic enclosure may constitute a potential electrostatic ignition risk and must not be rubbed or cleaned with a dry cloth.
- 2. The Model 701PGNKF Power Module may be replaced in a hazardous area. The power module has a surface resistivity greater than  $1G\Omega$  and must be properly installed in the wireless device enclosure. Care must be taken during transportation to and from the point of installation to prevent electrostatic charge build-up.

#### International

17 IECEx Intrinsic Safety

Certificate: IECEx BAS 12.0124X

Standards: IEC 60079-0: 2011, IEC 60079-11: 2011 Markings: Ex ia IIC T4 Ga, T4(−40 °C ≤  $T_a$  ≤ +70 °C)

IP66/IP68

## Special Conditions for Safe Use (X):

- The plastic enclosure may constitute a potential electrostatic ignition risk and must not be rubbed or cleaned with a dry cloth.
- 2. The Model 701PGNKF Power Module may be replaced in a hazardous area. The power module has a surface resistivity greater than  $1G\Omega$  and must be properly installed in the wireless device enclosure. Care must be taken during transportation to and from the point of installation to prevent electrostatic charge build-up.

### **Brazil**

INMETRO Intrinsic Safety Certificate: UL-BR 13.0534X

Standards: ABNT NBR IEC 60079-0:2008 + Errata 1:2011,

ABNT NBR IEC 60079-11:2009

Markings: Ex ia IIC T4 IP66 Ga, T4( $-40 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ )

## Special Condition for Safe Use (X):

1. See certificate for special conditions.

### China

**I3** China Intrinsic Safety

Certificate: GYJ17.1225X

GYJ15.1365X [Flow Meters]

Standards: GB3836.1-2010, GB3836.4-2010,

GB3836.20-2010

Markings: Ex ia IIC Ga T4,  $-40 \sim +70 \,^{\circ}\text{C}$ 

### Special Condition for Safe Use (X):

1. See certificate for special conditions.

## Japan

**I4** TIIS Intrinsic Safety

Certificate: TC22022X (2051C/L) TC22023X (2051T) TC22024X (2051CFx)

Markings: Ex ia IIC T4 Ga, T4( $-20 \sim +60 \degree C$ )

## Special Condition for Safe Use (X):

1. See certificate for special conditions.

## EAC - Belarus, Kazakhstan, Russia

Technical Regulation Customs Union (EAC) Intrinsic Safety Certificate: RU C-US. **ΓБ**05.B.00390

Markings: 0Ex ia IIC T4 Ga X;

## Special Condition for Safe Use (X):

1. See certificate for special conditions.

## Korea

**IP** Korea Intrinsic Safety

Certificate: 13-KB4BO-0220X

Markings: Ex ia IIC T4 ( $-40 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ );

## Special Condition for Safe Use (X):

1. See certificate for special conditions.

# **Rosemount 485 Annubar Primary Element**



Rosemount 485 Annubar Primary Element utilizes a T-shaped sensor design that offers best in class accuracy and performance.

- Up to 0.75 percent flow rate accuracy
- Lowest permanent pressure loss of any DP flow meter
- Available in 2 to 96-in. (50 to 2400 mm) line sizes

### **Additional information**

Specifications: page 143 Dimensional drawings: page 220

Installation and flow meter orientation: page 191

Table 23. Rosemount 485 Annubar Primary Element Ordering Information

Model	DP Flow primary type	
485	Rosemount Annubar Primary Element	
Fluid type		
L	Liquid	*
G	Gas	*
S	Steam	*
Line size		
020	2-in. (50 mm)	*
025	2¹/₂-in. (63.5 mm)	*
030	3-in. (80 mm)	*
035	31/2-in. (89 mm)	*
040	4-in. (100 mm)	*
050	5-in. (125 mm)	*
060	6-in. (150 mm)	*
070	7-in. (175 mm)	*
080	8-in. (200 mm)	*
100	10-in. (250 mm)	*
120	12-in. (300 mm)	*
140	14-in. (350 mm)	
160	16-in. (400 mm)	
180	18-in. (450 mm)	
200	20-in. (500 mm)	
240	24-in. (600 mm)	
300	30-in. (750 mm)	
360	36-in. (900 mm)	

Table 23. Rosemount 485 Annubar Primary Element Ordering Information

Н	Alloy C-276	
S	316 SST	*
Sensor	material	
M	Manual flo-tap	
G	Gear-drive flo-tap	
L	Flange-lok	
T <sup>(2)</sup>	Threaded	*
F	Flanged with opposite side support	*
Р	Pak-lok	*
Rosemo	ount Annubar type	
U	Vertical piping with upwards flow	*
D	Vertical piping with downwards flow	*
Н	Horizontal piping	*
Piping o	prientation	
J	Chrome-moly grade F-91	
N	Chrome-moly grade f-22	
G	Chrome-moly grade F-11	
0(1)	No mounting (customer supplied)	*
S	316 SST	*
С	CS (A105)	*
	iterial/assembly material	
Z D'	Non-standard pipe I.D. range or above 12-in. line size	
E 7	Range E from the Pipe I.D. table	
Б	Range B from the Pipe I.D. table	
A	Range A from the Pipe I.D. table	
D	Range D from the Pipe I.D. table	*
С	Range C from the Pipe I.D. table	*
	pe I.D. range code for Rosemount Annubar Flow Meters and Primary Elements" on page 146)	
960	96-in. (2400 mm)	
900	90-in. (2250 mm)	
840	84-in. (2100 mm)	
780	78-in. (1950 mm)	
720	72-in. (1820 mm)	
600	60-in. (1520 mm)	
480	48-in. (1210 mm)	
420	42-in. (1066 mm)	

Table 23. Rosemount 485 Annubar Primary Element Ordering Information

Sensor s	size			
1	Sensor size 1 — line sizes 2- to 8-in. (50 to 200 m	nm)		*
2	<u> </u>	Sensor size 2 — line sizes 6- to 96-in. (150 to 2400 mm)		
3	Sensor size 3 — line sizes greater than 12-in. (300 mm)			
Mountii	ng type			
T1	Compression/threaded connection			*
A1	ANSI Class 150 RF			*
A3	ANSI Class 300 RF			*
A6	ANSI Class 600 RF			*
D1	DN PN 16 flange			*
D3	DN PN 40 flange			*
D6	DN PN 100 flange			*
A9 <sup>(3)</sup>	ANSI Class 900 RF	<del>-</del>		
AF <sup>(3)</sup>	ANSI Class 1500 RF			
AT <sup>(3)</sup>	ANSI Class 2500 RF			
R1	ANSI Class 150 RTJ flange			
R3	ANSI Class 300 RTJ flange			
R6	ANSI Class 600 RTJ flange			
R9 <sup>(3)</sup>	ANSI Class 900 RTJ flange			
RF <sup>(3)</sup>	ANSI Class 1500 RTJ flange			
RT <sup>(3)</sup>	ANSI Class 2500 RTJ flange			
Opposit	e side support or packing gland			
0	No opposite side support or packing gland (req	uired for pak-lok, flange-lok, ar	nd threaded models)	*
	Opposite side support – required for flar	nged models		
С	NPT threaded opposite support assembly – extended tip			*
D	Welded opposite support assembly – extended tip			*
	Packing gland – required for flo-tap models			
	Packing gland material	Rod material	Packing material	
J <sup>(4)</sup>	SST packing gland/cage nipple	CS	PTFE	
K <sup>(4)</sup>	SST packing gland/cage nipple	SST	PTFE	
L <sup>(4)</sup>	SST packing gland/cage nipple	CS	Graphite	
N <sup>(4)</sup>	SST packing gland/cage nipple	SST	Graphite	
R	Alloy C-276 packing gland/cage nipple	SST	Graphite	

## Table 23. Rosemount 485 Annubar Primary Element Ordering Information

The starred offerings ( $\star$ ) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Isolatio	n valve for flo-tap models	
0 <sup>(1)</sup>	Not applicable or customer supplied	*
1	Gate valve, CS	
2	Gate valve, SST	
5	Ball valve, CS	
6	Ball valve, SST	
Tempera	ature measurement	
Т	Integral RTD – not available with flanged model greater than Class 600	*
0	No temperature sensor	*
R	Remote thermowell and RTD	
Transmi	tter connection platform	
3	Direct-mount, integral 3-valve manifold– not available with flanged model greater than Class 600	*
5	Direct -mount, 5-valve manifold – not available with flanged model greater than Class 600	*
7	Remote-mount NPT connections	*
6	Direct-mount, high temperature 5-valve manifold– not available with flanged model greater than Class 600	
8	Remote-mount SW connections	
A <sup>(2)</sup>	Remote-mount NPT connections, integral needle valves	*
B <sup>(2)</sup>	Remote-mount SW connections, integral needle valves	*

## **Options** (include with selected model number)

Extended product warranty				
WR3	3-year limited warranty	*		
WR5	5-year limited warranty	*		
Pressure	Pressure testing <sup>(5)</sup>			
P1	Hydrostatic testing with certificate			
PX	Extended hydrostatic testing			
Special cleaning				
P2	Cleaning for special services			
PA	Cleaning per ASTM G93 level D (section 11.4)			
Material testing				
V1	Dye penetrant exam			
Materia	Material examination			
V2	Radiographic examination			
Flow ca	alibration			
W1	Flow calibration (average K)			
WZ	Special calibration			

## Table 23. Rosemount 485 Annubar Primary Element Ordering Information

Special i	inspection		
QC1	Visual and dimensional inspection with certificate	*	
QC7	Inspection and performance certificate	*	
Surface	Surface finish		
RL	Surface finish for low pipe Reynolds number in gas and steam	*	
RH	Surface finish for high pipe Reynolds number in liquid	*	
Materia	l traceability certification <sup>(6)</sup>	·	
Q8	Material traceability certificate per EN 10204:2004 3.1	*	
Positive	material identification	·	
Q76	PMI		
Code co	nformance <sup>(7)</sup>		
J2	ANSI/ASME B31.1		
J3	ANSI/ASME B31.3		
Materia	ls conformance <sup>(8)</sup>		
J5	NACE MR-0175/ISO 15156		
Country	v certification		
J6	European Pressure Directive (PED)	*	
J1	Canadian Registration		
Installe	d in flanged pipe spool section		
H3	Class 150 flanged connection with Rosemount standard length and schedule		
H4	Class 300 flanged connection with Rosemount standard length and schedule		
H5	Class 600 flanged connection with Rosemount standard length and schedule		
Instrum	ent connections for remote mount option <sup>(9)</sup>		
G2	Needle valves, SST	*	
G6	OS&Y gate valve, SST	*	
G1	Needle valves, CS		
G3	Needle valves, alloy C-276		
G5	OS&Y gate valve, CS		
G7	OS&Y gate valve, alloy C-276		
Special	shipment		
Y1	Mounting hardware shipped separately	*	
Attach t	.0		
H1	Attach to transmitter		

## Table 23. Rosemount 485 Annubar Primary Element Ordering Information

Special dimensions		
VM	Variable mounting	
VT	Variable tip	
VS	Variable length spool section	
V9	Special dimension	
Typical model number: 485 L 060 D C H P S 2 T1 0 0 0 3		

- 1. For pak-lok, flanged, threaded, and flange-lok, this note is only applicable if pipe material/assembly material is 0. For flo-taps, this note is applicable if either pipe material/assembly material is 0, or if Isolation valve is 0. Provide the "A" dimension for flanged (page 223), flange-lok (page 222), pak-lok (page 220), threaded (page 221) and threaded flo-tap models (page 227). Provide the "B" dimension for flanged flo-tap models (page 226).
- 2. Only available in China.
- 3. Available in remote mount applications only.
- 4. The cage nipple is constructed of 304 SST.
- 5. Applies to flow element only, mounting hardware not tested.
- 6. Instrument connections for remote mount options and isolation valves for flo-tap models are not included in the Material Traceability Certification.
- 7. Not available with transmitter connection platform 6.
- 8. Materials of Construction comply with metallurgical requirements within NACE MR0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.
- 9. Not available with transmitter connections platforms A and B.

## **Specifications**

## **Performance specifications**

## Performance statement assumptions

Measured pipe I.D. (or measured pipe cross sectional area)

## Discharge coefficient factor

±0.75% of flow rate

## Repeatability

±0.1%

#### Line sizes

Sensor size 1: 2-in. to 8-in. (50 to 200 mm)

Sensor size 2: 6-in. to 96-in. (150 to 2400 mm)

Sensor size 3: 12-in. to 96-in. (300 to 2400 mm)

#### Note

Some mounting types are not available in larger line sizes.

## Table 24. Reynolds Number and Probe Width

Sensor size	Minimum rod Reynolds number (R <sub>d</sub> )	Probe width ( <sub>d</sub> ) (inches)
1	6500	0.590-in. (14.99 mm)
2	12500	1.060-in. (26.92 mm)
3	25000	1.935-in. (49.15 mm)

$$R_d = \frac{d \times v \times p}{\mu}$$

Where

d = Probe width (feet)

v = Velocity of fluid (ft/sec)

 $p = Density of fluid (lbm/ft^3)$ 

 $\mu$  = Viscosity of the fluid (lbm/ft-sec)

### Sizing

Contact an Emerson representative for assistance. A Configuration Data Sheet is required prior to order for application verification. To complete the Configuration Data Sheet go to:

Emerson.com/Rosemount/DP\_Flow/Application/Pages/PCDefault

#### Flow turndown

10:1 or better

## Rosemount Annubar sensor surface finish

The front surface of the Rosemount Annubar primary is textured for high Reynolds number applications (typically gas and steam). The surface texture creates a more turbulent boundary layer on the front surface of the sensor. The increased turbulence produces a more predictable and repeatable separation of flow at the edge of the sensor. The appropriate surface finish will be determined for each application by the Emerson sizing program, Instrument Toolkit™ software.

## **Functional specifications**

## Service

- Liquid
- Gas
- Steam

## **Process temperature limits**

#### **Direct mount transmitter**

- 500 °F (260 °C)
- 750 °F (398 °C) when used with a direct mount, high temperature 5-valve manifold (transmitter connection platform code 6). Maximum temperature limit for steam processes is 650 °F (343 °C).
- 400 °F (204 °C) when top mounted in steam service

#### Remote mount transmitter

- -50 to 1250 °F (-101 to 677 °C) Alloy C-276 sensor material (for superheated steam applications above 1000 °F (538 °C), it is recommended that the Rosemount 585 with alloy 800H sensor material is used.)
- -300 to 850 °F (-184 to 454 °C) SST sensor material
- 600 °F (315 °C) for Rosemount Annubar threaded type

## **Pressure and temperature limits**

## **Direct mount transmitter**

- Up to Class 600 ANSI (1440 psig at 100 °F [99 bar at 38 °C])
- Integral temperature measurement is not available with flanged mounting type greater than Class 600

## Remote mount transmitter(1)

Up to Class 2500 ANSI (6000 psig at 100 °F [416 bar at 38 °C])

1. Static pressure selection may effect pressure limitations.

## **Physical specifications**

## Temperature measurement

#### **Integral RTD**

- 100 Ohm platinum RTD
- 4-wire RTD ( $\alpha$  = 0.00385)

#### Remote RTD

100 Ohm platinum RTD, spring loaded with  $^1/_2$  NPT nipple and union

### **Remote RTD Thermowell**

 $1/2 \times 1/2$  NPT, 316 SST or Alloy C-276 with 1/2-in. weld couplet (same as specified Rosemount Annubar Sensor material).

#### **Rosemount Annubar Sensor material**

- 316 SST
- Alloy C-276

## Mounting material

- CS (A105)
- 316 SST
- Chrome-moly Grade F-11
- Chrome-moly Grade F-22
- Chrome-moly Grade F-91

### Rosemount Annubar type

See "Rosemount 485 Annubar Primary Element" on page 220.

#### Pak-Lok model (option P)

- Provided with a compression sealing mechanism rated up to Class 600 ANSI (1440 psig at 100 °F [99 bar at 38 °C])
- -150 to 850 °F (-101 to 454 °C)
- Not available for steam above 600 °F (315 °C)

## Threaded model (option T)

- Provided with a compression sealing mechanism rated up to Class 600 ANSI (1440 psig at 100 °F [99 bar at 38 °C])
- Temperature limits: -20 to 600 °F (-28 to 315 °C)

## Flanged with opposite side support model (option F)

- Provided with opposite side support, which is the same material as the pipe and requires a second pipe penetration
- Sensor flange is the same material as the Rosemount Annubar sensor and the mounting flange is the same material as the pipe material.
- Flanged mounting hardware: nuts, studs and gaskets (DIN units supplied without nuts, studs and gaskets). Standard bolting provided is CS (A193 B7/A194 2H). Standard gaskets provided are spiral wound 304SST flexible graphite filled.

#### Temperature limits by sensor material:

- SST: (-300 to 850 °F [-184 to 454 °C])
- Alloy C-276: (-150 to 1250 °F [-101 to 677 °C])

## Flange-lok model (option L)

- Flange-lok assembly is supplied in 316 SST material.
- Flange-lok mounting hardware: nuts, studs and gaskets (DIN units supplied without nuts, studs and gaskets). Standard bolting provided is CS (A193 B7/A194 2H). Standard gaskets provided are spiral wound 304SST flexible graphite filled.
- Temperature limits: -150 to 850 °F (-101 to 454 °C)
- Not available for steam above 600 °F (315 °C)

## Flo-tap models (options G and M)

- Opposite side support is not available
- Threaded connection is not available with sensor size 3
- Gear drive is not available with sensor size 1
- Packing gland required
- Packing gland material temperature limits
  - PTFE: -40 to 400 °F (-40 to 204 °C)
  - Graphite: -150 to 850 °F (-101 to 454 °C)
- Isolation valve included
  - The isolation valve will carry the same pressure rating as the sensor flange and mounting flange specified in the mounting type
  - Isolation vales are not supplied with DIN flanges and must be customer supplied
- For threaded flo-tap models, the isolation valve NPT size is 1¹/4-in. (sensor size 1) and 2-in. (sensor size 2).

Table 25. Rosemount Annubar Type Specification Chart

71 - 1 - 1 - 1						
Option code	Description	Pak-lok(1)	Threaded	Flange-lok	Flange	Manual and gear drive flo-tap
	Pak-lok body	Х				
T1 <sup>(1)</sup>	Threaded body <sup>(2)</sup>		Х			
	Threaded connection					Х
A1	ANSI Class 150 RF			Χ	Х	Х
A3	ANSI Class 300 RF			Χ	Х	Х
A6	ANSI Class 600 RF			Χ	Х	Х
A9 <sup>(2)</sup>	ANSI Class 900 RF				Х	
AF <sup>(2)</sup>	ANSI Class 1500 RF				Х	
AT <sup>(2)</sup>	ANSI Class 2500 RF				Х	
D1	DN PN 16			Χ	Х	Х
D3	DN PN 40			Χ	Х	Х
D6	DN PN 100			Χ	Х	Х
R1	ANSI Class 150 RTJ flange			Χ	Х	Х
R3	ANSI Class 300 RTJ flange			Χ	Х	X
R6	ANSI Class 600 RTJ flange			Χ	Х	Х
R9 <sup>(2)</sup>	ANSI Class 900 RTJ flange				Х	
RF <sup>(2)</sup>	ANSI Class 1500 RTJ flange				Х	
RT <sup>(2)</sup>	ANSI Class 2500 RTJ flange				Х	

<sup>1.</sup> Available up to ANSI Class 600 (1440 psig at 100 °F [99 bar at 38 °C]) rating.

#### **RTD temperature limits**

Integral and remote mounted thermowell: -100 to 900 °F (-73 to 482 °C)

## Instrument connections and electronics connection platform temperature ranges

Table 26. Minimum/Maximum Temperature Range

_		
Code	Description	Temperature
G1	Needle valves, CS	-20 to 500 °F (-29 to 260 °C)
G2	Needle valves, SST	–40 to 600 °F
G3	Needle valves, alloy C-276	(-40 to 316 °C)
G5	OS&Y gate valve, CS	−20 to 775 °F (−29 to 413 °C)
G6	OS&Y gate valve, SST	-40 to 850 °F (-40 to 454 °C)
G7	OS&Y gate valve, alloy C-276	-40 to 1250 °F (-40 to 677 °C)
А	Integral needle valves, SST, remote-mount NPT connections	−20 to 450 °F
В	Integral needle valves, SST, remote-mount SW connections	(-29 to 232 °C)

## Flow meter installed in flanged pipe spool section (option codes H3, H4, and H5)

- All pipe spool sections are flanged pipe sections.
- The flanged pipe spool section is constructed from the same material as the pipe material/mounting assembly material.
- Consult the factory for remote temperature measurement and ANSI ratings above Class 600 and DIN flanges.
- Available in CS (A105) and 316 SST.

Table 27. Flanged Pipe Spool Section Schedule

ANSI	Schedule	
Class 150	40	
Class 300	10	
Class 600	80	

Table 28. Flange Pipe Spool Section Length

Nominal pipe size	Length
2-in. (50 mm)	10.52-in. (267.2 mm)
3-in. (80 mm)	11.37-in. (288.8 mm)
4-in. (100 mm)	12.74-in. (323.6 mm)
6-in. (150 mm)	14.33-in. (364.0 mm)
8-in. (200 mm)	16.58-in. (421.1 mm)

Remote mount only.

# Pipe I.D. range code for Rosemount Annubar Flow Meters and Primary Elements

For pipes with an Inner Diameter (I.D.) range/pipe wall thickness not found in this table or with a line size greater than 12-in. (300 mm), choose option code Z and specify the exact pipe dimensions (I.D. and pipe wall thickness) on the <u>Configuration Data Sheet</u>. The Emerson sizing program will determine this code, based on the application piping.

		Line size			Pipe wa	all thickness	I.D.	
	Nominal	Max. O.D.	Option code	I.D. range	ANSI pipes	Non-ANSI pipes	range code	
				1.784 to 1.841-in. (45.31 to 46.76 mm)		0.065 to 0.488-in. (1.7 to 12.4 mm)	А	
	2-in.		2.625-in.	020	1.842 to 1.938-in. (46.79 to 49.23 mm)	0.065 to 0.545-in.	0.065 to 0.449-in. (1.7 to 11.4 mm)	В
	(50 mm)		020	1.939 to 2.067-in. (49.25 to 52.50 mm)	(1.7 to 13.8 mm)	0.065 to 0.417-in. (1.7 to 10.6 mm)	С	
			-	2.068 to 2.206-in. (52.53 to 56.03 mm)		0.065 to 0.407-in. (1.7 to 10.3 mm)	D	
				2.207 to 2.322-in. (56.06 to 58.98 mm)		0.083 to 0.448-in. (2.1 to 11.4 mm)	В	
	2 <sup>1</sup> /2-in.	3.188-in.	025	2.323 to 2.469-in. (59.00 to 62.71 mm)	0.083 to 0.563-in.	0.083 to 0.417-in. (2.1 to 10.6 mm)	С	
	(63.5 mm)	(80.98 mm)	025	2.470 to 2.598-in. (62.74 to 65.99 mm)	(2.1 to 14.3 mm)	0.083 to 0.435-in. (2.1 to 11.0 mm)	D	
				2.599 to 2.647-in. (66.01 to 67.23 mm)		0.083 to 0.515-in. (2.1 to 13.1 mm)	E	
		3.75-in.		2.648 to 2.751-in. (67.26 to 69.88 mm)		0.083 to 0.460-in. (2.1 to 11.7 mm)	А	
	3-in.		030	2.752 to 2.899-in. (69.90 to 73.63 mm)	0.083 to 0.563-in.	0.083 to 0.416-in. (2.1 to 10.6 mm)	В	
	(80 mm)	(95.25 mm)	030	2.900 to 3.068-in. (73.66 to 77.93 mm)	(2.1 to 14.3 mm)	0.083 to 0.395-in. (2.1 to 10.0 mm)	С	
N/A				3.069 to 3.228-in. (77.95 to 81.99 mm)		0.083 to 0.404-in (2.1 to 10.3 mm)	D	
		4.25-in. (107.95 mm) 035	3.229 to 3.333-in. (82.02 to 84.66 mm)		0.120 to 0.496-in. (3.0 to 12.6 mm)	В		
	3 <sup>1</sup> /2-in. (89 mm)		035	3.334 to 3.548-in. (84.68 to 90.12 mm)	0.120 to 0.600-in. (3.0 to 15.2 mm)	0.120 to 0.386-in. (3.0 to 9.8 mm)	С	
				3.549 to 3.734-in. (90.14 to 94.84 mm)		0.120 to 0.415-in. (3.0 to 10.5 mm)	D	
			040	3.735 to 3.825-in. (94.87 to 97.16 mm)		0.120 to 0.510-in. (3.0 to 13.0 mm)	В	
	4-in.	5.032-in.		3.826 to 4.026-in. (97.18 to 102.26 mm)	3.826 to 4.026-in. (97.18 to 102.26 mm) 0.120 to 0.600-in.	0.120 to 0.400-in. (3.0 to 10.2 mm)	С	
	(100 mm)	(127.81 mm)	040	4.027 to 4.237-in. (102.29 to 107.62 mm)	(3.0 to 15.2 mm)	0.120 to 0.390-in. (3.0 to 9.9 mm)	D	
				4.238 to 4.437-in. (107.65 to 112.70 mm)		0.120 to 0.401-in. (3.0 to 10.2 mm)	E	
	5-in. (125 mm) (1		4.438 to 4.571-in. (112.73 to 116.10 mm)		0.134 to 0.481-in. (3.4 to 12.2 mm)	A		
		6.094-in.	050	4.572 to 4.812-in. (116.13 to 122.22 mm)	0.134 to 0.614-in.	0.134 to 0.374-in. (3.4 to 9.5 mm)	В	
		(154.79 mm)	0.00	4.813 to 5.047-in. (122.25 to 128.19 mm)	,	0.134 to 0.380-in. (3.4 to 9.7 mm)	С	
				5.048 to 5.249-in. (128.22 to 133.32 mm)		0.134 to 0.413-in. (3.4 to 10.5 mm)	D	

				5.250 to 5.472-in. (133.35 to 138.99 mm)		0.134 to 0.3919-in. (3.4 to 9.9 mm)	А					
sor	6-in.	6.93-in.	060	5.473 to 5.760-in. (139.01 to 146.30 mm)	0.134 to 0.614-in.	0.134 to 0.327-in. (3.4 to 8.3 mm)	В					
Sensor size 1	(150 mm)	(176.02 mm)	060	5.761 to 6.065-in. (146.33 to 154.05 mm)	(3.4 to 15.6 mm)	0.134 to 0.31-in. (3.4 to 7.9 mm)	С					
				6.066 to 6.383-in. (154.08 to 162.13 mm)		0.134 to 0.297-in. (3.4 to 7.5 mm)	D					
				5.250 to 5.472-in. (133.35 to 139.99 mm)		0.134 to 1.132-in. (3.4 to 28.7 mm)	А					
sor 2.2	6-in.	6.93-in.	0.50	5.473 to 5.760-in. (139.01 to 146.30 mm)	0.134 to 1.354-in.	0.134 to 1.067-in. (3.4 to 27.1 mm)	В					
Sensor size 2	(150 mm)	(176.02 mm)	060	5.761 to 6.065-in. (146.33 to 154.05 mm)	(3.4 to 34.4 mm)	0.134 to 1.05-in. (3.4 to 26.7 mm)	С					
				6.066 to 6.383-in. (154.08 to 162.13 mm)		0.134 to 1.037-in. (3.4 to 26.3 mm)	D					
				6.384 to 6.624-in. (162.15 to 168.25 mm)		0.134 to 0.374-in. (3.4 to 9.5 mm)	В					
Sensor size 1	7-in. (180 mm)	7.93-in. (201.42 mm)	070	6.625 to 7.023-in. (168.28 to 178.38 mm)	0.134 to 0.614-in. (3.4 to 15.6 mm)	0.134 to 0.216-in. (3.4 to 5.5 mm)	С					
				7.024 to 7.392-in. (178.41 to 187.76 mm)		0.134 to 0.246-in. (3.4 to 6.2 mm)	D					
				6.384 to 6.624-in. (162.15 to 168.25 mm)		0.134 to 1.114-in. (3.4 to 28.3 mm)	В					
Sensor size 2	7-in. (180 mm)	7.93-in. (201.42 mm)	070	6.625 to 7.023-in. (168.28 to 178.38 mm)	0.134 to 1.354-in. (3.4 to 34.4 mm)	0.134 to 0.956-in. (3.4 to 24.3 mm)	С					
				7.024 to 7.392-in. (178.41 to 187.76 mm)		0.134 to 0.986-in. (3.4 to 25.0 mm)	D					
				7.393 to 7.624-in. (187.78 to 193.65 mm)		0.250 to 0.499-in. (6.4 to 12.6 mm)	В					
Sensor size 1	8-in.	9.688-in.	080	7.625 to 7.981-in. (193.68 to 202.72 mm)	0.250 to 0.73-in.	0.250 to 0.374-in. (6.4 to 9.5 mm)	С					
Ser	(200 mm)	(246.08 mm)	(246.08 mm)	(246.08 mm)	(246.08 mm)	(246.08 mm)	(246.08 mm)		7.982 to 8.400-in. (202.74 to 213.36 mm)	(6.4 to 18.5 mm)	0.250 to 0.312-in. (6.4 to 7.9 mm)	D
				8.401 to 8.766-in. (213.39 to 222.66 mm)		0.250 to 0.364-in. (6.4 to 9.2 mm)	E					
				7.393 to 7.624-in. (187.78 to 193.65 mm)		0.250 to 1.239-in. (6.4 to 31.4 mm)	В					
Sensor size 2	8-in.	9.688-in.	080	7.625 to 7.981-in. (193.68 to 202.72 mm)	0.250 to 1.47-in.	0.250 to 1.114-in. (6.4 to 28.3 mm)	С					
Ser	(200 mm)	(246.08 mm)		7.982 to 8.400-in. (202.74 to 213.36 mm)	(6.4 to 37.3 mm)	0.250 to 1.052-in. (6.4 to 26.7 mm)	D					
				8.401 to 8.766-in. (213.39 to 222.66 mm)		0.250 to 1.104-in. (6.4 to 28.0 mm)	E					
				8.767 to 9.172-in. (222.68 to 232.97 mm)		0.250 to 1.065-in. (6.4 to 27.1 mm)	A					
				9.173 to 9.561-in. (232.99 to 242.85 mm)		0.250 to 1.082-in. (6.4 to 27.5 mm)	В					
	10-in. (250 mm)	11.75-in. (298.45 mm)	100	9.562 to 10.020-in. (242.87 to 254.51 mm)	0.250 to 1.470-in. (6.4 to 37.3 mm)	0.250 to 1.012-in. (6.4 to 25.7 mm)	С					
N/A				10.021 to 10.546-in. (254.53 to 267.87 mm)		0.250 to 0.945-in. (6.4 to 24.0 mm)	D					
,				10.547 to 10.999-in. (267.89 to 279.37 mm)		0.250 to 1.018-in. (6.4 to 25.9 mm)	E					
	12:	42.2==:		11.000 to 11.373-in. (279.40 to 288.87 mm)	0.250. 1.150.	0.250 to 1.097-in. (6.4 to 27.9 mm)	В					
	12-in. (300 mm)	13.375-in. (339.73 mm)	120	11.374 to 11.938-in. (288.90 to 303.23 mm)	0.250 to 1.470-in. (6.4 to 37.3 mm)	0.250 to 0.906-in. (6.4 to 23.0 mm)	С					
				11.939 to 12.250-in. (303.25 to 311.15 mm)		0.250 to 1.159-in. (6.4 to 29.4 mm)	D					

## **Rosemount 585 Annubar Primary Element**



Rosemount 585 Annubar Primary Element utilizes a solid sensor construction that offers capabilities for severe service applications.

- Main steam line mounting hardware available
- Symmetrical sensor design allows bi-directional flow measurement
- Available in 4- to 96-in. (50 to 2400 mm) line sizes

#### **Additional information**

Specifications: page 154 Dimensional drawings: page 228

Installation and flow meter orientation: page 191

Table 29. Rosemount 585 Annubar Primary Element Ordering Information

The starred offerings (★) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Model	DP Flow primary type	
585	Severe service Rosemount Annubar Primary Element	
Applicatio	on type	,
S <sup>(1)(2)</sup>	Severe service Rosemount Annubar	*
M <sup>(3)</sup>	Main steam line Rosemount Annubar	
Fluid type		
L	Liquid	*
G	Gas	*
S	Steam	*
Rosemour	nt Annubar type	
F	Flanged with opposite side support	*
L	Main steam Rosemount Annubar with opposite side support	
G	Gear-drive flo-tap	
Line size		
040	4-in. (100 mm)	*
050	5-in. (125 mm)	*
060	6-in. (150 mm)	*
080	8-in. (200 mm)	*
100	10-in. (250 mm)	*
120	12-in. (300 mm)	*
140	14-in. (350 mm)	
160	16-in. (400 mm)	

Table 29. Rosemount 585 Annubar Primary Element Ordering Information

The starred offerings ( $\star$ ) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

to additional	delivery lead time.		
180	18-in. (450 mm)		
200	20-in. (500 mm)		
240	24-in. (600 mm)		
300	30-in. (750 mm)		
360	36-in. (900 mm)		
420	42-in. (1066 mm)		
480	48-in. (1210 mm)		
600	60-in. (1520 mm)		
720	72-in. (1820 mm)		
780	78-in. (1950 mm)		
840	84-in. (2100 mm)		
960	96-in. (2400 mm)		
Mounting	g assembly material		
С	CS (A105)		*
S	316/316L SST		*
L	CS (A350 LF2)		
G	Chrome-moly Grade F-11		
N	Chrome-moly Grade F-22		
J	Chrome-moly Grade F-91		
0 <sup>(4)</sup>	No mounting (customer supplied)		*
Piping ori	ientation		
Н	Horizontal piping		*
D	Vertical piping with downwards flow		*
U	Vertical piping with upwards flow		*
Sensor ma	aterial	<u>'</u>	
S	316/316L SST		*
H <sup>(5)</sup>	Alloy C-276		
<b>W</b> (3)(5)	Alloy 800H		
K <sup>(5)</sup>	PVDF		
Sensor siz	ze		
11	Sensor size 11		*
22 <sup>(6)</sup>	Sensor size 22		*
44(2)(3)	Sensor size 44		

### Table 29. Rosemount 585 Annubar Primary Element Ordering Information

The starred offerings (\*) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Mounting	type	
Α	ASME B16.5 raised face flanges	*
D <sup>(7)</sup>	EN-1092-1 raised face flanges	*
R <sup>(8)</sup>	ASME B16.5 ring type joint flanges	
0(3)	Main steam packing gland	
Mounting	pressure class	
1	Class 150/PN 16	*
3(6)	Class 300/PN 40	*
6(6)	Class 600/PN 100	*
N <sup>(5)(6)</sup>	Class 900	
F <sup>(5)(6)</sup>	Class 1500	
T(5)(6)	Class 2500	
0(3)(5)(6)	Main steam packing gland	
Opposite :	side support	
C(9)	NPT threaded opposite support assembly	*
D <sup>(3)</sup>	Welded opposite support assembly	*
E	Flanged opposite support assembly	
0(2)	No opposite side support required	*
Packing g	land/packing	
0 <sup>(1)</sup>	Not applicable	*
L(2)	SS packing gland/graphite packing	*
T(3)	Main steam packing gland/graphite packing	
Insertion	mechanism	
0(1)(3)	Not applicable	*
С	Alloy steel insertion rods/nuts	
S	SST insertion rods/nuts	
Isolation v	valve	
0(1)(3)	Not applicable or customer supplied	*
1	Gate valve, CS	
2	Gate valve, SST	
5	Ball valve, CS	
6	Ball valve, SST	
Temperat	ure measurement	
0	No temperature sensor required	*
R <sup>(4)(6)(9)</sup>	Remote RTD (1/2 NPT aluminum housing) with thermowell	
S(4)(6)(9)	Remote RTD (1/2 NPT SST housing) with thermowell	
150		Emerson com/Pesemount

#### Table 29. Rosemount 585 Annubar Primary Element Ordering Information

The starred offerings (★) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

	· · · · · · · · · · · · · · · · · · ·	
Transmitte	er connection platform	
3(6)(10)(11)	Direct-mount, 3-valve manifold	*
4(6)(10)(11)	Direct-mount, dual 3-valve manifolds	
6(6)(10)(12)	High temperature direct-mount 5-valve manifold	
7	Remote-mount 1/2-in. NPT threaded connections	
8(3)	Remote-mount 1/2-in. welded connections	*
Mounting	flange bolting materials	
A	ASTM A193 Gr B7 studs with A194 Gr 2H nuts	*
0	No flange studs/nuts supplied	*
Mounting	flange gasket materials	
1	Spiral wound, ASME B16.20, 304SS, flexible-graphite filler	*
0	No flange gasket supplied	*
2	Ring-joint, ASME B16.20, hexagonal, 316L	
3	Spiral wound, ASME B16.20, 316SS, PTFE filler	

### **Options** (include with selected model number)

Extended p	oduct warranty	
WR3	3-year limited warranty	*
WR5	5-year limited warranty	*
Optional mo	ounting for rectangular ducts	
RD	Annubar mounting for rectangular ducts	
Pressure tes	ting <sup>(13)</sup>	
P1	Hydrostatic testing with certificate	
PX	Extended hydrostatic testing with certificate	
Special clea	ning <sup>(6)(14)</sup>	
PA	Cleaning per ASTM G93 level D (section 11.4)	
Material tes	ting	
V1	Dye penetrant weld examination	
Material exa	nmination	
V2	Radiographic weld examination	
Flow calibra	tion	
W1	Flow calibration (average K)	
Special insp	ection	
QC1	Visual and dimensional inspection with certificate	*
QC7	Inspection and performance certificate	*

### Table 29. Rosemount 585 Annubar Primary Element Ordering Information

The starred offerings (\*) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

	delivery lead time.	
Material	raceability certification <sup>(15)</sup>	
Q8	Material traceability certification per EN 10204:2004 3.1	*
Positive r	naterial testing <sup>(15)</sup>	
V4	Positive material identification	
Code con	formance	
J2	ASME B31.1	
J3	ASME B31.3	
Materials	conformance <sup>(16)</sup>	
 J5	NACE MR-0175/ISO 15156	$\top$
Country	ertification	
 J6	European Pressure Directive (PED)	*
J1	Canadian Registration Certificate	
Instrume	nt valves for remote mount option	
G2	¹/₂-in. needle valves, SS	*
G6	¹/₂-in. OS&Y gate valve, SS	*
G1	<sup>1</sup> / <sub>2</sub> -in. needle valves, CS	
G3	<sup>1</sup> /2-in. needle valves, alloy C-276	
G5	¹/₂-in. OS&Y gate valve, CS	
Instrume	nt valve options <sup>(17)</sup>	
DV	Double instrument valves (four valves total)	*
Special sh	ipment	
Y1	Mounting hardware shipped separately	*
Assemble	mounting hardware <sup>(18)</sup>	
WP	Factory-welded main steam packing gland	*
Special di	mensions	
VM	Non-standard mounting dimensions	
Packing <b>c</b>	land plug <sup>(18)</sup>	
TP	Packing gland plug for steam blow down	
	on alignment bar <sup>(18)</sup>	
A1	Installation alignment bar	
	odel number: 585 M S L 120 J H W 44 0 0 0 T 0 0 8 0 0	

<sup>1.</sup> Required for Rosemount Annubar type F.

- 2. Required for Rosemount Annubar type G.
- 3. Required for Rosemount Annubar type L.
- 4. Not available with Rosemount Annubar type L.
- 5. Not available with Rosemount Annubar type G or L.
- 6. Not available with sensor material K.
- 7. Mounting flange bolting and gasket option code 0 must be selected.
- 8. Mounting flange gasket material option code 2 or 0 must be selected.
- 9. Not available with ASME 2500 mounting pressure class.
- 10. Not available with mounting pressure Class N, T, or F.
- 11. Not available with sensor material W.
- 12. Not available with sensor material H or W.
- 13. Applies to flow element only, mounting not tested.
- 14. If selected with Rosemount Annubar type F, mounting flange gasket material option code 3 must be selected.
- 15. For pressure retaining parts only, isolation and instrument valves are not included.
- 16. Materials of construction comply with metallurgical requirements within NACE MR0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.
- 17. Only available if instrument valves for remote mount option are selected.
- 18. Only available with Rosemount Annubar type L.

## **Specifications**

## **Performance specifications**

#### Performance statement assumptions

Includes K-factor (flow coefficient) uncertainty only

### Flow coefficient (K-factor) uncertainty

±1.50% (95% confidence)

## Repeatability

±0.10%

#### Line sizes

- Sensor size 11: 4-in. to 24-in. (100 to 600 mm)
- Sensor size 22: 6-in. to 36-in. (150 to 900 mm)
- Sensor size 44: 10-in. to 96-in. (250 to 2400 mm)

Table 30. Reynolds Number and Probe Width

Sensor size	Minimum rod Reynolds number (R <sub>d</sub> )	Probe width ( <sub>d</sub> ) (inches)
11	6500	0.80-in. (20,32 mm)
22	10000	1.20-in. (30,48 mm)
44	25000	2.28-in. (57,91 mm)

$$R_d = \frac{d \times v \times p}{\mu}$$

Where

d = Probe width (feet)

v = Velocity of fluid (ft/sec)

 $p = Density of fluid (lbm/ft^3)$ 

 $\mu$  = Viscosity of the fluid (lbm/ft-sec)

#### Sizing

Contact an Emerson representative for assistance. A Configuration Data Sheet is required prior to order for application verification. To complete the Configuration Data Sheet go to:

Emerson.com/Rosemount/DP\_Flow/Application/Pages/PCDefault.aspx

#### Flow turndown

10:1 or better

## **Functional specifications**

#### Service

- Liquid
- Gas
- Steam

#### **Process temperature limits**

**Table 31. Direct Mount Transmitter Connection Platform** 

Transmitter connection platform	Temperature limit
3-valve manifold (option codes 3, 4)	-40 to 500 °F (-40 to 260 °C)
5-valve manifold (option code 6) <sup>(1)</sup>	−40 to 750 °F (−40 to 398 °C)

1. Specification is 600 °F (315 °C) in steam service.

Table 32. Remote Mount Transmitter Connection Platform (Option Codes 7, 8)

Sensor material	Temperature limit
316 SST (option code S)	850 °F (454 °C)
Alloy C-276 (option code H)	1250 °F (677 °C)
Alloy 800H (option code W)	1500 °F (816 °C)
PVDF (option code K)	250 °F (121 °C)

#### Pressure and temperature limits

Table 33. Main Steam Line Rosemount Annubar (Option Code L)

Mounting material	Sensor material	Max. pressure at temp.	Max. temp.	
Chrome-moly grade F-11		2317 psig at 1000 °F (160 bar at 538 °C)	1100 °F	
Chrome-moly grade F-22	Alloy 800H	2868 psig at 1000 °F (198 bar at 538 °C)	(593°C)	
Chrome-moly grade F-91		3788 psig at 1100 °F (261 bar at 593 °C)	1200 °F (649 °C)	

Table 34. Severe Service Rosemount Annubar

Rosemount Annubar type	Sensor material	Max. flange rating	
	316 SST		
Flanged	Alloy C-276	Class 2500	
(option code F)	Alloy 800H		
	PVDF	Class 150	
Flanged flo-tap (option code G)	316 SST	Class 600	

## **Physical specifications**

#### **Temperature measurement**

#### Remote RTD

- Pt-100, single element, class B accuracy. Includes aluminum or 316SS terminal housing with 1/2-in. NPT conduit entry.
- Spring loaded with 1/2 NPT nipple and union thermowell
- 3/4-in. socketweld thermowell (4-in. insertion length)
- 316 SST and alloy C-276 thermowell material
- 3/4-in. CL 3000 socketweld branch fitting (fitting material matches selected mounting material)

#### **Rosemount Annubar sensor material**

- 316 SST
- Alloy C-276
- Alloy 800H
- PVDF

#### Mounting material

- CS (A105)
- 316 SST
- CS (A350 LF2)
- Chrome-moly Grade F-11
- Chrome-moly Grade F-22
- Chrome-moly Grade F-91

#### **Rosemount Annubar type**

See "Rosemount 585 Annubar Primary Element" on page 228.

#### Flanged with opposite side support model (option F)

- Provided with opposite side support requires two pipe penetrations
- Sensor flange is the same material as the Rosemount Annubar sensor
- Mounting materials compatible with common piping materials
- Optional flanged mounting hardware: nuts, studs and gaskets (EN-1092-1 flanged units supplied without nuts, studs, and gaskets)

#### Temperature limits by sensor material:

- SST: -325 to 850 °F (-198 to 454 °C)
- Alloy C-276: –325 to 1250 °F (–198 to 677 °C)
- PVDF: -40 to 250 °F (-40 to 121 °C)
- Alloy 800H: -325 to 1500 °F (-198 to 816 °C)

#### Main steam annubar with opposite side support (option L)

Provided with opposite side support, which requires two pipe penetrations

#### Temperature limits by sensor material

- Alloy 800H: -20 to 1200 °F (-198 to 816 °C)
- Only available in sensor size 44

#### Flanged flo-tap models (option G)

- Opposite side support is not available
- Packing gland material temperature limits
  - Graphite: -40 to 850 °F (-40 to 454 °C)
- Isolation valve option
  - The isolation valve will carry the same pressure rating as the sensor flange and mounting flange specified in the mounting type.

#### Temperature limits by sensor material

- 316 SST: -150 to 850 °F (-101 to 454 °C)
- Limited to Class 600/PN 100
- Only available in sensor size 44

#### Table 35. Mount Type Availability by Sensor Type

Option code	Mounting type/pressure class	Flanged	Main team	Gear-drive flo-tap
A1	Class 150 RF	Х		X
А3	Class 300 RF	Х		Х
A6	Class 600 RF	Х		Х
AN <sup>(1)</sup>	Class 900 RF	Х		
AF <sup>(1)</sup>	Class 1500 RF	Х		
AT <sup>(1)</sup>	Class 2500 RF	Х		
D1	PN 16 RF	Х		X
D3	PN 40 RF	Х		Х
D6	PN 100 RF	Х		Х

Table 35. Mount Type Availability by Sensor Type

Option code	Mounting type/pressure class	Flanged	Main team	Gear-drive flo-tap
R3	Class 300 RTJ	Х		X
R6	Class 600 RTJ	Х		Х
RN <sup>(1)</sup>	Class 900 RTJ	Х		
RF <sup>(1)</sup>	Class 1500 RTJ	Х		
RT <sup>(1)</sup>	Class 2500 RTJ	Х		
00(1)	Main steam packing gland		Х	

<sup>1.</sup> Remote mount instrument connection only.

**Table 36. Instrument Connection Temperature Ranges** 

Code	Description	Temperature
G1	Needle valves, CS	−20 to 550 °F (−29 to 288 °C)
G2	Needle valves, SST	–20 to 1000 °F
G3	Needle valves, alloy C-276	(-29 to 538 °C)
G5	OS&Y gate valve, CS	−20 to 800 °F (−29 to 427 °C)
G6	OS&Y gate valve, SST	-20 to 850 °F (-29 to 454 °C)

## **Rosemount 405 Compact Primary Element**



Rosemount 405 Compact Primary Element utilizes an easy to install direct mount primary element assembly.

- Available with conditioning orifice plate technology or Rosemount Annubar Primary Element Technology
- Rosemount 405P/C orifice primary elements are based on ASME/ISO corner tap design

#### **Additional information**

Specifications: page 160
Dimensional drawings: page 231
Installation and flow meter orientation: page 191

Table 37. Rosemount 405 Compact Primary Element Ordering Information

The starred offerings (★) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Model	Product description	
405	Compact orifice flow meter	
Primary el	ement technology	
A	Rosemount Annubar sensor size 1	*
С	Conditioning orifice plate	*
Р	Orifice plate	*
Material ty	уре	
S	316 SST	*
Line size		
005 <sup>(1)</sup>	¹/₂-in. (15 mm)	*
010 <sup>(1)</sup>	1-in. (25 mm)	*
015 <sup>(1)</sup>	1¹/₂-in. (40 mm)	*
020	2-in. (50 mm)	*
030	3-in. (80 mm)	*
040	4-in. (100 mm)	*
060	6-in. (150 mm)	*
080	8-in. (200 mm)	*
100(2)(3)	10-in. (250 mm)	*
120(2)(3)	12-in. (300 mm)	*
Temperatu	ire measurement	
T <sup>(4)</sup>	Integral RTD	*
N	No temperature measurement	*
R	Remote thermowell and RTD	

### Table 37. Rosemount 405 Compact Primary Element Ordering Information

The starred offerings (★) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Primary ele	Primary element type		
000	Rosemount Annubar sensor size 1	*	
040	0.40 beta ratio (β)	*	
050	0.50 beta ratio (β)	*	
065 <sup>(5)</sup>	0.65 beta ratio (β)	*	
Transmitter connection			
D3	Direct mount integral 3-valve manifold	*	
R3	Remote mount, NPT connections	*	
A3 <sup>(6)</sup>	Traditional, direct mount, 3-valve integral manifold with adapter plate, SST		

### **Options** (include with selected model number)

product warranty	
3-year limited warranty	*
5-year limited warranty	*
n accessories <sup>(2)</sup>	
ANSI alignment ring (Class 150)	*
ANSI alignment ring (Class 300)	*
ANSI alignment ring (Class 600)	*
DIN alignment ring (PN 16)	*
DIN alignment ring (PN 40)	*
DIN alignment ring (PN 100)	*
JIS alignment ring (10K)	
JIS alignment ring (20K)	
JIS alignment ring (40K)	
apters	
Flange adapters 316 SST (1/2 NPT)	*
erature application	
Graphite valve packing (T <sub>max</sub> = 850 °F)	
ration	•
Flow calibration, 3-Pt, conditioning orifice option C (all pipe schedules)	
Flow calibration, 10-Pt, conditioning option C (all schedules), Rosemount Annubar option A (schedule 40)	
esting	
Hydrostatic testing	
	5-year limited warranty  n accessories(2)  ANSI alignment ring (Class 150)  ANSI alignment ring (Class 300)  ANSI alignment ring (PN 16)  DIN alignment ring (PN 16)  DIN alignment ring (PN 100)  JIS alignment ring (PN 100)  JIS alignment ring (20K)  JIS alignment ring (20K)  JIS alignment ring (40K)  lapters  Flange adapters 316 SST (1/2 NPT)  retature application  Graphite valve packing (T <sub>max</sub> = 850 °F)  ration  Flow calibration, 3-Pt, conditioning option C (all pipe schedules)  Flow calibration, 10-Pt, conditioning option C (all schedules), Rosemount Annubar option A (schedule 40)

#### Table 37. Rosemount 405 Compact Primary Element Ordering Information

The starred offerings (★) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Special	cleaning <sup>(10)</sup>	
-	-	
P2	Cleaning for special processes	
PA	Cleaning per ASTM G93 level D (section 11.4)	
Special	inspection	
QC1	Visual and dimensional inspection with certificate	*
QC7	Inspection and performance certificate	*
Materia	l traceability certification	
Q8	Material Traceability Certification per EN10204:2004 3.1	*
Positive	material identification	
Q76	PMI	
Code co	nformance	
J2	ANSI/ASME B31.1	
J3	ANSI/ASME B31.3	
J4	ANSI/ASME B31.8	
J5 <sup>(11)</sup>	NACE MR-0175/ISO 15156	
J1	Canadian Registration	
Typical	model number: 405 C S 040 N 040 D3	

- 1. Available with Primary Element Technology P only.
- 2. For the 10- and 12-in. (250 and 300 mm) line size, the alignment ring must be ordered (installation accessories).
- 3. 10- and 12-in. (250 and 300 mm) line sizes not available with Primary Element Technology A.
- 4. Available with Primary Element Technology A only.
- $5. \qquad \text{For 2-in. (50 mm) line sizes the primary element type is 0.6 for Primary Element Technology code C.6} \\$
- 6. A transmitter connection available with Primary Element Technology C or P only.
- 7. Available with Primary Element Technology C only.
- 8. Available with Primary Element Technology C or A only.
- 9. For Rosemount Annubar option A, consult factory for pipe schedules other than sch. 40.
- 10. Available with Primary Element Technology C or P only.
- 11. Materials of construction comply with metallurgical requirements within NACE MR0175/ISO for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.

## **Specifications**

## **Performance specifications**

## Table 38. Rosemount 405C Compact Conditioning Orifice Technology

Beta ratio	Discharge coefficient uncertainty
$\beta$ = 0.40, 0.50, 0.65 <sup>(1)</sup>	±1.00% <sup>(2)</sup>

- For 0.65 beta and ReD < 10,000 add an additional 0.5 percent to the discharge coefficient uncertainty.
- 2.  $\pm 0.50\%$  for 0.40 beta and WD calibration.

#### Table 39. Rosemount 405P Compact Orifice Technology

Line size	Discharge coefficient uncertainty
<sup>1</sup> /2-in.(15 mm)	±2.25%
1 to 1 <sup>1</sup> / <sub>2</sub> -in. (25 to 40 mm) line size	±1.75%
2 to 12-in. (50 to 300 mm) line size	±1.25%

Table 40. Rosemount 405A Compact Annubar Technology

K Factor unce	ertainty	
All sizes	Standard	±1.50%
	Calibrated	±0.75%

#### Line sizes

- 1/2-in. (15 mm) not available for the Rosemount 405C and 405A
- 1-in. (25 mm) not available for the Rosemount 405C and 405A
- 1¹/2-in. (40 mm) not available for the Rosemount 405C and 405A
- 2-in. (50 mm)
- 3-in. (80 mm)
- 4-in. (100 mm)
- 6-in. (150 mm)
- 8-in. (200 mm)
- 10-in. (250 mm) not available for the Rosemount 405A
- 12-in. (300 mm) not available for the Rosemount 405A

#### Sizing

Contact an Emerson sales representative assistance. A "Configuration Data Sheet" is required prior to order for application verification. To complete the Configuration Data Sheet go to:

Emerson.com/Rosemount/DP-Flow-Configuration-Assistant.

## **Functional specifications**

#### Service

- Liquid
- Gas
- Vapor

#### **Process temperature limits**

#### **Direct mount transmitter**

- -40 to 450 °F (-40 to 232 °C)
- Up to 400 °F (204 °C) when top mounted in steam service

#### Remote mount transmitter

-148 to 850 °F (-100 to 454 °C) - SST

## Differential pressure limits for primary element technology C and P for all sizes Table 41. Maximum Allowable DP

(Measurement in inH<sub>2</sub>O [bar])

Line size (inches)	Temp (F)	DP limit (inH <sub>2</sub> O)
≤ 8	850	1200
	850	1000
	800	1050
= 10	700	1030
- 10	600	1100
	500	1150
	< 400	1200
	850	700
	800	
	700	750
= 12	600	750
	500	800
	400	850
	< 300	900

## Differential pressure limits for Primary Element Technology A

Table 42. Maximum Allowable DP (Measurement in inH<sub>2</sub>O [bar])

(		
Line size	Max DP < 400 °F (200 °C)	Max DP @ 450-850 °F (200-454 °C)
2-in. (50 mm)	1500 (3.73)	1500 (3.73)
3-in. (80 mm)	900 (2.24)	790 (1.97)
4-in. (100 mm)	570(1.42)	500 (1.24)
6-in. (150 mm)	290 (0.72)	250 (0.62)
8-in. (200 mm)	190 (0.47)	160 (0.40)

### Maximum working pressure

Pressure retention per ANSI B16.5 Class 600 or DIN PN100

## Vibration effect for Rosemount 405A, 405C, and 405P

Qualified per IEC61298-3 (2008) for field with general application or pipeline with low vibration level (10–1000 Hz test frequency range, 0.15 mm displacement peak amplitude,  $20 \text{ m/s}^2$  acceleration amplitude).<sup>(1)</sup>

The weight and length of the transmitter assembly shall not exceed 9.8 lb (4,45 kg) and 8.60-in. (218,44 mm).

 SST temperature housing is not recommended with Primary Element Technology A in applications with mechanical vibration.

#### Assembly to a transmitter

Select option code C11 for the Rosemount 3051S Transmitter (or option code S3 for the Rosemount 3051C or 2051C transmitters) to factory assemble the Rosemount 405 to a pressure transmitter. If the Rosemount 405 and transmitter are not factory assembled, they may be shipped separately. For a consolidated shipment, inform the Emerson representative when placing the order.

## **Physical specifications**

## Temperature measurement for primary element technology P and C

Integral RTD(1)

- 100 ohm platinum RTD temperature sensor assembly (316 SST mineral insulated cable) with ¹/4 NPT connection to wafer side and ¹/2 NPT connection to transmitter RTD sensor is separated from process fluid by ¹/16-in. and is pressure retaining rated for ANSI Class 600. Complies with IEC-751 Class B accuracy. Meets Intrinsic Safety certification.
- 1. Only available with Rosemount 3051SFC Compact Orifice Flow Meter.

#### Remote RTD(1)

- 100 Ohm platinum with 1/2 NPT nipple and union (078 series with Rosemount 644 housing) Model 0078D21N00A025T32Ex Connection Head: 00644-4410-0011
- Standard RTD cable is shielded armored cable, length is 12 ft. (3,66 m)
- Remote RTD material is SST thermowell
- 1/2- x 1/2 NPT, 316 SST
- Only available with Rosemount 3051SFC, 3051CFC, or 2051CFC Compact Orifice Flow Meter models.

## Temperature measurement for Primary Element Technology A

#### **Integral RTD**

- 100 Ohm platinum RTD
- 4-wire RTD (a = 0.00385)

#### **Physical details**

#### **Body**

316/316L SST

#### Manifold head/valves

316 SST

#### Orifice plate for primary element technologies C and P

50 micro-inch Ra surface finish

### Rosemount Annubar Primary Element for Primary Element Technology A

Roughened surface finish

#### Flange studs and nuts

- Customer supplied
- Available as a spare part

#### Transmitter connection studs and nuts

- Studs-A193 grade B8M.
- Nuts A194 grade 8M.

#### **Gasket and O-rings**

- Gaskets are customer supplied.
- Gaskets and O-rings are available as spare parts
- Gaskets and O-rings should be replaced when the Rosemount 405 is disassembled.

#### **Transmitter connections**

#### **Direct mount**

Available with Rosemount 3051SMV, 3051S, 3051, and 2051 Transmitters.

#### Remote mount

- Primary element technology C or P available with 1/4 NPT (standard) or 1/2 NPT (option code E) connections
- Remote mount transmitter connections available with 1/2 NPT for primary element technology A

### Orifice plate design

#### Orifice type

Square edged

#### Orifice pressure taps

Corner

## Alignment rings Table 43. Mounts Between the Following Flange Configurations

ASME B16.5 (ANSI)	DIN	JIS
Class 150	PN 16 (option code G)	10k (option code B)
Class 300	PN 40 (option code H)	20k (option code R)
Class 600	PN 100 (option code H)	40k (option code S)

ANSI 150 - Class 600 alignment ring is included as standard when ordering for up to 8-in. line size. For the 10- and 12-in. line size, the alignment ring must be ordered (installation accessories).

#### Typical orifice hole sizes

For Rosemouw22k79km z1i91Qljm nt 405C, beta is calculated by:  $\beta$  = d<sub>C</sub>/Pipe ID<sup>(1)</sup>, where the calculated bore is equal to 2x typical orifice hole size (d<sub>C</sub> = 2d). The tables below show the diameter of the typical orifice holes.

Based on schedule 40.

Table 44.  $\beta$  = 0.4 (Measurement in Inches [mm])<sup>(1)</sup>

13	Rosemount models	
Line size	405C	405P
<sup>1</sup> /2-in. (15 mm)		0.249 (6.33)
1-in. (25 mm)	N/A	0.420 (10.67)
1 <sup>1</sup> /2-in. (40 mm)		0.644 (16.36)
2-in. (50 mm)	0.413 (10.40)	0.827 (21.01)
3-in. (80 mm)	0.614 (15.60)	1.227 (31.17)
4-in. (100 mm)	0.805 (20.45)	1.610 (40.89)
6-in. (150 mm)	1.213 (30.81)	2.426 (61.62)
8-in. (200 mm)	1.596 (40.54)	3.192 (81.08)
10-in. (250 mm)	2.004 (50.90)	4.008 (101.80)
12-in. (300 mm)	2.400 (60.96)	4.800 (121.92)

1. Tolerance =  $\pm 0.002$ -in.

Table 45.  $\beta$  = 0.50 (Measurement in Inches [mm])<sup>(1)</sup>

line sine	Rosemount models	
Line size	405C	405P
<sup>1</sup> /2-in. (15 mm)		0.311 (7.90)
1-in. (25 mm)	N/A	0.525 (13.34)
1 <sup>1</sup> / <sub>2</sub> -in. (40 mm)		0.805 (20.45)
2-in. (50 mm)	0.517 (13.13)	1.034 (26.26)
3-in. (80 mm)	0.767 (19.48)	1.534 (38.96)
4-in. (100 mm)	1.007 (25.58)	2.013 (51.13)
6-in. (150 mm)	1.516 (38.51)	3.033 (77.04)
8-in. (200 mm)	1.995 (50.67)	3.991 (101.37)
10-in. (250 mm)	2.505 (63.63)	5.010 (127.25)
12-in. (300 mm)	3.000 (76.20)	6.000 (152.40)

<sup>1.</sup> Tolerance =  $\pm 0.002$ -in.

Table 46.  $\beta$  = 0.65 (Measurement in Inches [mm])<sup>(1)</sup>

line sine	Rosemount models	
Line size	405C	405P
<sup>1</sup> /2-in. (15 mm)		0.404 (10.26)
1-in. (25 mm)	N/A	0.682 (17.32)
1 <sup>1</sup> / <sub>2</sub> -in. (40 mm)		1.047 (26.59)
2-in. (50 mm)	0.620 (15.75) <sup>(2)</sup>	1.344 (34.14)
3-in. (80 mm)	0.997 (25.32)	1.994 (50.65)
4-in. (100 mm)	1.309 (33.25)	2.617 (66.47)
6-in. (150 mm)	1.971 (50.06)	3.942 (100.13)
8-in. (200 mm)	2.594 (65.89)	5.188 (131.78)
10-in. (250 mm)	3.257 (82.73)	6.513 (165.43)
12-in. (300 mm)	3.900 (99.06)	7.800 (198.12)

<sup>1.</sup> Tolerance =  $\pm 0.002$ -in.

Table 47. Rosemount 405 P or C Weight (Measurement in lb [kg])

Line size	Direct mount (D3)	Remote mount (R3)
<sup>1</sup> /2-in. (15 mm)	3.50 (1.73)	7.5 (3.70)
1-in. (25 mm)	4.25 (2.10)	8.25 (4.07)
1 <sup>1</sup> /2-in. (40 mm)	4.75 (2.34)	8.75 (4.32)
2-in. (50 mm)	5.00 (2.47)	9.00 (4.44)
3-in. (80 mm)	7.00 (3.45)	11.00 (5.43)
4-in. (100 mm)	9.50 (4.69)	13.50 (6.67)
6-in. (150 mm)	13.00 (6.41)	17.00 (8.40)
8-in. (200 mm)	18.25 (9.00)	22.25 (10.99)
10-in. (250 mm)	23.50 (11.59)	27.50 (13.58)
12-in. (300 mm)	29.50 (14.55)	33.50 (16.54)

Table 48. Rosemount 405A Weight (Measurement in lb [kg])

Line size	Direct mount (D3)	Remote mount (R3)
2-in. (50 mm)	5.59 (2.53)	7.26 (3.29)
3-in. (80 mm)	7.41 (3.36)	9.08 (4.12)
4-in. (100 mm)	9.18 (4.16)	10.85 (4.92)
6-in. (150 mm)	13.10 (5.94)	14.76 (6.70)
8-in. (200 mm)	17.12 (7.77)	18.78 (8.52)

<sup>2.</sup> For 2-in. (50 mm) line size, the Beta ( $\beta$ ) = 0.60.

## **Rosemount 1595 Conditioning Orifice Plate**



Rosemount 1595 Conditioning Orifice combines a flow conditioner with an orifice plate into a highly accurate primary element.

- Requires only two diameters of straight pipe run upstream and downstream from most flow disturbances
- Suitable for most gas, liquid, and steam applications
- Available in 2- to 24-in. (50 to 600 mm) line sizes

#### **Additional information**

Specifications: page 168
Dimensional drawings: page 233

Installation and flow meter orientation: page 191

Table 49. Rosemount 1595 Conditioning Orifice Plate Ordering Information

The starred offerings ( $\star$ ) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Product description	
Conditioning orifice plate	*
Paddle, square edged	*
Universal, square edged	*
2-in. (50 mm)	*
3-in. (76 mm)	*
4-in. (100 mm)	*
6-in. (150 mm)	*
8-in. (200 mm)	*
10-in. (250 mm)	*
12-in. (300 mm)	
14-in. (350 mm)	
16-in. (400 mm)	
18-in. (450 mm)	
20-in. (500 mm)	
24-in. (600 mm)	
g	
ASME B16.5 Class 150 RF (not compatible with standard ASME B16.36 orifice flanges)	*
ASME B16.36 Class 300 RF	*
ASME B16.36 Class 600 RF	*
ASME B16.36 Class 900 RF	*
ASME B16.36 Class 1500 RF	*
ASME B16.36 Class 2500 RF	*
	Paddle, square edged  Universal, square edged  2-in. (50 mm) 3-in. (76 mm) 4-in. (100 mm) 6-in. (150 mm) 8-in. (200 mm) 10-in. (250 mm) 12-in. (300 mm) 14-in. (350 mm) 14-in. (350 mm) 16-in. (450 mm) 20-in. (600 mm)  24-in. (600 mm)  9  ASME B16.5 Class 150 RF (not compatible with standard ASME B16.36 orifice flanges) ASME B16.36 Class 300 RF ASME B16.36 Class 900 RF ASME B16.36 Class 900 RF ASME B16.36 Class 1500 RF

### Table 49. Rosemount 1595 Conditioning Orifice Plate Ordering Information

The starred offerings (★) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

D1(1)	FN-1092-1 PN 10 (only	available with plate type P)				
D2 <sup>(1)</sup>		EN-1092-1 PN 16 (only available with plate type P)				
	, ,	` ' ' ' ' '				
D3 <sup>(1)</sup>	, ,	EN-1092-1 PN 25 (only available with plate type P)				
D4 <sup>(1)</sup>		EN-1092-1 PN 40 (only available with plate type P)				
D5 <sup>(1)</sup>	EN-1092-1 PN 63 (only	available with plate type P)				
D6 <sup>(1)</sup>	EN-1092-1 PN 100 (onl	y available with plate type P)				
R3 <sup>(1)</sup>	ASME B16.36 Class 300	RTJ (only available with orifice plate type code	U)			
R6 <sup>(1)</sup>	ASME B16.36 Class 600	RTJ (only available with orifice plate type code	U)			
R9 <sup>(1)</sup>	ASME B16.36 Class 900	RTJ (only available with orifice plate type code	U)			
RF <sup>(1)</sup>	ASME B16.36 Class 150	0 RTJ (only available with orifice plate type cod	e U)			
RT <sup>(1)</sup>	ASME B16.36 Class 250	0 RTJ (only available with orifice plate type cod	e U)			
Material	type					
S	316/316L SST			*		
М	Alloy 400					
Н	Alloy C-276					
Orifice p	late thickness	Plate type P	Plate type U			
A	0.125-in.	Line sizes 2- to 4-in. (50 to 100 mm)	Line size 2- to 6-in. (50 to 150 mm)	*		
В	0.250-in.	Line sizes 6- to 12-in. (150 to 300 mm)	Line size 8- to 12-in. (200 to 300 mm)	*		
С	0.375-in.	Line sizes 14- to 20-in. (350 to 500 mm)	N/A			
D	0.500-in.	Line size 24-in. (600 mm)	N/A			
Beta rati	o	'				
020	0.20 beta ratio					
040	0.40 beta ratio					
050	0.50 beta ratio			*		
065	0.65 beta ratio (0.60 be	eta ratio for line size option 020 only)		*		

### **Options** (include with selected model number)

Extended p	Extended product warranty				
WR3	3-year limited warranty	*			
WR5	5-year limited warranty	*			
Flow calibr	ation				
WD	WD Discharge coefficient verification (full 10 points)				
Plate holder <sup>(1)</sup>					
PH	Plate holder for universal type orifice plate for use with RTJ flange				

#### Table 49. Rosemount 1595 Conditioning Orifice Plate Ordering Information

The starred offerings (★) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Special c	leaning	
P2	Cleaning for special services	
Special i	nspection	
QC1	Visual and dimensional Inspection with certification	*
QC7	Inspection and performance certificate	*
Material	traceability certification	
Q8	Material Certification per ISO 10474 3.1-B and EN 10204 3.1	*
Positive	material identification	
Q76	PMI	
Code cor	aformance <sup>(3)</sup>	
J5	NACE MR-0175/ISO 15156	
Country	certification	
J1	Canadian Registration	
Typical n	nodel number: 1595 P 060 A3 S A 040	

- 1. Currently available up to 12-in. (300 mm) line size.
- 2. For use with a plate holder device in RTJ type flanges or orifice fittings.
- 3. Materials of construction comply with metallurgical requirements within NACE MR0175/ISO for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.

## **Specifications**

## **Performance specifications**

## Flow coefficient uncertainty

**Table 50. Discharge Coefficient Uncertainty** 

	Cd uncer	tainty <sup>(2)</sup>
Beta ratio (1)	With WD calibration	Standard
β = 0.20	±0.50%	± 0.50%
β = 0.40	±0.50%	±1.00%
β = 0.50	±1.00%	±1.50%
β = 0.65	±1.00%	±1.50%

- For 0.65 beta and ReD < 10,000, add an additional 0.5 percent to the discharge coefficient uncertainty.
- 2. When using the calibration factor (Fc) supplied.

#### Sizing

Contact an Emerson representative for assistance. A Configuration Data Sheet is required prior to order for application verification. To complete the Configuration Data Sheet go to:

Emerson.com/Rosemount/DP-Flow-Configuration-Assistant

#### Pressure tap orientation

Orient the Rosemount 1595 so pressure taps are centered between any two (of four) orifice bore holes. In addition, the pressure taps should be located at 90° to the plane of the last upstream elbow under any of these conditions:

- with less than six upstream pipe diameters
- with a 0.65 Beta

The Rosemount 1595 can be used with the following pressure taps:

- Flange pressure taps all beta sizes
- Radius pressure taps (D and D/2) 0.4 beta size or smaller

#### **Centering requirements**

The Rosemount 1595 should be installed so that it is centered in the pipes as recommended by ISO-5167.

## **Functional specifications**

## Service and flow range

Liquid, gas or steam turbulent flow, for pipe Reynold's numbers greater than 5,000.

#### Pipe sizes

2- to 24-in. (50 to 600 mm). Contact Emerson for other pipe sizes.

### Operating limits

For line sizes 2- to 24-in. (50 to 600 mm)

Temperature range: -320 to 1200 °F (-196 to 649 °C)

Up to 1200 inH2O differential pressure dependent on

temperature, line size, and material.

### Maximum working pressure

Flange rating per ANSI B16.5 and DIN EN 1092-1

## **Physical specifications**

#### **Material of construction**

Table 51. 1595 Materials of Construction

Code	Description	ASTM	UNS	DIN (WNr.)
S	316/316L SST	A240 Gr 316/316L	S31600/ S31603	1.4401/1.4404 (1.4436/1.4435)
Н	Alloy C-276	B575 Gr N10376	N10276	2.4819
М	Alloy 400	B127 Gr N04400	N04400	2.4360

#### Flange mounting hardware

The Rosemount 1595 can be used with the Rosemount 1496 Flange Union.

#### Orifice type

- Paddle, square-edge
- Universal, square-edge

#### Typical orifice hole sizes


Beta is calculated by:  $\beta = d_C$  /Pipe ID, where the calculated bore is equal to 2x typical orifice hole size ( $d_C = 2d$ ). Table 52 on page 0-169 shows the diameter of each of the four orifice holes.


Table 52. Typical Orifice Hole Sizes

Line size	Pipe ID	Beta (β) = 0.20 d	Beta (β) = 0.40 d	Beta ( $\beta$ ) = 0.50 d	Beta (β) = 0.65 d
2-in. (50.8 mm)	2.067-in. (52.502 mm)	0.207 (5.26)	0.413 (10.49)	0.517 (13.13)	0.620 (15.75) <sup>(1)</sup>
3-in. (76.2 mm)	3.068-in. (77.927 mm)	0.307 (7.80)	0.614 (15.60)	0.767 (19.48)	0.997 (25.32)
4-in. (101.6 mm)	4.026-in. (102.26 mm)	0.403 (10.25)	0.805 (20.45)	1.007 (25.57)	1.308 (32.22)
6-in. (152.4 mm)	6.065-in. (154.051 mm)	0.607 (15.42)	1.213 (30.81)	1.516 (38.52)	1.971 (50.06)
8-in. (203.2 mm)	7.981-in. (202.717 mm)	0.798 (20.27)	1.596 (40.54)	1.995 (50.68)	2.594 (65.89)
10-in. (254.0 mm)	10.02-in. (254.508 mm)	1.002 (25.45)	2.004 (50.90)	2.505 (63.63)	3.257 (82.73)
12-in. (304.8 mm)	12.00-in. (304.8 mm)	1.200 (30.48)	2.400 (60.96)	3.000 (76.2)	3.900 (99.06)
14-in. (355.6 mm)	13.124-in. (333.35 mm)	1.312 (33.32)	2.625 (66.68)	3.281 (83.34)	4.265 (108.33)
16-in. (406.4 mm)	15.000-in. (381.00 mm)	1.500 (38.10)	3.000 (76.20)	3.750 (95.25)	4.875 (123.83)
18-in. (457.2 mm)	16.876-in. (428.65 mm)	1.688 (42.88)	3.375 (85.73)	4.219 (107.16)	5.485 (139.32)
20-in. (508.0 mm)	18.812-in. (477.82 mm)	1.881 (47.78)	3.762 (95.55)	4.703 (119.46)	6.114 (155.30)
24-in. (609.6 mm)	22.624-in. (574.65 mm)	2.262 (57.45)	4.525 (114.94)	5.656 (143.66)	7.353 (186.77)

<sup>1.</sup> For 2-in. (50.8 mm) line size, the beta ( $\beta$ ) is 0.60.

## **Rosemount 1195 Integral Orifice Primary Element**

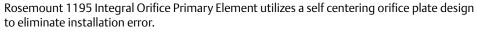

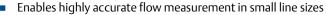

- Available with a variety of process connections
- Available in 1/2- to 11/2-in. (15 to 40 mm) line sizes

#### **Additional information**

Specifications: page 175 Dimensional drawings: page 237

Installation and flow meter orientation: page 191



The starred offerings (★) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Model	Product description	
1195	Integral orifice primary flow element	*
Body mat	terial and type	
F	316 SST, enhanced support body	*
Line size		
005	<sup>1</sup> / <sub>2</sub> -in. (15 mm)	*
010	1-in. (25 mm)	*
015	1 <sup>1</sup> / <sub>2</sub> -in. (40 mm)	*
Process c	onnection	
T1	NPT female body (not available with thermowell and RTD)	*
S1 <sup>(1)</sup>	Socket weld body (not available with thermowell and RTD)	*
P1	Pipe ends: NPT threaded	*
P2	Pipe ends: beveled	*
D1	Pipe ends: flanged, DIN PN16, slip-on	*
D2	Pipe ends: flanged, DIN PN40, slip-on	*
D3	Pipe ends: flanged, DIN PN100, slip-on	*
W1	Pipe ends: flanged, RF, ANSI Class 150, weld-neck	*
W3	Pipe ends: flanged, RF, ANSI Class 300, weld-neck	*
W6	Pipe ends: flanged, RF, ANSI Class 600, weld-neck	*
W9	Pipe ends: flanged, RF, ANSI Class 900, weld-neck	*
A1	Pipe ends: flanged, RF, ANSI Class 150, slip-on	
A3	Pipe ends: flanged, RF, ANSI Class 300, slip-on	
A6	Pipe ends: flanged, RF, ANSI Class 600, slip-on	
R1	Pipe ends: flanged, RTJ, ANSI Class 150, slip-on	

Table 53. Rosemount 1195 Integral Orifice Primary Element Ordering Information

The starred offerings ( $\star$ ) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

G <sup>(2)</sup>	High temperature (850 °F [454 °C])	
С	316 SST (11/2-in. transmitter studs)	*
Transmit	ter/body bolt material	
XXXX	Special bore size	
0034	0.034-in. (0,86 mm) for <sup>1</sup> /2-in. pipe	
0020	0.020-in. (0,51 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	
0014	0.014-in. (0,36 mm) for 1/2-in. pipe	
0010	0.010-in. (0,25 mm) for 1/2-in. pipe	
1184	1.184-in. (30,07 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	*
1022	1.022-in. (25,96 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	*
0748	0.748-in. (19,00 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	*
0512	0.512-in. (13,00 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	*
0376	0.376-in. (9,55 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	*
0295	0.295-in. (7,49 mm) for 1 <sup>1</sup> / <sub>2</sub> -in. pipe	*
0800	0.800-in. (20,32 mm) for 1-in. pipe	*
0630	0.630-in. (16,00 mm) for 1-in. pipe	*
0500	0.500-in. (12,70 mm) for 1-in. pipe	*
0345	0.345-in. (8,76 mm) for 1-in. pipe	*
0250	0.250-in. (6,35 mm) for 1-in. pipe	*
0150	0.150-in. (3,81 mm) for 1-in. pipe	*
0340	0.340-in. (8,64 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	*
0260	0.260-in. (6,60 mm) for 1/2-in. pipe	*
0196	0.196-in. (4,98 mm) for 1/2-in. pipe	*
0160	0.160-in. (4,06 mm) for <sup>1</sup> / <sub>2</sub> -in. pipe	*
0109	0.109-in. (2,77 mm) for 1/2-in. pipe	*
0066	0.066-in. (1,68 mm) for <sup>1</sup> /2-in. pipe	*
Bore size		
M	Alloy 400	
<u>-</u> Н	Alloy C-276	
<u> </u>	316/316L SST	*
Orifice p	late material	1
P9	Special process connection	
R9	Pipe ends: flanged, RTJ, ANSI Class 900, weld-neck	
R6	Pipe ends: flanged, RTJ, ANSI Class 600, slip-on	
R3	Pipe ends: flanged, RTJ, ANSI Class 300, slip-on	

#### Table 53. Rosemount 1195 Integral Orifice Primary Element Ordering Information

The starred offerings (★) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

## Options (include with selected model number)

Extende	l product warranty	
WR3	3-year limited warranty	*
WR5	5-year limited warranty	*
Tempera	ture sensor <sup>(3)</sup>	
S	Thermowell and RTD (SST temperature housing)	
Т	Thermowell and RTD (Aluminum temperature housing)	*
Assembl	e to transmitter <sup>(4)</sup>	
S4	Factory assembly – attach to transmitter and manifold	
Optional	bore calculation	
ВС	Bore calculation	*
Optional	connection	
G1	DIN 19213 transmitter connection	*
Adapters	for remote mounting	
G2	<sup>1</sup> /2–14 NPT remote adapters – SST	*
Pressure	testings <sup>(5)</sup>	
P1	Hydrostatic testing with certificate	
Special c	leaning	
P2	Cleaning for special services	
PA	Cleaning per ASTM G93 level D (section 11.4)	
Material	testing	
V1	Dye penetrant exam	
Material	examination	
V2	Radiographic examination (available only with process connection code W1, W3, W6, and W9)	
Flow cali	bration <sup>(6)</sup>	
WD	Discharge coefficient verification	
WZ	Special calibration	
Special i	nspection	
QC1	Visual and dimensional inspection with certificate	*
QC7	Inspection and performance certificate	*
Material	traceability certification	
Q8	Material traceability certification per EN 10204:2004 3.1	*

#### Table 53. Rosemount 1195 Integral Orifice Primary Element Ordering Information

The starred offerings (★) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Positive	material identification	
Q76	PMI	
Code co	nformance <sup>(7)</sup>	
J2	ANSI/ASME B31.1	
J3	ANSI/ASME B31.3	
J4	ANSI/ASME B31.8	
Materia	Is conformance <sup>(8)</sup>	
J5	NACE MR-0175/ISO 15156	
Country	certification	
J6	European Pressure Directive (PED)	*
J1	Canadian Registration	
Hardwa	re adjustments and ground screw	
A1	External ground screw for temperature connection head	
A2	Cover clamp and external ground screw for temperature connection head	
Typical	model number: 1195 F 010 W3 S 0150 C	

- 1. To improve pipe perpendicularity for gasket sealing, socket diameter is smaller than standard pipe O.D.
- 2. Not available with assemble to transmitter code S4.
- 3. Thermowell material is the same as the body material.
- 4. Not available with process connection code S1.
- 5. Does not apply to process connection codes T1 and S1.
- 6. Not available for bore sizes 0010, 0014, 0020, 0034, 0066, or 0109.
- 7. Not available with DIN process connection codes D1, D2, or D3.
- 8. Materials of construction comply with metallurgical requirements within NACE MR0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.

## **Specifications**

## **Performance specifications**

Table 54. Discharge Coefficient Uncertainty(1)

Orifice plate bore	Discharge coefficient uncertainty
Bore < 0.160	±2.50%
0.160 ≤ Bore < 0.500	±1.50%
0.500 ≤ Bore ≤ 1.000	±1.00%
1.000 < Bore	±1.50%

Without associated straight run piping, discharge coefficient uncertainty can add up to 1.5–5 percent additional error. Consult the factory for additional information.

#### Line sizes

- 1/2-in. (15 mm)
- 1-in. (25 mm)
- 1<sup>1</sup>/<sub>2</sub>-in. (40 mm)

## Sizing

Contact an Emerson sales representative for assistance. A "Configuration Data Sheet" is required prior to order for application verification. To complete the Configuration Data Sheet go to:

Emerson.com/Rosemount/DP-Flow-Configuration-Assistant

## **Functional specifications**

#### Service

- Liquid
- Gas
- Steam

### **Process temperature limits**

Standard (direct/remote mount)

-40 to 450 °F (-40 to 232 °C)

Extended (remote mount only with option code G):

- -112 to 850 °F (-80 to 454 °C)(1)
- 1. Consult factory for all-welded design for extended temperature.

#### Maximum working pressure

Pressure retention per ANSI B16.5 Class 900 or DIN PN100

Table 55. Standard HydroTest Pressures for Integral Orifice Plates in PSIG

Rosemount	Body typ	e	316SS	
1195	Description	Code	Max working pressure	Hydro pressure
	Threaded fitting	T1/P1	2160	3240
	Welded fitting	S1/P2	3000	4500
	Class 150 flanged	A1/W1/R1	275	413
	Class 300 flanged	A3/W3/R3	720	1080
¹/2-in. line	Class 600 flanged	A6/W6/R6	1440	2160
	Class 900 flanged	W9/R9	2160	3240
	DIN PN16 flanged	D1	232	348
	DIN PN 40 flanged	D2	580	870
	DIN PN100 flanged	D3	1450	2175
	Threaded fitting	T1/P1	2160	3240
	Welded fitting	S1/P2	2160	3240
	Class 150 flanged	A1/W1/R1	275	413
	Class 300 flanged	A3/W3/R3	720	1080
1-in. line	Class 600 flanged	A6/W6/R6	1440	2160
	Class 900 flanged	W9/R9	2160	3240
	DIN PN16 flanged	D1	232	348
	DIN PN 40 flanged	D2	580	870
	DIN PN100 flanged	D3	1450	2175
	T. 1.160	P1	1500	2250
	Threaded fitting	T1	2160	3240
	Welded fitting	S1/P2	2160	3240
	Class 150 flanged	A1/W1/R1	275	413
1–¹/2-in	Class 300 flanged	A3/W3/R3	720	1080
line	Class 600 flanged	A6/W6/R6	1440	2160
	Class 900 flanged	W9/R9	2160	3240
	DIN PN16 flanged	D1	232	348
	DIN PN 40 flanged	D2	580	870
	DIN PN100 flanged	D3	1450	2175

## **Physical specifications**

#### Material of construction

#### **Orifice Plate**

- 316/316L SST
- Alloy C-276
- Alloy 400

#### **Body**

A312 Gr 316/316L

#### Flange

- A182 Gr 316/316L
- Flange pressure limits are per ANSI B16.5
- Flange face finish per ANSI B16.5, 125 to 250 RMS

#### **Body Bolts/Studs**

- ASTM A193 Gr B8M studs
- ASTM A193 Gr B8M Class 2 body studs provided for high temperature option code G
- ASTM A193 Gr B8M Class 2 body studs provided for 1–1/2-in. (code 015) line size units ordered with high pressure process connection Option Codes W9, R9, T1, S1, or P2.

#### **Transmitter Connection Studs**

ASTM A193 Gr B8M studs

#### Gaskets/O-rings

- Glass filled PTFE
- Alloy X-750 provided for high temperature Option Code G
- Gaskets and O-rings must be replaced each time the Rosemount 1195 is disassembled for installation or maintenance.

#### Orifice type

#### Square edge-orifice bore sizes

0.066-in. and larger

## Quadrant edge-orifice bore sizes (for 1/2-in. (15 mm) line size only)

- 0.034-in. (0.86 mm)
- 0.020-in. (0.51 mm)
- 0.014-in. (0.35 mm)
- 0.010-in. (0.25 mm)

#### Note

Integral orifice bodies contain corner tapped pressure ports.


### Pipe lengths

Upstream and downstream associated piping sections are available on the Rosemount 1195. See "Rosemount 1195 Integral orifice plate" on page 237.

#### **Transmitter connections**

 $2^{1}/8$ -in. (54 mm) center-to-center. Other transmitter spacing can be accommodated using the optional remote adapters and customer-supplied impulse piping. DIN 19213 connections are available.

Figure 1. Bolt Types for Enhanced Support Body

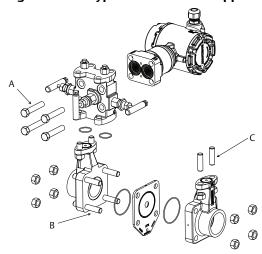

- A. Transmitter bolts- (4x)
- B. Orifice body studs (4x)
- C. Manifold studs (4x)

Table 56. Weight (Weights are Approximate)

Line size	Rosemount 1195 only		with Flanged piping <sup>(1)</sup>	
	lb	kg	lb	kg
<sup>1</sup> /2-in.	5.0	2.3	9.0	4.1
1-in.	7.0	3.2	13.0	5.9
1 <sup>1</sup> /2-in.	9.0	4.1	26.0	11.8

1. As supplied with standard lengths, ANSI Class 150 flanges.

## **Rosemount 1495 Orifice Plate**



Standard configuration is with a square-edged concentric bore in both paddle and universal type plates. Also available with a machined gasket sealing surface. Final inspection reports illustrating plate thickness, concentricity, outside dimensions, inside dimensions, roundness, and flatness are available.

 Bore calculations are available if the Configuration Data Sheet (CDS) is completed and option BC is selected.

## **Ordering information**

Table 57. Rosemount 1495 Orifice Plate Ordering Information

The starred offerings (★) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Model	Product description	
1495	Orifice plate primary	
Orifice pla	ite type	
PC	Paddle, concentric with better than 50 Ra (1.25 μm) finish	*
PG	Paddle, concentric, with 125–250 Ra (3.2–3.6 μm) surface finish for use with spiral wound gaskets	*
UC	Universal, Concentric	*
Line size		
020	2-in. (DN50)	*
025	2¹/₂-in. (DN65)	*
030	3-in. (DN80)	*
040	4-in. (DN100)	*
060	6-in. (DN150)	*
080	8-in. (DN200)	*
100	10-in. (DN250)	*
120	12-in. (DN300)	*
140	14-in. (DN350)	*
160	16-in. (DN400)	*
180	18-in. (DN450)	*
200	20-in. (DN500)	*
240	24-in. (DN600)	*
Flange rat	ing (determines plate outside diameter for paddle-style plates)	
A1	ASME B16.5 Class 150 RF (not typical for ASME B16.36 flange tapped flanges)	*
A3	ASME B16.36 Class 300 RF	*
A6	ASME B16.36 Class 600 RF	*
A9	ASME B16.36 Class 900 RF	*
AF	ASME B16.36 Class 1500 RF	*
AT <sup>(1)</sup>	ASME B16.36 Class 2500 RF	*

Table 57. Rosemount 1495 Orifice Plate Ordering Information

The starred offerings ( $\star$ ) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

XXXXX	Bore (XXXXX = XX.XXX)	*
Bore		
E(3)	Plate thickness per DIN 19206	*
D	0.500-in. (12.7 mm) – default for line size 24-in. (600 mm)	*
С	0.375 in. (9.53 mm) - default for line size 16 to 20-in. (400 to 500 mm)	*
В	0.250-in. (6.35 mm) – default for line size 8 to 14-in. (200 to 350 mm)	*
A	0.125-in. (3.2 mm) – default for line size 2 to 6-in. (50 to 150 mm)	*
Plate thickn	ess	
М	Alloy 400	
Н	Alloy C-276	
L	304/304L SST	*
Т	DIN 1.4571 (316Ti SST)	*
S	316/316L SST	*
Orifice plate	material type	
RT <sup>(1)</sup>	ASME B16.36 Class 2500 RTJ	
RF	ASME B16.36 Class 1500 RTJ	
R9	ASME B16.36 Class 900 RTJ	
R6	ASME B16.36 Class 600 RTJ	
R3	ASME B16.36 Class 300 RTJ	
D6	EN-1092-1 PN 100	*
D5 <sup>(2)</sup>	EN-1092-1 PN 63	*
D4	EN-1092-1 PN 40	*
D3	EN-1092-1 PN 25	*
D2	EN-1092-1 PN 16	*
D1	EN-1092-1 PN 10	*

### **Options** (include with selected model number)

Extende	Extended product warranty	
WR3	3-year limited warranty	*
WR5	5-year limited warranty	*
Bore cal	lculation	
ВС	Bore calculation	*
Drain/ve	Drain/vent hole <sup>(4)</sup>	
DV	Drain/vent hole	*

## Table 57. Rosemount 1495 Orifice Plate Ordering Information

	aal delivery lead time.			
Plate ho				
PH	Plate holder for RTJ flanges	*		
Alternat	te bore type			
TC	Conical entrance bore	*		
TE <sup>(4)</sup>	Eccentric bore			
TS <sup>(4)</sup>	Segmental bore	*		
TQ	Quadrant edged bore	*		
RO <sup>(6)</sup>	Restriction orifice plate	*		
Alternat	te pipe schedule <sup>(7)</sup>			
FA	Schedule 5S	*		
FB	Schedule 10	*		
FC	Schedule 10S	*		
FD	Schedule 20	*		
FE	Schedule 30	*		
FF	Schedule 40	*		
FG	Schedule 40S	*		
FH	Schedule standard (STD)			
FI	Schedule 60			
FJ	Schedule 80			
FK	Schedule 80S			
FL	Schedule extra strong (XS)			
FM	Schedule 100	*		
FN	Schedule 120	*		
FP	Schedule 140	*		
FQ	Schedule 160	*		
FR	Schedule double extra strong (XXS)	*		
Special o	cleaning			
P2	Cleaning for special services			
Special i	inspection	·		
QC1	Visual & dimensional inspection with certificate	*		
QC7	Inspection & performance certificate			
Materia	l traceability certification			
Q8	Material Traceability Certificate per and EN 10204:2004 3.1	*		
Code co	onformance <sup>(8)</sup>			
 J5	NACE MR-0175/ISO 15156			

### Table 57. Rosemount 1495 Orifice Plate Ordering Information

Country certification	
J1	Canadian Registration
Typical mod	el number: 1495 PC 040 A3 S A 02125

- 1. Available in line sizes from 2- to 12-in.
- 2. Previously PN 64.
- Standard plate thickness:
   DN50-65 = 3 mm
   DN80-450 = 4 mm
   DN500-600 = 6 mm
- 4. This option requires pipe I.D. to be specified. Please select alternate pipe schedule option or specify on order.
- 5. 3-in. line sizes and below use an integral plate holder. Line sizes 4-in. and above use a screw type plate holder. The plate holder material matches the plate material.
- 6. A standard beveled orifice plate is provided with the "RO" option code.
- 7. These options should only be selected if options DV, TE, or TS are selected. These options are not available with flange rating D1-D6.
- 8. Materials of construction comply with metallurgical requirements highlighted within NACE MR0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.

# **Rosemount 1496 Orifice Flange Union**



Standard flange styles are RF weld neck, RF slip-on, or RF threaded for paddle type orifice plates, and ring type joint RTJ weld neck for universal type plates with plate holders. All flange unions are supplied with studs, nuts, jackscrews, gaskets, and pipe plugs. Table 62 on page 189 lists standard pipe schedules.

- Meets ASME B16.36
- Meets EN-1092-1
- Threaded tap connection provided 180° apart

The following options are available:

- Socket weld tap connections
- SST flange bolting per ASTM A193 Grade B8M/A194 Grade 8M

Table 58. Rosemount 1496 Orifice Flange Union Ordering Information

Model	Product description			
1496	Orifice flange union			
Flange unio	on type			
WN	Raised face, weld neck, ASME B16.36	*		
TH	Raised face, threaded, ASME B16.36	*		
SO	Raised face, slip-on, ASME B16.36	*		
DN	Raised face, weld neck, EN-1092-1	*		
RJ	Ring joint, weld neck, ASME B16.36			
Line size				
020	2-in. (DN 50)	*		
025	2¹/₂-in. (DN 65)	*		
030	3-in. (DN 80)	*		
040	4-in. (DN 100)			
060	6-in. (DN 150)	*		
080	8-in. (DN 200)	*		
100	10-in. (DN 250)	*		
120	12-in. (DN 300)	*		
140	14-in. (DN 350)	*		
160	16-in. (DN 400)	*		
180	18-in. (DN 450)	*		
200	20-in. (DN 500)	*		
240	24-in. (DN 600)	*		

Table 58. Rosemount 1496 Orifice Flange Union Ordering Information

The starred offerings ( $\star$ ) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

	and a control of the	
Flange ra	ating	
A3 <sup>(1)</sup>	ASME B16.36 Class 300 RF	*
A6 <sup>(1)</sup>	ASME B16.36 Class 600 RF	*
A9 <sup>(1)</sup>	ASME B16.36 Class 900 RF	*
AF <sup>(1)</sup>	ASME B16.36 Class 1500 RF	*
AT <sup>(1)(2)</sup>	ASME B16.36 Class 2500 RF	*
D1	EN-1092-1 PN 10	*
D2	EN-1092-1 PN 16	*
D3	EN-1092-1 PN 25	*
D4	EN-1092-1 PN 40	*
D5 <sup>(3)</sup>	EN-1092-1 PN 63	*
D6	EN-1092-1 PN 100	*
R3	ASME B16.36 Class 300 RTJ	
R6	ASME B16.36 Class 600 RTJ	
R9	ASME B16.36 Class 900 RTJ	
RF	ASME B16.36 Class 1500 RTJ	
RT <sup>(2)</sup>	ASME B16.36 Class 2500 RTJ	
Flange u	inion material type	
С	CS	*
S	316/316L SST	*
T	DIN 1.4571 (316Ti SST)	*
L	304/304L SST	*
Н	Alloy C-276	
M	Alloy 400	

## **Options** (include with selected model number)

Extended product warranty			
WR3	3-year limited warranty	*	
WR5	5-year limited warranty	*	
Alternate p	pe schedule/wall thickness (4)(5)		
FA	Schedule 5S	*	
FB	Schedule 10	*	
FC	Schedule 10S	*	
FD	Schedule 20	*	
FE	Schedule 30	*	

## Table 58. Rosemount 1496 Orifice Flange Union Ordering Information

FF	Schedule 40	*		
FG	Schedule 40S	*		
FH	Schedule standard (STD)			
FI	Schedule 60			
FJ	Schedule 80	Schedule 80 ★		
FK	Schedule 80S	*		
FL	Schedule extra strong (XS)	*		
FM	Schedule 100	*		
FN	Schedule 120	*		
FP	Schedule 140	*		
FQ	Schedule 160	*		
FR	Schedule double extra strong (XXS)	*		
High ter	nperature gaskets <sup>(6)(7)</sup>			
G1	High temperature gaskets (spiral wound gaskets for use with 125–250 [3.2–6.3 μm] Ra flange surface finish)	*		
Alternat	e bolting material <sup>(8)</sup>			
SS	316 SST studs/nuts ★			
Alternat	e pressure tap type			
ST	Socketweld pressure taps (not available with flange union type code DN)			
Special o	leaning			
P2	Cleaned for special services	Π		
Special i	nspection			
QC1	Visual & dimensional inspection with certificate	*		
Materia	traceability certification			
Q8	Material Traceability Certificate per and EN 10204:2004 3.1 ★			
Code co	nformance <sup>(9)</sup>			
J5	NACE MR-0175/ISO 15156	Π		
Country	certification			
J1	Canadian Registration	Canadian Registration ★		
J6	Conformance to European Pressure Equipment Directive (PED)			
Typical r	nodel number: 1496 WN 040 A3 S			

- 1. A3-AT require WN, SO, TH, D1-D6 requires DN, R3-RT requires RJ flange type.
- 2. Available in line sizes from 2- to12-in.
- 3. Previously PN 64.
- 4. Default pipe schedules are listed in Table 62 on page 189 for the Rosemount 1496 Orifice Flange Unions.

5. These options are not available with flange type DN. These options should only be selected if the required pipe schedule is different from the default pipe schedule, as shown in Table 62 on page 189. Standard wall thickness for DIN weldneck flanges is per ISO EN 1092-1. Consult the factory if a different wall thickness is required.

- 6. Not available with flange union type code RJ.
- 7. For more gasket information please see the Temperature Limit table in the Rosemount 1495/1496 Specifications section of the Product Data Sheet.
- 8. SST bolting (ASTM A193 GR B8M Class 2) is classified as "low strength bolting" by the various ASME B31 piping codes and may not be suitable for all applications requiring code conformance.
- 9. Materials of construction comply with metallurgical requirements highlighted within NACE MR0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.

# **Specifications**

## **Functional specifications**

## Service and flow range

Liquid, gas or vapor turbulent flow, for pipe Reynold's numbers greater than the following<sup>(1)</sup>:

- AGA-3: 4,000
- ASME MFC-3M<sup>(2)</sup>: 5,000 and  $170 \, \beta^2 \, D$  (whichever is higher)
- ISO-5167<sup>(2)</sup>: 5,000 and 170 $\beta^2$  D (whichever is higher)
- 1. For flange tap applications.
- 2. D = pipe I.D. in mm.  $\beta$  = Beta ratio.

## Orifice flange operating limitations

Table 59. Temperature Limit for Raised Face Flanges (Based on Gasket Material)

Flange rating Applicability		Gasket description	Temperature rating
	Default	Compressed sheet gasket material, 1/16-in. thick, aramid and inorganic fibers in nitrile rubber binder.	−100 to 250 °F (−73 to121 °C)
Class 300 PN 10/16/25/40	If "P2" option	Compressed sheet gasket material, 1/16-in. thick, PTFE with inorganic filler.	–350 to 250 °F (–212 to 121 °C)
	If "G1" option	Spiral wound gasket per ASME B16.20, 0.175-in.  1" option uncompressed thickness, high temperature filler, inner ring. wetted material to equal or exceed flange material.	
	Default	Spiral wound gasket per ASME B16.20, 0.175-in. uncompressed thickness, flexible graphite filler, inner ring. wetted material to equal or exceed flange material.	−350 to 900 °F (−212 to 482 °C)
Class 600, 900, 1500, 2500 PN 63/100	If "P2" option	Spiral wound gasket per ASME B16.20, 0.175-in. uncompressed thickness, PTFE filler, inner ring. wetted material to equal or exceed flange material.	−300 to 500 °F (−184 to 260 °C)
	If "G1" option	Spiral wound gasket per ASME B16.20, 0.175-in. uncompressed thickness, high temperature filler, inner ring. wetted material to equal or exceed flange material.	-350 to 1250 °F <sup>(1)</sup> (-212 to 677 °C)

<sup>1.</sup> Dependent on flange material.

## Maximum working pressure

Per ASME B16.36 and B16.5 for types WN, SO, TH, and RJ Per EN-1092-1 for type DN

## Pipe sizes

2- to 24-in. (50 to 600 mm). Contact Emerson for pipe sizes less than 2-in. (50 mm) or greater than 24-in. (600 mm).

#### **Operating limits**

## Table 60. Orifice Plate Temperature Range per ASME B31.3

1495 material	Temperature rating
316/316L SST	
DIN 1.4571 (316 Ti SS)	-325 to 1000 °F (-198 to 538 °C)
304/304L SST	
Alloy C-276	−325 to 1250 °F (−198 to 677 °C)
Alloy 400	−325 to 900 °F (−198 to 482 °C)

Table 61. Orifice Flange Temperature Range (Based on Flange Material Rating per ASME B16.5)

<u> </u>	<u> </u>		
1496 material <sup>(1)</sup>	Temperature rating		
CS (ASTM A105 <sup>(2)</sup> )	−20 to 800 °F (−29 to 427 °C)		
316/316L SST (ASTM A182 F316/316L)	225 . 4000 % / 400 . 520 % /		
304/304L SST (ASTM A182 F304/304L)	- 325 to 1000 °F (-198 to 538 °C)		
Alloy C-276 (ASTM B462 N10276)	−325 to 1250 °F (−198 to 677 °C)		
Alloy 400 (ASTM B564 N04400)	−325 to 900 °F (−198 to 482 °C)		
DIN 1.4571 (316Ti SST) (ASTM A182 F316Ti)	-325 to 1000 °F (-198 to 538 °C)		

Depending on world area, flanges will conform to one or more of the listed material specifications.

<sup>2.</sup> When the J6 option is selected, this material will be supplied as ASTM A350 LF2

# **Physical specifications**

## **Rosemount 1496 Orifice Flange Union**

Standard flange styles are RF weld neck, RF slip-on, or RF threaded for paddle type orifice plates, and RTJ weld neck for universal type plates with plate holders. All flange unions are supplied with studs, nuts, jackscrews, gaskets, and pipe plugs. Table 62 on page 189 lists standard pipe schedules.

- Meets ASME B16.36 (WN, RJ,SO and TH)
- Meets EN-1092-1 (DN)
- Threaded tap connection provided 180° apart

#### The following options are available.

- Socket weld tap connections
- SST flange bolting per ASTM A193 Grade B8M/A194 Grade 8M

#### Standard pipe schedules

Table 62. Default Pipe Schedules for 1496 Orifice Flange Unions (1)(2)

Nominal pipe size	ASME Class				
NPS (DN)	300 (WN, TH, SO)	600 (WN, RJ)	900 (WN, RJ)	1500 (WN, RJ)	2500 (WN, RJ)
2 (50)	Standard			XS	160
21/2 (65)	Stand	ard		XS	(1)
3 (80)	Stand	ard	XS		(1)
4 (100)	Standard		XS		(1)
6 (150)	Standard		XS	(1)	
8 (200)	Standard		(1)		
10 (250)	Standard XS		(1)		
12 (300)	Standard XS		(1)		
14 (350)	Standard		(1)		
16 (400)	Standard		(1)		
18 (450)	Standard		(1)		
20 (500)	Standard		(1)		
24 (600)	XS			(1)	

<sup>1.</sup> If no default schedule provided - customer must specify pipe schedule.

#### Note

It is strongly encouraged to use the ordering codes to specify desired pipe schedule.

<sup>2.</sup> Standard wall thickness for DIN weldneck flanges is per ISO EN 1092-1 (2002). Consult factory if different wall thickness is required.

#### Materials of construction

#### **Rosemount 1495 Orifice Plate**

Table 63. Rosemount 1495 Materials of Construction

Material	Material specifications reference		
304/304L SST	ASTM A240 grade 304/304L		
316/316L SST	ASTM A240 grade 316/316L		
DIN 1.4571 (316Ti SST) <sup>(1)</sup>	ASTM A240 gr 316Ti (UNS S31635) (DIN material number 1.4571)		
Alloy C-276	ASTM B575 UNS N10276		
Alloy 400	ASTM B127 UNS N04400		

<sup>1.</sup> May not be available in all world areas.

#### **Orifice bore sizes**

Standard bore sizes are in  $^1/8$ -in. (3,2 mm) increments from  $^1/2$ -in. (12.7 mm) to 4-in. (101,6 mm) and in  $^1/4$ -in. (6,3 mm) increments from  $4^1/4$ - to 6-in. (107,95 to 152,4 mm).

If required, Emerson can determine the orifice bore. Basic flow data is required at the time of order, see Calculation Data Sheet.

Bore tolerances are within AGA and ASME specifications. Available options allow the user to have the Rosemount 1495 sized for specific operating conditions. The "Rosemount 1495 Orifice Plate" on page 179 specifies the physical parameters of the orifice from a detailed sizing calculation.

#### **Rosemount 1496 Flange Unions**

#### Table 64. Rosemount 1496 Materials of Construction

Material	Material specification reference		
CS <sup>(1)</sup>	ASTM A105/A350		
316 SST	ASTM A182 F316/316L		
DIN 1.4571 (316Ti SST) <sup>(2)</sup>	EN 10222-5 or ASTM A182		
304 SST	ASTM A182 F304/304L		
Alloy C-276	ASTM B462 N10276		
Alloy 400	ASTM B564 N04400		

- When the J6 option is selected, this material will be supplied as ASTM A350 LF2.
- 2. May not be available in all world areas.

#### Standard flange mounting hardware

- Studs: CS ASTM A193 Grade B7M
- Nuts: CS ASTM A194 Gr 2H
- Gaskets: Refer to Table 59 on page 187
- Pipe plugs: Match flange material

#### **Pressure taps**

Pressure tap connections are  $^{1}/_{2}$ -in. (12,7 mm) NPT and 180° apart as standard.

The tap hole diameter is

<sup>1</sup>/<sub>4</sub>-in. (6,35 mm) for 2-in. (51 mm) and 2 <sup>1</sup>/<sub>2</sub>-in. (63,5 mm) size, <sup>3</sup>/<sub>8</sub>-in. (9,6 mm) for 3-in. (76,2 mm) size, and

<sup>1</sup>/<sub>2</sub>-in. (12,7 mm) for 4-in. (101,6 mm) and larger sizes.

#### **Important**

Gasket failure can result in death, serious injury, or monetary loss. Emerson supplies a variety of gasket materials, and it is the purchaser's sole responsibility to specify a gasket compatible with their process. Emerson is not in a position to evaluate or guarantee compatibility with the material selected.

# Installation and flow meter orientation

## **Rosemount Annubar Flow Meter installation considerations**

Table 66. Rosemount Annubar Flow Meter Straight Run Requirements(1)

		Rosemount Annubar products							
		3051SFC_A, 3051CFC_A, 2051CFC_A, 3051SFA, 3051CFA, 2051CFA 405A, 585 <sup>(2)</sup>							
		without Straigh	ntening vanes <sup>(3)</sup>	with Straigh	tening vanes <sup>(4)</sup>				
		In plane	Out plane	from Disturbance	from Straightening vane				
	Reducer	12	12						
(inlet) mary	Expander	18	18						
ım (inlet primary	Single elbow (90°) or tee	8	10						
ᇤᅽ	Two elbows in plane	11	16	8					
tre. e of	Two elbow out of plane	23	28		4				
Upstream side of pri	Butterfly valve (75 to 100% open)	30	30						
	Ball/gate valve full open	8	10						
D	ownstream (outlet) side	4	4	4					

- 1. Consult an Emerson representative if a disturbance is not listed or if multiple disturbances are present.
- 2. Consult the factory for instructions regarding use in square or rectangular ducts.
- 3. In plane means the Rosemount Annubar is in the same plane as the elbow. Out of plane means the bar is perpendicular to the plane of the upstream elbow. Refer to Figure 2 on page 191.
- 4. Use straightening vane to reduce the required straight run length.

Table 67. Rosemount 3051SFA, 3051CFA, 2051CFA, 485 Drill Hole Size (Sensor Size)

Sensor size	Diameter
1	<sup>3</sup> /4-in. (19 mm)
2	1⁵/16-in. (34 mm)
3	2 <sup>1</sup> / <sub>2</sub> -in. (64 mm)

Table 68. Rosemount 585 Drill Hole Size (Sensor Size)

Sensor size	Hole diameter					
11	<sup>7</sup> /8-in. (23 mm)	+ 1/32-in. (0.80 mm) - 0.00				
22	1 <sup>5</sup> /16-in. (34 mm)	+ <sup>1</sup> / <sub>16</sub> -in. (159.00 mm)				
44	2 <sup>1</sup> / <sub>2</sub> -in. (64 mm)	- 0.00				

Figure 2. Rosemount Annubar In Plane and Out of Plane
In plane
Out of plane





## **Orifice plate installation considerations**

Table 69. Conditioning Orifice Plate Straight Pipe Requirements<sup>(1)</sup>

	Beta	Rosemount 3051SFC_C, 3051CFC_C, 20501CFC_C, 1595, 405C				
		0.40	0.50	0.65		
y (t)	Reducer					
m (inlet primary	Single 90° bend or tee					
ı.	Two or more 90 ° bends in the same plane		2	2		
ean of p	Two or more 90° bends in different planes	7				
Upstream (inlet) side of primary	Up to 10° of swirl					
Upstr	Butterfly valve (75 to 100% open)		5	5		
	Downstream (outlet) side of primary		2	2		

<sup>1.</sup> Consult an Emerson representative if a disturbance is not listed.

## Table 70. Standard Orifice Plate Straight Pipe Requirements(1)(2)(3)

	Beta	Rosemount 3051SFC_P, 3051CFC_P, 2051CFC_P, 1495, 405P				
			0.50	0.65		
	Reducer	5	8	12		
Upstream (inlet) side of primary	Single 90° bend or tee	16	22	44		
m (i	Two or more 90° bends in the same plane	10	18	44		
real	Two or more 90° bends in different plane	50	75	60		
Jpst	Expander	12	20	28		
Ball/gate valve fully open		12	12	18		
	Downstream (outlet) side of primary	6	6	7		

<sup>1.</sup> Consult an Emerson representative if disturbance is not listed.

Table 71. Integral Orifice Plate Straight Pipe Requirements(1)(2)(3)

			Rosemount 3051SFP, 3051CFP, 2051CFP, 1195						
	Beta	<0.20	0.40	0.50	0.60	0.70	0.75		
~ _	Reducer	20	20	20	20	23	25		
(inlet) imary	Expander	22	22	23	25	28	30		
اغ ق	Single elbow (90°) or tee	24	25	25	27	32	35		
Upstream side of pri	Two elbows in plane	25	27	28	31	35	38		
tre	Two elbows out of plane	30	31	33	37	42	45		
pside	Butterfly valve fully open	22	22	23	25	20	30		
) »	Gate valve fully open	22	22	23	25	28	30		
Downstream (outlet) side		10	10	10	10	10	10		

<sup>1.</sup> Recommended lengths are guidelines based on ASME MFC-14M.

<sup>2.</sup> Recommended lengths represented in pipe diameters per ISO 5167.

<sup>3.</sup> Refer to ISO 5167 for recommended lengths when using flow straighteners.

<sup>2.</sup> All straight lengths are expressed as multiples of the pipe inside diameter D and shall be measured from the upstream face of the orifice plate to the disturbance.

<sup>3.</sup> For beta ratios not listed, use requirements of next higher beta ratio listed.

## Orifice plate pipe orientation

Pipe orientation for Rosemount 3051SFC, 3051CFC, 2051CFC, 405C, 405P, 3051SFP, 3051CFP, 2051CFP, and 1195.

Orientation/flow	Process (1)					
direction	Gas	Liquid	Steam			
Horizontal	D/R	D/B	D/R			
Vertical Up	R	D/R	R			
Vertical down	D/R	NR	NR			

D = Direct mount acceptable (recommended).

#### Compact flow meter pipe centering

Improper centering of any orifice type device can cause an error of up to  $\pm 5\%$  in small line sizes. A centering mechanism (centering ring) independent of flange rating comes standard with the Rosemount 405 Compact Flow Meter series.

Rosemount 405C Conditioning Orifice

Rosemount 405P Compact Orifice





### **Rosemount 1595 Pressure Tap orientation**

Orient the Rosemount 1595 Conditioning Orifice Plate so that the pressure taps are centered between any two (of four) orifice bore holes. In addition, the pressure taps should be located at 90° to the plane of the last upstream elbow under these conditions:


- with less than six upstream pipe diameters
- with a 0.65 beta

#### **Pressure tap locations**

#### At least six upstream pipe diameters

If the installation location has at least six upstream pipe diameters, the pressure taps can be located between any two of the four holes of the Rosemount 1595 Orifice Plate. See Figure 3.

Figure 3. Rosemount 1595 Pressure Tap Locations

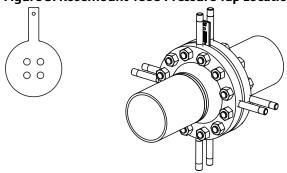

#### Within six diameters of an elbow

If the installation location has less than six upstream pipe diameters, the pressure taps can be located between two of the four holes of the Rosemount 1595 Orifice Plate 90° from the plane of the elbow. See Figure 4 and Figure 5.

Figure 4. Rosemount 1595 Pressure Tap Locations


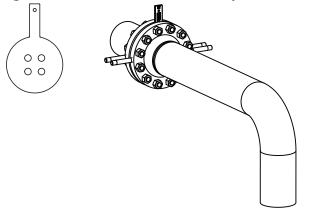


Figure 5. Rosemount 1595 Pressure Tap Locations

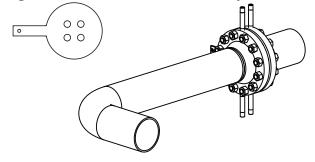

R = Remote mount acceptable.


NR = Not recommended.

## **Rosemount Annubar Flow Meter orientation**


For Rosemount 3051SFA, 3051CFA, 2051CFA, 485, and 585

Figure 6. Rosemount Annubar Direct Mount Flow Meter Orientation (Recommended)(1)


# Gas (horizontal)

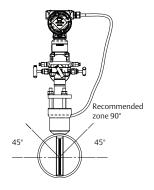


Gas (vertical)

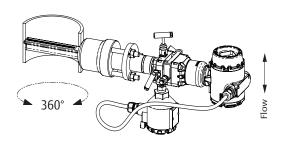


## Liquid and steam (horizontal)

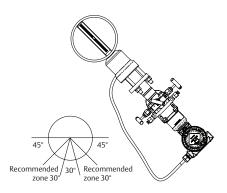

Steam (vertical)

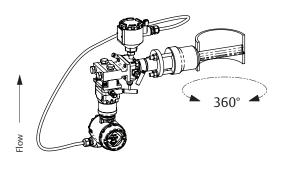


Liquid (vertical)

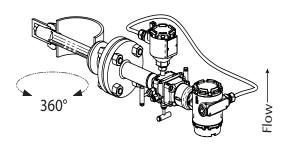

1. The flow meter orientation recommendations may vary for the manual and gear-drive flo-tap Rosemount Annubar types.

Figure 7. Rosemount Annubar Remount Mount Flow Meter Orientation (Recommended)(1)

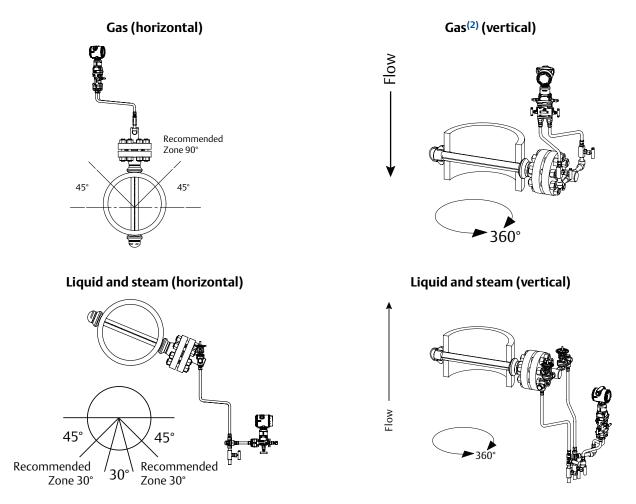


- 1. The flow meter orientation recommendations may vary for the Gear-drive flo-tap Rosemount Annubar type.
- 2. Can also be mounted for gas vertical up applications.


## **Rosemount 405 Flow Meter orientation**

For Rosemount 3051SFC, 3051CFC, 2051CFC, 405C, and 405P

Figure 8. Rosemount 405 Direct Mount Flow Meter Orientation (Recommended)

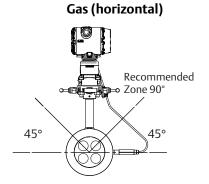

Liquid and steam (horizontal)

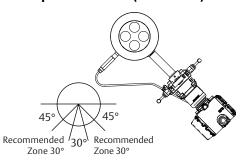

Gas (vertical)



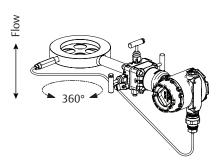



Figure 9. Rosemount 405 Remote Mount Flow Meter Orientation (Recommended)

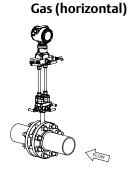


Liquid and steam (horizontal)

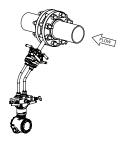

Gas (vertical)

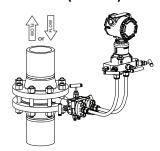


Liquid and steam (vertical)

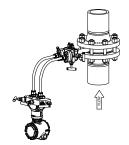

## **Rosemount 1195 Integral Orifice Flow Meter orientation**

## For Rosemount 3051SFP, 3051CFP, 2051CFP, and 1195

Figure 10. Rosemount 1195 Flow Meter Orientation with Traditional Style Manifold (Recommended)

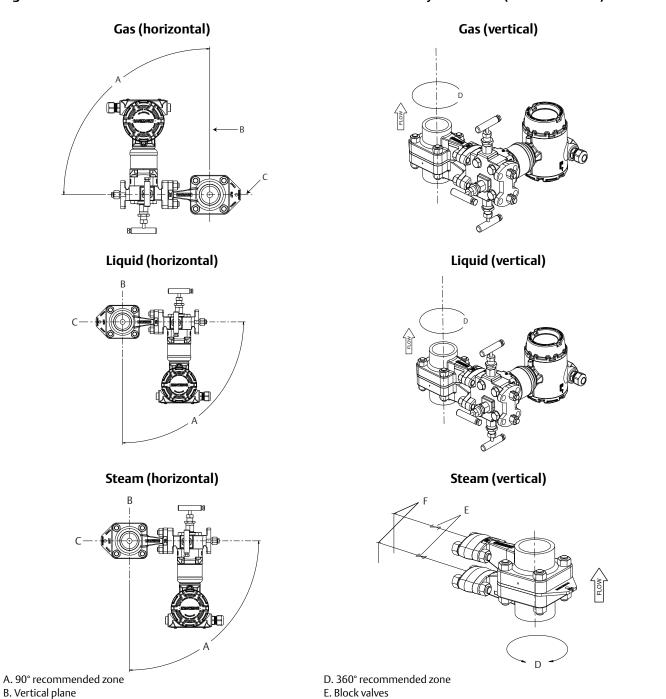


F. Vent valves


C. Horizontal plane

Figure 11. Rosemount 1195 Flow Meter Orientation with H-Pattern Manifold (Recommended)


## Gas (horizontal)

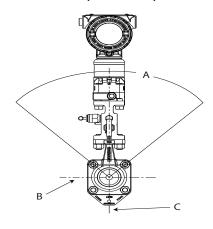

Liquid (horizontal)

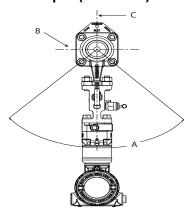


Steam (horizontal)

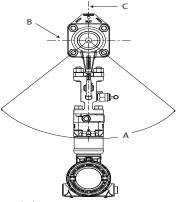


- A. 120° recommended zone B. Horizontal plane
- C. Vertical plane


## Gas (vertical)

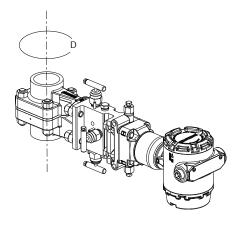

## Liquid (vertical)

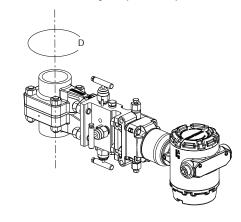

## Steam (vertical)

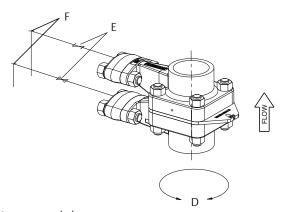


- D. 360° recommended zone
- E. Block valves
- F. Vent valves

# **Dimensional drawings**

## **Rosemount 3051SF DP Flow Meters**

Figure 12. Rosemount 3051SFA Pak-Lok Annubar Flow Meter<sup>(1)</sup>
Front view Side view Top view

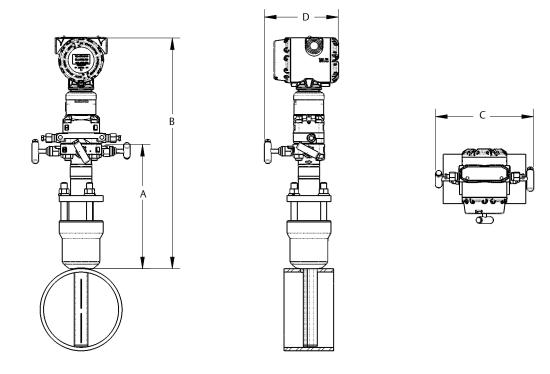


For A to D, see Table 72.

Table 72. Rosemount 3051SFA Pak-Lok Annubar Flow Meter Dimensional Data

Sensor size	A (Max)	B (Max)	C (Max)	D (Max)
1	8.50 (215.90)	17.10 (434.34)		
2	11.00 (279.40)	19.60 (497.84)	9.00 (228.60)	7.00 (177.80)
3	12.00 (304.80)	20.60 (523.24)		

<sup>1.</sup> The Rosemount Pak-Lok Annubar model is rated equivalent to ANSI Class 600 (1440 psig at 100 °F [99 bar at 38 °C]).

Figure 13. Rosemount 3051SFA Flange-Lok Annubar Flow Meter<sup>(1)</sup>
Front view Side view Top view

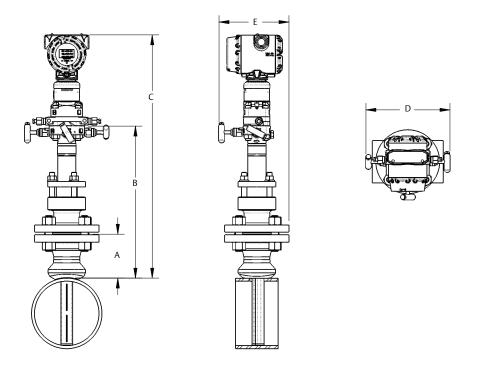


For A to E, see Table 73.

The Rosemount Flange-Lok Annubar model is available up to ANSI Class 600 (1440 psig at 100 °F [99 bar at 38 °C]).

Table 73. Rosemount 3051SFA Flange-Lok Annubar Flow Meter Dimensional Data

Sensor size	Flange size and rating	A ± 0.125 (3.2)	B ± 0.25 (6.4)	C (Max)	D (Max)	E (Max)
1	11/2 - Class 150	3.88 (98.55)				6.30 (160.02)
1	11/2 - Class 300	4.13 (104.90)				
1	11/2 - Class 600	4.44 (112.78)	12.25 (311.15)			
1	DN 40/PN 16	3.09 (78.49)	12.23 (311.13)			6.86 (174.24)
1	DN 40/PN 40	3.21 (81.54)				
1	DN 40/PN 100	3.88 (98.55)		20 70 (527 01)	9.00 (228.60)	
2	2 – Class 150	4.13 (104.90)		20.78 (527.81)		6.80 (172.72)
2	2 – Class 300	4.38 (111.25)				
2	2 – Class 600	4.75 (120.65)	14.25 (361.95)			
2	DN 50/PN 16	3.40 (86.36)	14.23 (301.93)			7.05 (179.07)
2	DN 50/PN 40	3.52 (89.41)				
2	DN 50/PN 100	4.30 (109.22)				
3	3 – Class 150	4.63 (117.60)				7.55 (191.77)
3	3 – Class 300	5.00 (127.00)				
3	3 – Class 600	5.38 (136.65)	17.50 (444.50)	26 02 (661 16)		
3	DN 80/PN 16	3.85 (97.79)	17.50 (444.50)	26.03 (661.16)		7.93 (201.42)
3	DN 80/PN 40	4.16 (105.66)				
3	DN 80/PN 100	4.95 (125.73)				

Figure 14. Rosemount 3051SFA Flanged with Opposite Side Support Annubar Flow Meter Front view Side view Top view

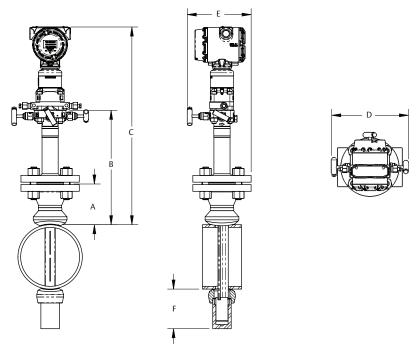


For A-F, see Table 74.

Table 74. Rosemount 3051SFA Flanged Annubar Flow Meter Dimensional Data

Sensor size	Flange size and rating	A ± 0.125 (3.2)	B ± 0.25 (6.4)	C ± 0.25 (6.4)	D (Max)	E (Max)	F (Max)	
	1 <sup>1</sup> /2 – Class 150	3.88 (98.55)				6.30 (160.02)		
	1 <sup>1</sup> /2 – Class 300	4.13 (104.90)						
	1 <sup>1</sup> /2 – Class 600	4.44 (112.78)	11.00 (279.40)	19.53 (496.06)	9.00 (228.60)			
	DN 40/PN 16	3.09 (78.49)	11.00 (275.40)	19.55 (490.00)	9.00 (228.00)	6.86 (174.24)	3.50 (88.90)	
1	DN 40/PN40	3.21 (81.54)					3.30 (88.30)	
	DN 40/ PN 100	3.88 (98.55)						
	1 <sup>1</sup> /2 – Class 900	4.94 (125.48)	9.31 (236.47)					
	1 <sup>1</sup> /2 – Class 1500	4.54 (125.46)	9.51 (230.47)	N/A	N/A	N/A		
	1 <sup>1</sup> /2 – Class 2500	6.76 (171.70)	11.63 (295.40)				4.00 (101.60)	
	2 – Class 150	4.13 (104.90)		20.53 (521.46) 9.0			6.80 (172.72)	
	2 – Class 300	4.38 (111.25)	12.00 (304.80)				5.00 (127.00)	
	2 – Class 600	4.75 (120.65)			9.00 (228.60)			
	DN 50/PN 16	3.40 (86.36)			3100 (223100)	7.05 (179.10)		
2	DN 50/PN 40	3.52 (89.41)						
	DN 50/ PN 100	4.30 (109.22)						
	2 –Class 900	5.88 (149.35)	10.50 (266.70)		N/A			
	2 – Class 1500	3.88 (143.33)	10.30 (200.70)	N/A		N/A		
	3 – Class 2500	9.88 (250.95)	15.63 (397.00)				4.50 (114.30)	
	3 – Class 150	4.63 (117.60)				7.55 (191.77)		
	3 – Class 300	5.00 (127.00)						
	3 – Class 600	5.38 (136.65)	13.50 (342.90)	22.03 (559.56)	9.00 (228.60)		4.00 (101.60)	
2	DN 80/PN 16	3.85 (97.79)	15.50 (542.50)	22.03 (333.30)	3.00 (228.00)	7.93 (201.42)	4.00 (101.00)	
3	DN 80/PN 40	4.16 (105.66)						
	DN 80/PN 100	4.95 (125.73)						
	4 – Class 900	8.19 (208.03)	13.06 (331.72)					
	4 – Class 1500	8.56 (217.42)	13.81 (350.77)	N/A	N/A	N/A	7.00 (177.80)	
	4 – Class 2500	11.19 (284.23)	17.31 (439.67)					

Figure 15. Rosemount 3051SFA Flanged Flo-Tap Annubar Flow Meter<sup>(1)</sup>
Front view Side view Top view

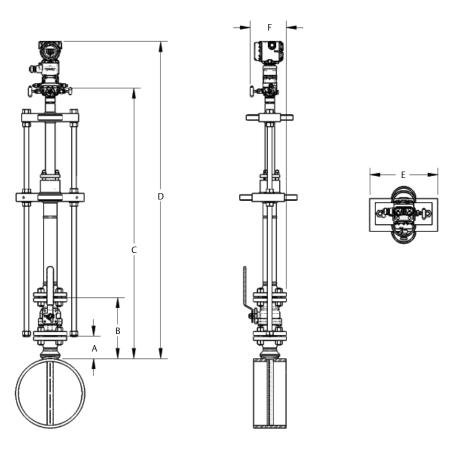

For A-F, see Table 75 on page 203.

<sup>1.</sup> The Rosemount Flanged Flo-Tap Annubar Flow Meter is available with either the manual or gear drive options.

Table 75. Rosemount 3051SFA Flanged Flo-Tap Annubar Flow Meter Dimensional Data<sup>(1)(2)</sup>


Sensor size	Flange size and rating	A ± 0.125 (3.2)	B ± 0.25 (6.4)	C <sup>I</sup> (Max) (gear drive)	C <sup>I</sup> (Max) (manual)	D (Max)	E (Max)	F (Max)
	1 <sup>1</sup> /2 – Class 150	3.88 (98.55)	10.50 (266.70)					6.30 (160.02)
	1 <sup>1</sup> /2 – Class 300	4.13 (104.90)	11.75 (298.45)					
1	1 <sup>1</sup> /2 – Class 600	4.44 (112.78)	14.06 (357.12)	NI/A	17 77 (451 36)		10 50/200 70)	
1	DN 40/PN 16 <sup>(3)</sup>	3.09 (78.49)		N/A	17.77 (451.36)		10.50 (266.70)	6.86 (174.24)
	DN 40/PN 40 <sup>(3)</sup>	3.21 (81.54)	(3)					
	DN 40/PN 100 <sup>(3)</sup>	3.88 (98.55)						
	2 – Class 150	4.13 (104.90)	11.25 (285.75)				8.53	6.80 (172.72)
	2 – Class 300	4.38 (111.25)	13.00 (330.20)					
	2 – Class 600	4.75 (120.65)	16.38 (416.05)	24.44.(620.70)	21 20 (520 40)	1.20 (538.48) C+8.53 (216.66)		
2	DN 50/PN 16 <sup>(3)</sup>	3.40 (86.36)		24.44 (620.78)	24.44 (620.78)   21.20 (538.48)   (216.66)   12.56 (319.02		12.56 (319.02)	7.05 (179.07)
	DN 50/PN 40 <sup>(3)</sup>	3.52 (89.41)	(3)					
	DN 50/PN 100 <sup>(3)</sup>	4.30 (109.22)						
	3 – Class 150	4.63 (117.60)	12.75 (323.85)					7.55 (191.77)
	3 – Class 300	5.00 (127.00)	16.25 (412.75)					
	3 – Class 600	5.38 (136.65)	19.50 (495.30)	26 27 (660 00)	22.14/507.76\		1412/250.00\	
3	DN 80/PN 16 <sup>(3)</sup>	3.85 (97.79)		26.37 (669.80)	23.14 (587.76)		14.13 (358.90)	7.93 (201.42)
	DN 80/PN 40 <sup>(3)</sup>	4.16 (105.66)	(3)					
	DN 80/PN 100 <sup>(3)</sup>	4.95(125.73)						

<sup>1.</sup> Inserted, C dimension = pipe I.D. + wall thickness +  $B + C^{I}$ 

<sup>2.</sup> Retracted, C dimension = 2 x (pipe I.D. + wall thickness + B) +  $C^1$ 

<sup>3.</sup> DIN valves are not offered.

Figure 16. Rosemount 3051SFA Threaded Flo-Tap Annubar Flow Meter<sup>(1)</sup>

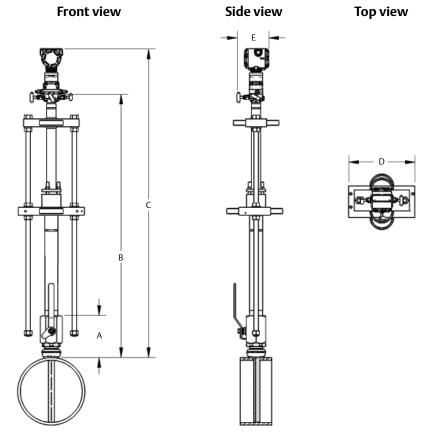

For A-E, see Table 76.

1. The Rosemount Threaded Flo-Tap Annubar Flow Meter is available with both the manual and gear drive options.

Table 76. Rosemount 3051SFA Threaded Flo-Tap Annubar Flow Meter Dimensional Data<sup>(1)(2)</sup>

Sensor size	A ± 0.50 (12.7)	B <sup>I</sup> (Max) (gear drive)	B <sup>I</sup> (Max) (manual)	C (Max)	D (Max)	E (Max)
1	7.51 (190.75)	N/A	16.96 (430.78)	B + 8.53	10.50 (266.70)	6.90 (175.26)
2	8.17 (207.52)	23.62 (599.95)	20.39 (517.91)	(216.66)	12.56 (319.02)	0.50 (175.20)
3(3)	N/A	N/A	N/A	N/A	N/A	N/A

- 1. Inserted, B dimension = pipe I.D. + wall thickness + A + B
- 2. Retracted, B dimension = 2 x (pipe I.D. + wall thickness + A) +  $B^{I}$
- 3. Sensor size 3 is not available in a threaded flo-tap.

Figure 17. Rosemount 3051SFC Compact Flow Meter Front view Side view **Top view** Primary element type code A 1.125 (28,58) with Integral RTD Primary element type code C and P No temperature measurement **−**1.125 (28,58)


For A-F, see Table 77.

Table 77. Rosemount 3051SFC Compact Dimensional Data

Primary element type	Α	В	Transmitter height	С	D	E	F
А	5.62	Transmitter		6.00 (152.40) - closed	10.00 (254.00) - closed 10.25 (260.3) - open	N/A	
P and C	(142.75)	height + A	7.70 (195.58)	8.25 (209.55) - open	6.25 (158.75) - open	10.20 (257.08) - closed 10.40 (264.16) - open	Max. of 7.20 (182.88)

Figure 18. Rosemount 3051SFP Integral Orifice Flow Meter

## Front view

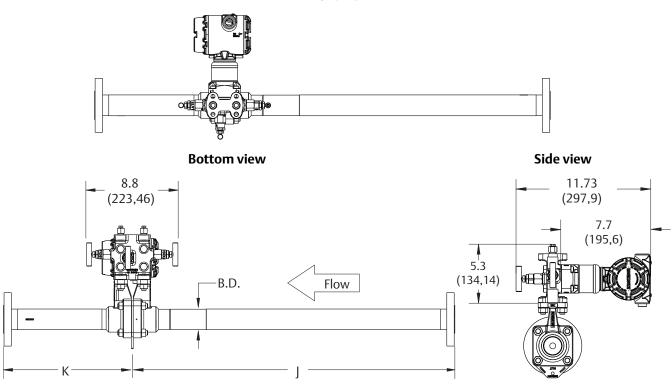

Dimensions are in inches (millimeters).

Table 78. Rosemount 3051SFP Integral Orifice Flow Meter Dimensional Data

Dimonsion	Line size					
Dimension	¹/2-in. (15 mm)	1-in. (25 mm)	1 <sup>1</sup> / <sub>2</sub> -in. (40 mm)			
J (Beveled/threaded pipe ends)	12.54 (318.52)	20.24 (514.10)	28.44 (722.40)			
J (RF slip-on, RTJ slip-on, RF-DIN slip on)	12.62 (320.55)	20.32 (516.13)	28.52 (724.41)			
J (RF Class 150, weld neck)	14.37 (365.00)	22.37 (568.20)	30.82 (782.83)			
J (RF Class 300, weld neck)	14.56 (369.82)	22.63 (574.80)	31.06 (788.92)			
J (RF Class 600, weld neck)	14.81 (376.17)	22.88 (581.15)	31.38 (797.05)			
K (Beveled/threaded pipe ends)	5.74 (145.80)	8.75 (222.25)	11.91 (302.51)			
K (RF slip-on, RTJ slip-on, RF-DIN slip on) <sup>(1)</sup>	5.82 (147.83)	8.83 (224.28)	11.99 (304.55)			
K (RF Class 150, weld neck)	7.57 (192.28)	10.88 (276.35)	14.29 (362.97)			
K (RF Class 300, weld neck)	7.76 (197.10)	11.14 (282.96)	14.53 (369.06)			
K (RF Class 600, weld neck)	8.01 (203.45)	11.39 (289.31)	14.85 (377.19)			
B.D. (Bore Diameter)	0.66 (16.76)	1.10 (27.94)	1.57 (39.88)			
J (RF and RTJ Class 900, weld neck)	15.13 (384.30)	23.32 (592.33)	31.88 (809.75)			
K (RF and RTJ Class 900, weld neck)	8.33 (211.58)	11.83 (300.48)	15.35 (389.89)			

<sup>1.</sup> Downstream length shown here includes plate thickness of 0.162-in. (4,11 mm).

Top view

## **Rosemount 3051CF Flow Meter series**

Front view

Figure 19. Rosemount 3051CFA Pak-Lok Annubar Flow Meter<sup>(1)</sup>


Side view

For A-D, see Table 79.

Table 79. Rosemount 3051CFA Pak-Lok Annubar Flow Meter Dimensional Data

Sensor size	A (Max)	B (Max)	C (Max)	D (Max)
1	8.50 (215.90)	15.60 (396.24)		
2	11.00 (279.40)	18.10 (460.74)	9.00 (228.60)	6.00 (152.40)
3	12.00 (304.80)	19.10 (485.14)		

<sup>1.</sup> The Rosemount Pak-Lok Annubar model is equivalent to Class 600 ANSI (1440 psig at 100 °F [99 bar at 38 °C]).

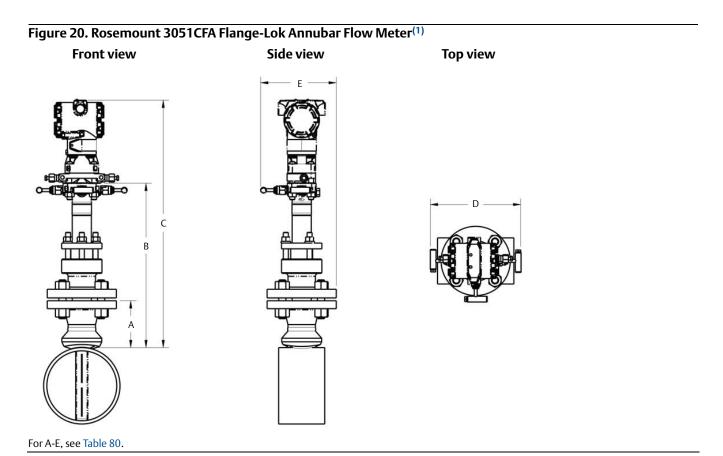

1. The Rosemount Flange-Lok Annubar model can be direct mounted up to ANSI Class 600 (1440 psig at 100 °F [99 bar at 38 °C]).

Table 80. Rosemount 3051CFA Flange-Lok Annubar Flow Meter Dimensional Data

Sensor size	Flange size and rating	A ± 0.125 (3.2)	B ± 0.25 (6.4)	C (Max)	D (Max)	E (Max)
	11/2 - Class 150	3.88 (98.55)				6.30 (160.02)
	1 <sup>1</sup> / <sub>2</sub> – Class 300	4.13 (104.90)				
1	11/2 - Class 600	4.44 (112.78)	12.25 (311.15)	19.35 (491.49)		
'	DN 40/PN 16	3.09 (78.49)	12.23 (311.13)	19.55 (491.49)		6.86 (174.24)
	DN 40/PN 40	3.21 (81.54)			9.00 (228.60)	
	DN 40/ PN 100	3.88 (98.55)				
	2 – Class 150	4.13 (104.90)		21.35 (542.29)		6.80 (172.72)
	2 – Class 300	4.38 (111.25)				
2	2 – Class 600	4.75 (120.65)	14.25 (361.95)			
2	DN50/PN16	3.40 (86.36)				7.05 (179.07)
	DN 50/PN 40	3.52 (89.41)				
	DN 50/PN 100	4.30 (109.22)				
	3 – Class 150	4.63 (117.60)				7.55 (191.77)
	3 – Class 300	5.00 (127.00)				
3	3 – Class 600	5.38 (136.65)	17 50 (444 50)	24 60 (624 94)		
3	DN 80/PN 16	3.85 (97.79)	17.50 (444.50)	24.60 (624.84)		7.93 (201.42)
	DN 80/PN 40	4.16 (105.66)				
	DN 80/PN 100	4.95 (125.73)				

Dimensions are in inches (millimeters).

Figure 21. Rosemount 3051CFA Flanged Annubar Flow Meter

Front view Side view Top view


For A-F, see Table 81.

Table 81. Rosemount 3051CFA Flanged Annubar Flow Meter Dimensional Data

Sensor size	Flange size and rating	A ± 0.125 (3.2)	B ± 0.25 (6.4)	C ± 0.25 (6.4)	D (Max)	E (Max)	F (Max)
	1 <sup>1</sup> /2 – Class 150	3.88 (98.55)				6.30 (160.02)	
	1 <sup>1</sup> /2 – Class 300	4.13 (104.90)	1				1
	1 <sup>1</sup> /2 – Class 600	4.44 (112.78)	11.00 (279.40)	18.10 (459.74)	9.00 (228.60)		
	DN 40/PN 16	3.09 (78.49)	11.00 (279.40)	16.10 (459.74)	9.00 (228.00)	6.86 (174.24)	3.50 (88.90)
1	DN 40/PN 40	3.21 (81.54)	_				3.50 (88.90)
	DN 40/ PN 100	3.88 (98.55)	1				
	1 <sup>1</sup> /2 – Class 900	4.94 (125.48)	9.31 (236.47)				1
	1 <sup>1</sup> /2 – Class 1500	4.94 (125.48)	9.31 (230.47)	N/A	N/A	N/A	
	1 <sup>1</sup> /2 – Class 2500	6.76 (171.70)	11.63 (295.40)				4.00 (101.60)
	2 – Class 150	4.13 (104.90)				6.80 (172.72)	
	2 – Class 300	4.38 (111.25)					
	2 – Class 600	4.75 (120.65)	12.00 (304.80)	19.10 (458.14)	9.00 (228.60)		
	DN 50/PN 16	3.40 (86.36)	12.00 (304.80)	13.10 (430.14)	3.00 (220.00)	7.05 (179.07)	5.00 (127.00)
2	DN 50/PN 40	3.52 (89.41)					
	DN 50/ PN 100	4.30 (109.22)					
	2 – Class 900	5.88 (149.35)	10.50 (266.70)	N/A	N/A	N/A	
	2 – Class 1500	3.88 (143.33)	10.30 (200.70)				
	3 – Class 2500	9.88 (250.95)	15.63 (397.00)				4.50 (114.30)
	3 – Class 150	4.63 (117.60)				7.55 (191.77)	
	3 – Class 300	5.00 (127.00)					
	3 – Class 600	5.38 (136.65)	13.50 (342.90)	20.60 (523.24)	9.00 (228.60)		4.00 (101.60)
3	DN 80/PN 16	3.85 (97.79)	13.30 (342.30)	20.00 (323.24)	9.00 (228.00)	7.93 (201.42)	4.00 (101.00)
	DN 80/PN 40	4.16 (105.66)					
	DN 80/ PN 100	4.95 (125.73)	1				
	4 – Class 900	8.19 (208.03)	13.06 (331.72)				
	4 – Class 1500	8.56 (217.42)	13.81 (350.77)	N/A	N/A	N/A	7.00 (177.80)
	4 – Class 2500	11.19 (284.23)	17.31 (439.67)				

Figure 22. Rosemount 3051CFA Flanged Flo-Tap Annubar Flow Meter<sup>(1)</sup>

Front view Side view Top view

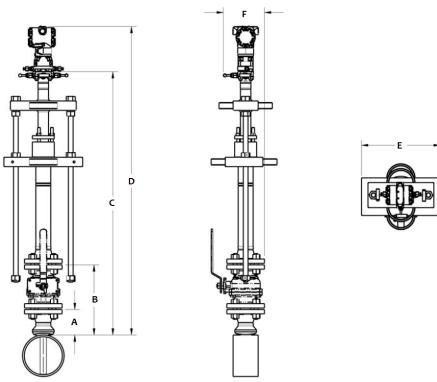

For A-F, see Table 82 on page 212.

<sup>1.</sup> The Rosemount Flanged Flo-Tap Annubar Flow Meter is available with both the manual and gear drive options.

Table 82. Rosemount 3051CFA Flanged Flo-Tap Annubar Flow Meter Dimensional Data<sup>(1)(2)</sup>


Sensor size	Flange size and rating	A ± 0.125 (3.2)	B ± 0.25 (6.4)	C <sup>I</sup> (Max) (gear drive)	C <sup>I</sup> (Max) (manual)	D (Max)	E (Max)	F (Max)
	1 <sup>1</sup> /2 – Class 150	3.88 (98.55)	10.50 (266.70)					6.30 (160.02)
	1 <sup>1</sup> /2 – 300	4.13 (104.90)	11.75 (298.45)					
1	1 <sup>1</sup> /2 – 600	4.44 (112.78)	14.06 (357.12)	N/A	17 77 (451 36)		10 50 (256 70)	
1	DN 40/PN 16 <sup>(3)</sup>	3.09 (78.49)		N/A	17.77 (451.36)		10.50 (266.70)	6.86 (174.24)
	DN 40/PN 40	3.21 (81.54)	(1)					
	DN 40/PN 100	3.88 (98.55)						
	2 – Class 150	4.13 (104.90)	11.25 (285.75)			C +7.10 (180.34)	12.56 (319.02)	6.80 (172.72)
	2 – Class 300	4.38 (111.25)	13.00 (330.20)		21 20 (520 40)			
2	2 – Class 600	4.75 (120.65)	16.38 (416.05)	24.44/620.70\				
2	DN50/PN16	3.40 (86.36)		24.44 (620.78)	21.20 (538.48)			7.05 (179.07)
	DN 50/PN 40	3.52 (89.41)	(1)					
	DN 50/PN 100	4.30 (109.22)						
	3 – Class 150	4.63 (117.60)	12.75 (323.85)					7.55 (191.77)
	3 – Class 300	5.00 (127.00)	16.25 (412.75)					
_	3 – Class 600	5.38 (136.65)	19.50 (495.30)	25 27 (550 00)	22.4.4(507.75)		4.43 (350.00)	
3	DN 80/PN 16	3.85 (97.79)		26.37 (669.80)	23.14 (587.76)		14.13 (358.90)	7.93 (201.42)
	DN 80/PN 40	4.16 (105.66)	(1)					
	DN 80/PN 100	4.95 (125.73)						

<sup>1.</sup> Inserted, C dimension = pipe I.D. + wall thickness +  $B + C^I$ 

<sup>2.</sup> Retracted, C dimension = 2 x (pipe I.D. + wall thickness + B) +  $C^1$ 

<sup>3.</sup> DIN valves are not offered.

Figure 23. Rosemount 3051CFA Threaded Flo-Tap Annubar Flow Meter<sup>(1)</sup>

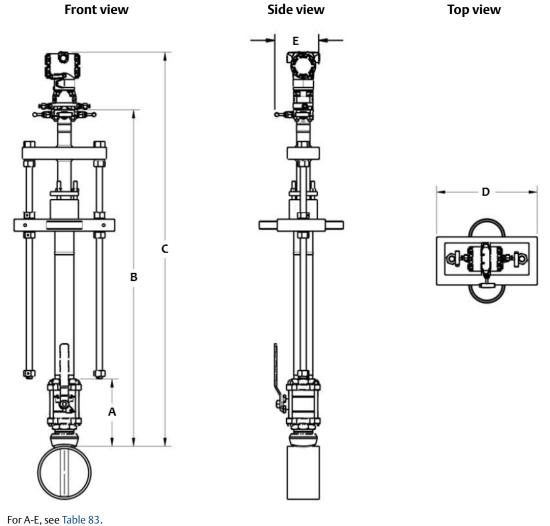

1. The Rosemount Threaded Flo-Tap Annubar Flow Meter is available with both the manual and gear drive options.

Table 83. Rosemount 3051CFA Threaded Flo-Tap Annubar Flow Meter Dimensional Data<sup>(1)(2)</sup>

Sensor size	A ± 0.50 (12.7)	B <sup>I</sup> (Max) (gear drive)	B <sup>I</sup> (Max) (manual)	C (Max)	D (Max)	E (Max)
1	7.51 (190.75)	N/A	16.96 (430.79)	B + 7.10	10.50 (266.70)	6 00 (152 40)
2	8.17 (207.52)	23.62 (599.95)	20.39 (517.91)	(180.34)	12.56 (319.02)	6.00 (152.40)
3(3)	N/A	N/A	N/A	N/A	N/A	N/A

- 1. Inserted, B dimension = pipe I.D. + wall thickness +  $A + B^I$
- 2. Retracted, B dimension = 2 x (pipe I.D. + wall thickness + A) +  $B^{I}$
- 3. Sensor size 3 is not available in a threaded flo-tap.

Figure 24. Rosemount 3051CFC Compact Flow Meter
Side view Front view Top view

1.125 (28.58)


Table 84. Rosemount 3051CFC Compact Dimensional Data

Primary element type	А	В	Transmitter height	С	D
Α	5.62 (142.75)	Transmitter height + A	7.38 (187.45)	7.80 (198.12) - closed	6.00 (152.40) - closed
P and C	3.02 (142.73)	Hallstillter height   A	6.55 (166.37)	8.25 (209.55) - open	6.25 (158.75) - open

Dimensions are in inches (millimeters).

For A-D, see Table 84.

Figure 25. Rosemount 3051CFP Integral Orifice Flow Meter

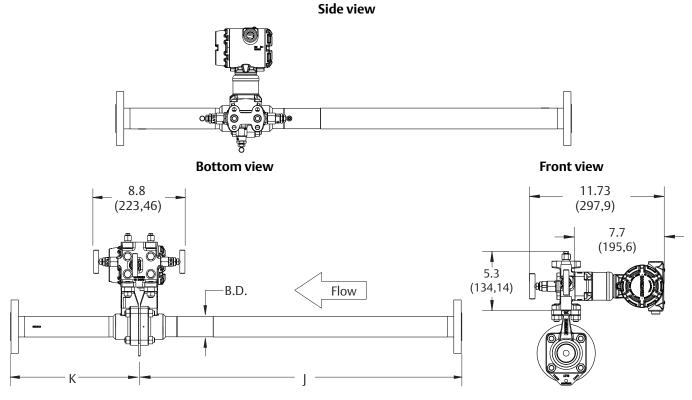

Dimensions are in inches (millimeters).


Table 85. Rosemount 3051CFP Integral Orifice Dimensional Data

Dimension	Line size					
Dilliension	¹/2-in. (15 mm)	1-in. (25 mm)	11/2-in. (40 mm)			
J (Beveled/threaded pipe ends)	12.54 (318.52)	20.24 (514.10)	28.44 (722.38)			
J (RF slip-on, RTJ slip-on, RF-DIN slip on)	12.62 (320.55)	20.32 (516.13)	28.52 (724.41)			
J (RF Class 150, weld neck)	14.37 (365.00)	22.37 (568.20)	30.82 (782.83)			
J (RF Class 300, weld neck)	14.56 (369.82)	22.63 (574.80)	31.06 (788.92)			
J (RF Class 600, weld neck)	14.81 (376.17)	22.88 (581.15)	31.38 (797.05)			
K (Beveled/threaded pipe ends)	5.74 (145.80)	8.75 (222.25)	11.91 (302.51)			
K (RF slip-on, RTJ slip-on, RF-DIN slip on) <sup>(1)</sup>	5.82 (147.83)	8.83 (224.28)	11.99 (304.55)			
K (RF Class 150, weld neck)	7.57 (192.28)	10.88 (276.35)	14.29 (362.97)			
K (RF Class 300, weld neck)	7.76 (197.10)	11.14 (282.96)	14.53 (369.06)			
K (RF Class 600, weld neck)	8.01 (203.45)	11.39 (289.31)	14.85 (377.19)			
B.D.	0.66 (16.76)	1.10 (27.94)	1.57 (39.88)			
J (RF and RTJ Class 900, weld neck)	15.13 (384.30)	23.32 (592.33)	31.88 (809.75)			
K (RF and RTJ Class 900, weld neck)	8.33 (211.58)	11.83 (300.48)	15.35 (389.89)			

<sup>1.</sup> Downstream length shown here includes plate thickness of 0.16-in. (4.06 mm).

## **Rosemount 2051CF Flow Meter series**

Figure 26. Rosemount 2051CFA Pak-Lok Annubar Flow Meter (1)

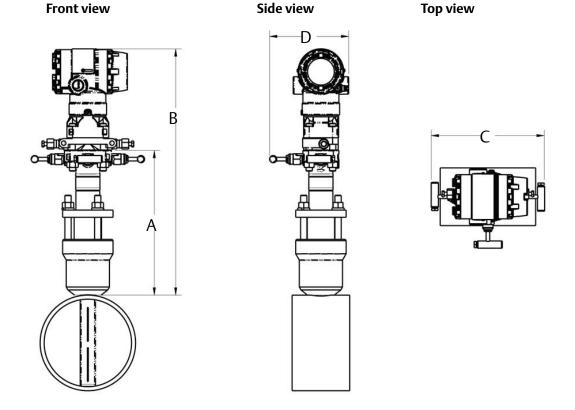

For A-D, Table 86.

Table 86. Rosemount 2051CFA Pak-Lok Annubar Direct Mount, 3-Valve Manifold Dimensional Data

Sensor size	A (Max)	B (Max)	C (Max)	D (Max)
1	8.50 (215.90)	14.55 (369.57)		
2	11.00 (279.40)	16.30 (414.02)	9.00 (228.60)	6.00 (152.40)
3	12.00 (304.80)	19.05 (483.87)		

<sup>1.</sup> The Rosemount Annubar Pak-Lok model is equivalent to Class 600 ANSI (1440 psig at 100 °F [99 bar at 38 °C]).

Figure 27. Rosemount 2051CFA Flanged with Opposite Side Support Annubar Flow Meter Front view Side view Top view

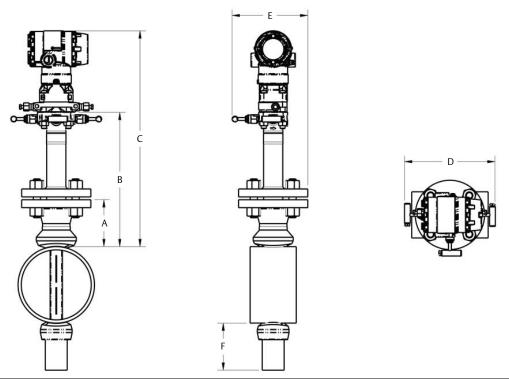


Table 87. Rosemount 2051CFA Flanged Annubar Direct Mount, 3-Valve Manifold Dimensional Data


Sensor size	Flange size and rating	A ± 0.125 (3.2)	B ± 0.25 (6.4)	C ± 0.25 (6.4)	D (Max)	E (Max)	F (Max)
	1 <sup>1</sup> /2 – Class 150	3.88 (98.55)				6.30 (160.02)	
	1 <sup>1</sup> /2 – Class 300	4.13 (104.90)				6.86 (174.24)	
	1 <sup>1</sup> /2 – Class 600	4.44 (112.78)	11.00 (279.40)	18.03 (457.96)	9.00 (228.60)	0.80 (174.24)	
	DN 40/PN 16	3.09 (78.49)	11.00 (279.40)	18.03 (437.90)	9.00 (228.00)	6.30 (160.02)	3.50 (88.90)
1	DN 40/PN 40	3.21 (81.54)				6.86 (174.24)	3.50 (88.50)
	DN 40/ PN 100	3.88 (98.55)				0.80 (174.24)	
	1 <sup>1</sup> /2 – Class 900	4.94 (125.48)	9.31 (236.47)				
	1 <sup>1</sup> /2 – Class 1500	4.94 (123.46)	9.51 (230.47)	N/A	N/A	N/A	1
	1 <sup>1</sup> /2 – Class 2500	6.76 (171.70)	11.63 (295.40)	-			4.00 (101.60)
	2 – Class 150	4.13 (104.90)				6.30 (160.02)	
	2 – Class 300	4.38 (111.25)	12.00 (304.80) 19.03 (483.36) 9.00 (228.60)			6.86 (174.24)	
	2 – Class 600	4.75 (120.65)		10.02 (492.26)	0.00 (228 60)		
	DN 50/PN 16	3.40 (86.36)		6.30 (160.02)	5.00 (127.00)		
2	DN 50/PN 40	3.52 (89.41)				6.86 (174.24)	5.00 (127.00)
	DN 50/ PN 100	4.30 (109.22)				0.80 (174.24)	
	2 – Class 900	5.88 (149.35)	10.50 (266.70)				
	2 – Class 1500	3.88 (143.33)	10.30 (200.70)	N/A	N/A	N/A	
	3 – Class 2500	9.88 (250.95)	15.63 (397.00)	-			4.50 (114.30)
	3 – Class 150	4.63 (117.60)				6.30 (160.02)	
	3 – Class 300	5.00 (127.00)				6.86 (174.24)	
3	3 – Class 600	5.38 (136.65)	13.50 (342.90)	20.53 (521.46)	9.00 (228.60)	0.86 (1/4.24)	4.00 (101.60)
	DN 80/PN 16	3.85 (97.79)				6.30 (160.02)	
	DN 80/PN 40	4.16 (105.66)				6.86 (174.24)	

Table 87. Rosemount 2051CFA Flanged Annubar Direct Mount, 3-Valve Manifold Dimensional Data

Sensor size	Flange size and rating	A ± 0.125 (3.2)	B ± 0.25 (6.4)	C ± 0.25 (6.4)	D (Max)	E (Max)	F (Max)
	DN 80/PN 100	4.95 (125.73)	13.50 (342.90)	20.53 (521.46)	9.00 (228.60)	6.86 (174.24)	4.00 (101.60)
2	4 - Class 900	8.19 (208.03)	13.06 (331.72)		/A N/A	N/A	7.00 (177.80)
3	4 – Class 1500	8.56 (217.42)	13.81 (350.77)	N/A			
	4 – Class 2500	11.19 (284.23)	17.31 (439.67)	]			

Dimensions are in inches (millimeters).

Figure 28. Rosemount 2051CFC Compact Flow Meter

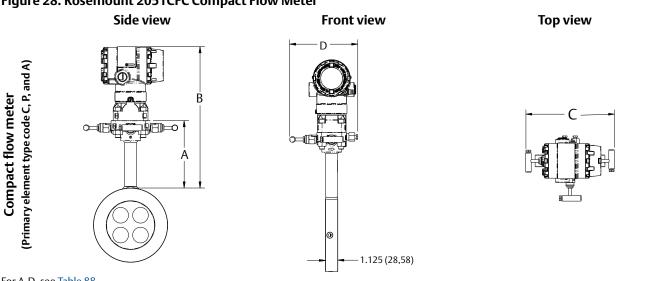


For A-D, see Table 88.

Table 88. Rosemount 2051CFC Compact Dimensional Data<sup>(1)</sup>

Primary element type	А	В	Transmitter height	С	D
А	5.62 (142.75)	Transmitter height + A	7.03 (178.56)	7.75 (196.85) - closed	6.00 (152.40) - closed
P and C	3.02 (142.73)	Transmitter neight + A	6.20 (157.48)	8.25 (209.55) - open	6.25 (158.75) - open

Measurement in inches (millimeters).

Figure 29. Rosemount 2051CFP Integral Orifice Flow Meter

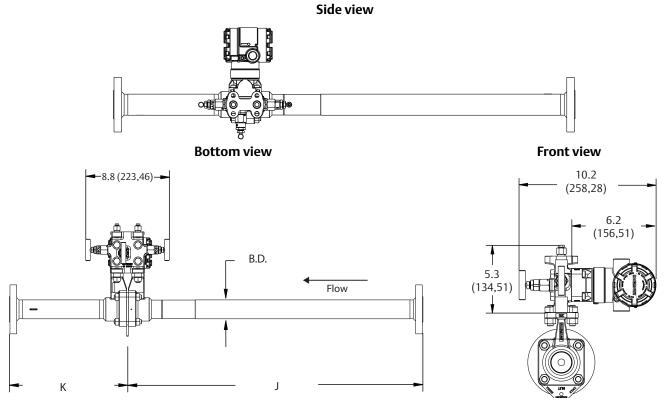

Dimensions are in inches (millimeters).


Table 89. Rosemount 2051CFP Integral Orifice Dimensional Data

Dimension	Line size				
Differsion	¹/2-in. (15 mm)	1-in. (25 mm)	11/2-in. (40 mm)		
J (beveled/threaded pipe ends)	12.54 (318.52)	20.24 (514.10)	28.44 (722.38)		
J (RF slip-on, RTJ slip-on, RF-DIN slip on)	12.62 (320.55)	20.32 (516.13)	28.52 (724.41)		
J (RF Class 150, weld neck)	14.37 (365.00)	22.37 (568.20)	30.82 (782.83)		
J (RF Class 300, weld neck)	14.56 (369.82)	22.63 (574.80)	31.06 (788.92)		
J (RF Class 600, weld neck)	14.81 (376.17)	22.88 (581.15)	31.38 (797.05)		
K (beveled/threaded pipe ends)	5.74 (145.80)	8.75 (222.25)	11.91 (302.51)		
K (RF slip-on, RTJ slip-on, RF-DIN slip on) <sup>(1)</sup>	5.82 (147.83)	8.83 (224.28)	11.99 (304.55)		
K (RF Class 150, weld neck)	7.57 (192.28)	10.88 (276.35)	14.29 (362.97)		
K (RF Class 300, weld neck)	7.76 (197.10)	11.14 (282.96)	14.53 (369.06)		
K (RF Class 600, weld neck)	8.01 (203.45)	11.39 (289.31)	14.85 (377.19)		
B.D.	0.66 (16.76)	1.10 (27.94)	1.57 (39.88)		
J (RF and RTJ 900, weld neck)	15.13 (384.30)	23.32 (592.33)	31.88 (809.75)		
K (RF and RTJ 900, weld neck)	8.33 (211.58)	11.83 (300.48)	15.35 (389.89)		

<sup>1.</sup> Downstream length shown here includes plate thickness of 0.162-in. (4.11 mm).

# **Rosemount 485 Annubar Primary Element**

Figure 30. Rosemount 485 Pak-Lok Annubar Primary<sup>(1)</sup>

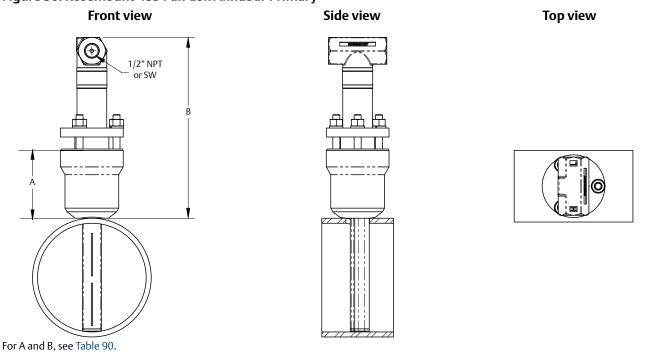

<sup>.</sup> The Rosemount Annubar Pak-Lok model is equivalent to ANSI Class 600 (1440 psig at  $100 \, ^{\circ}F$  [99 bar at  $38 \, ^{\circ}C$ ]).

Table 90. Rosemount 485 Pak-Lok Annubar Primary Dimensional Data

Sensor size	A (Max)	B (Max)
1	2.89 (73.41)	8.50 (215.90)
2	3.92 (99.57)	11.00 (279.40)
3	3.96 (100.58)	12.00 (304.80)

1. The Rosemount Annubar Threaded model is available up to ANSI Class 600 (1440 psig at 100 °F [99 bar at 38 °C]).


Table 91. Rosemount 485 Threaded Annubar Primary Dimensional Data

Sensor size	A (Max)	B (Max)
1	2.89 (73.41)	8.50 (215.90)
2	3.92 (99.57)	11.00 (279.40)

Dimensions are in inches (millimeters).

For A and B, see Table 91.

Figure 32. Rosemount 485 Flange-Lok Annubar Primary (1)

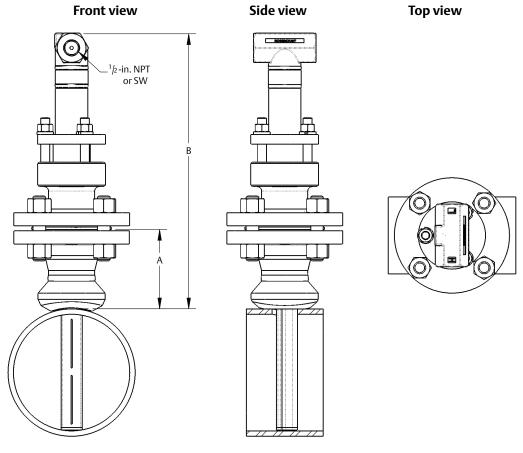

For A and B, see Table 92.

1. The Rosemount Annubar Flange-Lok model can be direct mounted up to ANSI Class 600 (1440 psig at 100 °F [99 bar at 38 °C]).

Table 92. Rosemount 485 Flange-Lok Annubar Primary Dimensional Data

Sensor size	Flange size and rating	A ± 0.125 (3.2)	B ± 0.25 (6.4)
	11/2 - Class 150	3.88 (98.55)	
	11/2 - Class 300	4.13 (104.90)	
1	11/2 - Class 600	4.44 (112.78)	12.25 (311.15)
1	DN 40/PN 16	3.09 (78.49)	12.23 (311.13)
	DN 40/PN 40	3.21 (81.54)	
	DN 40/PN 100	3.88 (98.55)	
	2 – Class 150	4.13 (104.90)	
	2 – Class 300	4.38 (111.25)	
2	2 – Class 600	4.75 (120.65)	14.25 (361.95)
2	DN 50/PN 16	3.40 (86.36)	14.23 (301.93)
	DN 50/PN 40	3.52 (89.41)	
	DN 50/PN 100	4.30 (109.22)	
3	3 – Class 150	4.63 (117.60)	
	3 – Class 300	5.00 (127.00)	17.50 (444.50)
	3 – Class 600	5.38 (136.65)	

Table 92. Rosemount 485 Flange-Lok Annubar Primary Dimensional Data

Sensor size	Flange size and rating	A ± 0.125 (3.2)	B ± 0.25 (6.4)
	DN 80/PN 16	3.85 (97.79)	
3	DN 80/PN 40	4.16 (105.66)	17.50 (444.50)
	DN 80/PN 100	4.95 (125.73)	

Figure 33. Rosemount 485 Flanged Annubar Primary

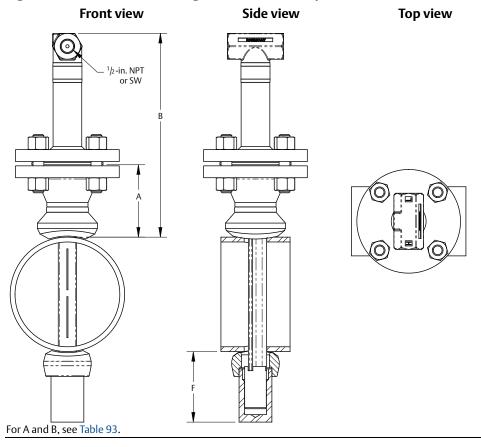


Table 93. Rosemount 485 Flanged Annubar Primary Dimensional Data

Sensor size	Flange size and rating	A ± 0.125 (3.2)	B ± 0.25 (6.4)	F (Max)
	11/2 – Class 150	3.88 (98.55)		
	11/2 - Class 300	4.13 (104.90)	11.00 (279.40)	
	11/2 - Class 600	4.44 (112.78)		
	DN 40/PN 16	3.09 (78.49)	11.00 (279.40)	3.50 (88.90)
1	DN 40/PN 40	3.21 (81.54)		3.30 (88.90)
	DN 40/PN 100	3.88 (98.55)		
	11/2 - Class 900	4.94 (125.48)	9.31 (236.47)	
	11/2 - Class 1500	4.94 (123.46)	9.51 (230.47)	
	11/2 - Class 2500	6.76 (171.70)	11.63 (295.40)	4.00 (101.60)
	2 – Class 150	4.13 (104.90)		
2	2 – Class 300	4.38 (111.25)	12.00 (304.80)	5.00 (127.00)
	2 – Class 600	4.75 (120.65)		

Table 93. Rosemount 485 Flanged Annubar Primary Dimensional Data

Sensor size	Flange size and rating	A ± 0.125 (3.2)	B ± 0.25 (6.4)	F (Max)
	DN 50/PN 16	3.40 (86.36)		
	DN 50/PN 40	3.52 (89.41)	12.00 (304.80)	
2	DN 50/PN 100	4.30 (109.22)		5.00 (127.00)
2	2 – Class 900	5.88 (149.35)	10.50 (266.70)	
	2 – Class 1500	5.00 (145.55)	10.30 (200.70)	
	3 – Class 2500	9.88 (250.95)	15.63 (397.00)	4.50 (114.30)
	3 – Class 150	4.63 (117.60)		4.00 (101.60)
	3 – Class 300	5.00 (127.00)		
	3 – Class 600	5.38 (136.65)	13.50 (342.90)	
2	DN 80/PN 16	3.85 (97.79)	13.30 (342.30)	
3	DN 80/PN 40	4.16 (105.66)		
	DN 80/PN 100	4.95 (125.73)		
	4 – Class 900	8.19 (208.03)	13.06 (331.72)	
	4 – Class 1500	8.56 (217.42)	13.81 (350.77)	7.00 (177.80)
	4 – Class 2500	11.19 (284.23)	17.31 (439.67)	

Figure 34. Rosemount 485 Flanged Flo-Tap Annubar Primary Front view Side view Top view <sup>1</sup>/<sub>2</sub>-in. NPT or SW Top view Side view Front view <sup>1</sup>/<sub>2</sub>-in. NPT or SW

For A-D, see Table 94 on page 226.

Table 94. Rosemount 485 Flanged Flo-Tap Annubar Primary Dimensional Data

Sensor size	Flange size and rating	A ± 0.125 (3.2)	B ± 0.25 (6.4)	C <sup>I</sup> (Max) (gear drive)	C <sup>I</sup> (Max) (manual)	D (Max)
	11/2 - Class 150	3.88 (98.55)	10.50 (266.70)			
	11/2 - Class 300	4.13 (104.90)	11.75 (298.45)			
1	11/2 - Class 600	4.44 (112.78)	14.06 (357.12)	NI/A	17 77 (451 26)	10 50 (200 70)
l	DN 40/PN 16	3.09 (78.49)		N/A	17.77 (451.36)	10.50 (266.70)
	DN 40/PN 40	3.21 (81.54)	(1)			
	DN 40/PN 100	3.88 (98.55)				
	2 – Class 150	4.13 (104.90)	11.25 (285.75)			
	2 – Class 300	4.38 (111.25)	13.00 (330.20)		21.20 (538.48)	12.56 (319.02)
2	2 – Class 600	4.75 (120.65)	16.38 (416.05)	24.44/620.70		
2	DN 50/PN 16	3.40 (86.36)		24.44 (620.78)		
	DN 50/PN 40	3.52 (89.41)	(1)			
	DN 50/PN 100	4.30 (109.22)				
	3 – Class 150	4.63 (117.60)	12.75 (323.85)			
	3 – Class 300	5.00 (127.00)	16.25 (412.75)			
2	3 – Class 600	5.38 (136.65)	19.50 (495.30)	26.27/660.00	22.14/507.76	1412/250.00\
3	DN 80/PN 16	3.85 (97.79)		26.37 (669.80)	23.14 (587.76)	14.13 (358.90)
	DN 80/PN 40	4.16 (105.66)	(1)			
	DN 80/PN 100	4.95 (125.70)				

Use the appropriate formula to determine C value: Inserted formula: Pipe I.D. + wall thickness + value B +  $C^1$  (use the manual drive or gear drive values for  $C^1$ ) Retracted formula: [2 x (pipe I.D. + wall thickness + value B)] +  $C^1$  (use the manual drive or gear drive values for  $C^1$ )

DIN valves are not offered.

Figure 35. Rosemount 485 Threaded Flo-Tap Annubar Primary - Gear Drive and Manual

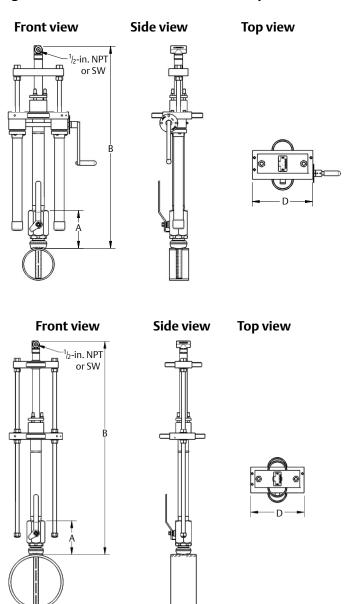


Table 95. Rosemount 485 Threaded Flo-Tap Annubar Primary Dimensional Data<sup>(1)(2)</sup>


Sensor size	A ± 0.50 (12.7)	B <sup>I</sup> (Max) (gear drive)	B <sup>I</sup> (Max) (manual)	D (Max)
1	7.51 (190.75)	N/A	16.96 (430.78)	10.50 (266.70)
2	8.17 (207.52)	23.62 (599.95)	20.39 (517.91)	12.56 (319.02)
3(3)	N/A			


- 1. Inserted, B dimension = pipe I.D. + wall thickness +  $A + B^{I}$
- 2. Retracted, B dimension = 2 x (pipe I.D. + wall thickness + A) +  $B^{I}$
- 3. Sensor size 3 is not available in a threaded flo-tap.

For A, B, and D, see Table 94.

# **Rosemount 585 Annubar Primary Element**

Figure 36. Rosemount 585 Flanged with Opposite Side Support Annubar Primary
Front view Side view

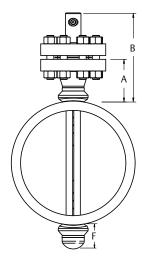

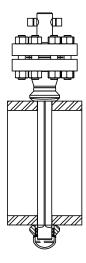

For A, B, and F, see Table 96.

### Note

Dimensions are shown with a remote-mount connection. Using direct-mount will add 0.15-in. for sensor size 11 and 22 or 3.15-in. for sensor size 44 to dimension B.

Table 96. Rosemount 585 Flanged with Opposite Side Support Annubar Dimensional Data

Sensor size	Flange size and rating	A ± 0.125 (3.2)	B ± 0.25 (6.4)	F (Max)	
	11/2-in. – Class 150	3.88 (98.55)	9.70 (246.38)		
	1 <sup>1</sup> / <sub>2</sub> -in. – Class 300	4.13 (104.90)	10.07 (255.78)		
	11/2-in. – Class 600	4.44 (112.78)	10.70 (271.78)	3.10 (78.74)	
	DIN 40/PN16	3.21 (81.5)	9.05 (229.87)	3.10 (78.74)	
11	DIN 40/PN 40	3.21 (81.3)	9.03 (229.67)		
	DIN 40/PN 100	3.88 (98.55)	10.03 (254.76)		
	11/2-in. – Class 900	4.94 (125.48)	11.57 (293.88)	3.60 (91.44)	
	1 <sup>1</sup> / <sub>2</sub> -in. – Class 1500	4.94 (123.46)	11.57 (293.66)		
	11/2-in. – Class 2500	6.75 (171.45)	13.88 (352.55)		
	2-in. – Class 150	4.13 (104.90)	10.01 (254.25)		
	2-in. – Class 300	4.38 (111.25)	10.38 (263.65)		
	2-in. – Class 600	4.75 (120.65)	11.13 (282.70)		
	DIN 50/PN 16	3.40 (86.36)	9.24 (234.70)		
22	DIN 50/PN 40	3.52 (89.41)	9.44 (239.78)	4.50 (114.30)	
	DIN 50/PN 100	4.30 (109.22)	10.53 (267.46)		
	2-in. – Class 900	5.88 (149.35)	12.76 (324.10)		
	2-in. – Class 1500	3.00 (149.33)	12.70 (324.10)		
	3-in. – Class 2500	9.88 (250.95)	17.88 (454.15)		

Table 96. Rosemount 585 Flanged with Opposite Side Support Annubar Dimensional Data


Sensor size	Flange size and rating	A ± 0.125 (3.2)	B ± 0.25 (6.4)	F (Max)
	3-in. – Class 150	4.63 (117.60)	10.69 (271.53)	3.90 (99.06)
	3-in. – Class 300	5.00 (127.00)	11.26 (286.00)	3.90 (99.00)
	3-in. – Class 600	5.38 (136.65)	12.00 (304.80)	
	DIN 80/PN 16	3.85 (97.79)	9.77 (248.16)	3.90 (99.06)
44	DIN 80/PN 40	4.16 (105.66)	10.23 (259.84)	3.90 (99.00)
	DIN 80/PN 100	4.95 (125.73)	3) 11.34 (288.04)	
	4-in. – Class 900	8.19 (208.03)	15.32 (389.13)	
	4-in. – Class 1500	8.56 (217.42)	16.07 (408.18)	6.40 (162.56)
	4-in. – Class 2500	11.19 (284.23)	19.57 (497.08)	

Dimensions are in inches (millimeters).

Figure 37. Rosemount 585 Main Steam Annubar with Opposite Side Support Annubar Primary

Front view

Top view

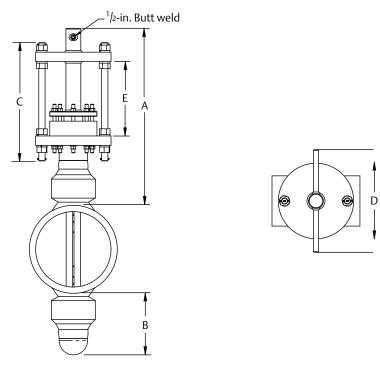

For A to E, see Table 97.

Table 97. Rosemount 585 Main Steam Annubar w/ Opposite Side Support Annubar Dimensional Data

Sensor size	A (Max)	В	С	D	E
44	29.67 (753.62)	10.00 (254.00)	19.00 (482.60)	16.33 (414.78)	11.00 (279.40)

Dimensions are in inches (millimeters).


## Note


Locking rods are always located 90° from the instrument connections. For horizontal installations, the instrument connections will be parallel to the pipe. For vertical installations, the instrument connections will be perpendicular to the pipe.

Figure 38. Rosemount 585 Flanged Flo-Tap Annubar Primary

# Front view

# Top view

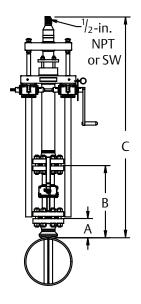

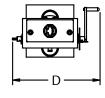

For A to D, see Table 98.

Table 98. Rosemount 585 Flanged Flo-Tap Annubar Primary Dimensional Data

Sensor size	Flange size and rating	A ± 0.125 (3.2)	B ± 0.25 (6.4)	C¹ (Max) (gear drive)	D (Max)
	3 – Class 150	4.63 (117.60)	12.75 (323.85)		
44	3 – Class 300	5.00 (127.00)	16.25 (412.75)	25.58 (649.73)	23.30 (591.82)
	3 – Class 600	5.38 (136.65)	19.50 (495.30)		


Use the appropriate formula to determine C value:

Inserted formula: pipe I.D. + wall thickness + value B +  $C^1$  (use the gear drive values for  $C^1$ )

Retracted formula:  $(2 \times [pipe I.D. + wall thickness + value B]) + C^1 (use the gear drive values for C^1)$ 

# **Rosemount 405 Compact Primary Element**

Figure 39. Rosemount 405 Compact Primary Element (Direct Mount)

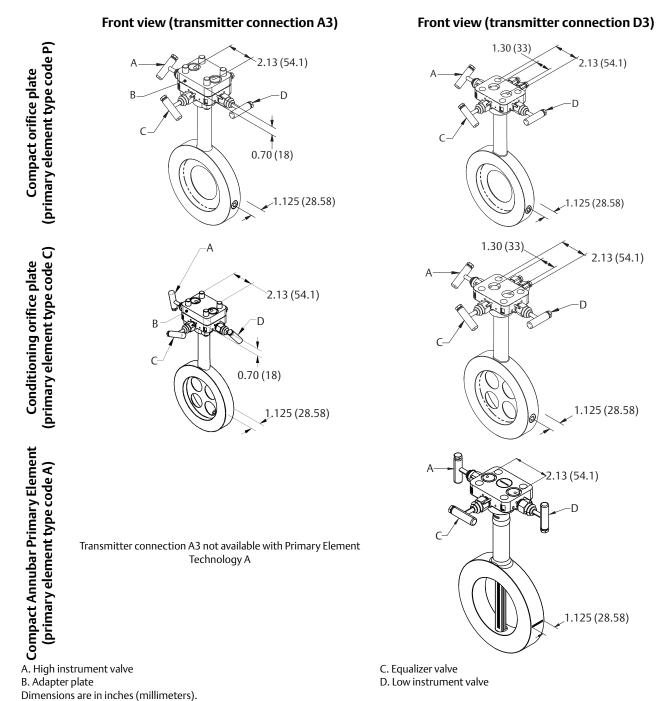

### Note

Transmitter connection code A3 is to be used with a traditional style transmitter. This is a SST adapter plate for allowing the direct mount of traditional style transmitters.

Figure 40. Rosemount 405 Compact Orifice Plate (Remote Mount Transmitter)

# Flange adapter (R3 with option E) Adapter plate (R3) 2.13 (54.1) $^{1}/_{2}$ -in. NPT $\frac{1}{4}$ -in. NPT (primary element type code P) Compact orifice plate 2.13 (54.1) 0.85 (21.6) 0.85 (21.6) .125 (28.58) 1.125 (28.58) 2.13 (54.1) $\frac{1}{2}$ -in. NPT $\frac{1}{4}$ -in. NPT (primary element type code C) Conditioning orifice plate 2.13 (54.1) 0.85 (21.6) 0.85 (21.6) 1.125 (28.58) 1.125 (28.58) 2.13 (54.1) **Rosemount Compact Annubar Primary Element** Transmitter connection R3 not available with Primary Element Technology A 0.85 (21.6) 1.125 (28.58) A. High instrument valve

Dimensions are in inches (millimeters).

C. Equalizer valve D. Low instrument valve

B. Adapter plate

# **Rosemount 1595 Orifice plate**

Figure 41. Rosemount 1595 Conditioning Orifice Plate (ANSI Flange, Paddle, Square Edged)

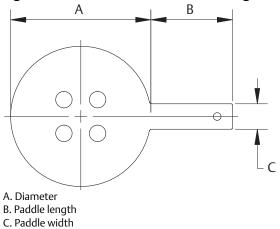


Table 99. Paddle Type Orifice Plate


1:		Diameter for paddle type					Paddle	Paddle
Line size	Class 150	Class 300	Class 600	Class 900	Class 1500	Class 2500	length	width
2 -in. (50 mm)	4.13 (104.78)	4.38 (111.13)	4.38 (111.13)	5.63 (142.88)	5.63 (142.88)	5.75 (146.05)		
3-in.(76 mm)	5.38 (136.53)	5.88 (149.23)	5.875 (149.23)	6.63 (168.28)	6.88 (174.63)	7.75 (196.85)	4.00	1.00
4-in.(100 mm)	6.88 (174.63)	7.13 (180.98)	7.63 (193.68)	8.13 (206.35)	8.25 (209.55)	9.25 (234.95)	(101.60)	(25.40)
6-in. (150 mm)	8.75 (222.25)	9.88 (250.83)	10.50 (266.70)	11.38 (288.93)	11.13 (282.58)	12.50 (317.50)		
8-in.(200 mm)	11.00 (279.40)	12.13 (307.98)	12.63 (320.68)	14.13 (358.78)	13.88 (352.43)	15.25 (387.35)		
10-in.(250 mm)	13.38 (339.73)	14.25 (361.95)	15.75 (400.05)	17.13 (434.98)	17.13 (434.98)	18.75 (476.25)		
12-in.(300 mm)	16.13 (409.58)	16.63 (422.26)	18.00 (457.20)	19.63 (498.48)	20.50 (520.70)	21.63 (549.28)		
14-in.(350 mm)	17.75 (450.85)	19.13 (485.78)	19.38 (492.13)				6.00	1.50
16-in (400 mm)	20.25 (514.35)	21.25 (539.75)	22.25 (565.15)				(152.40)	(38.10)
18-in.(450 mm)	21.50 (546.10)	23.38 (593.73)	24.00 (609.60)	N/A	N/A	N/A		
20-in.(500 mm)	23.75 (603.25)	25.63 (650.88)	26.75 (679.45)					
24-in.(600 mm)	28.13 (714.38)	30.38 (771.53)	31.00 (787.40)					

Dimensions in inches (millimeters).

# Note

Consult factory for availability of line sizes and flange ratings not shown in the above table.

Figure 42. Rosemount 1595U Orifice Universal Type (Universal, Square Edged)

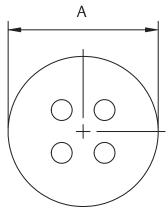

A. Diameter


Table 100. A.P.I Ring Numbers and Rating

Line size	Diameter for universal type	A.P.I ring number	Rating (lb)
		R-23	300-600
2-in. (50 mm)	2.44-in. (61.98 mm)	R-24	900–1500
		R-26	2500
		R-31	300–600 and 900
3-in. (76 mm)	3.44-in. (87.38 mm)	R-32	2500
		R-35	1500
		R-37	300-600 and 900
4-in. (100 mm)	4.41-in. (112.01 mm)	R-38	2500
		R-39	1500
		R-45	300-600 and 900
6-in. (150 mm)	mm) 6.44-in. (163.58 mm) R-46		2500
		R-47	1500
		R-49	300–600 and 900
8-in. (200 mm)	8.44-in. (214.38 mm)	R-50	2500
		R-51	1500
		R-53	300-600 and 900
10-in. (250 mm)	10.69-in. (271.53 mm)	R-54	2500
		R-55	1500
		R-57	300-600 and 900
12-in. (300 mm)	12.59-in. (319.79 mm)	R-58	2500
		R-59	1500

### Note

Refer to Table 99 on page 233 for line size and pressure rating availability.

Figure 43. Rosemount 1595 Conditioning Orifice Plate (DIN Flange, Paddle, Square Edged)

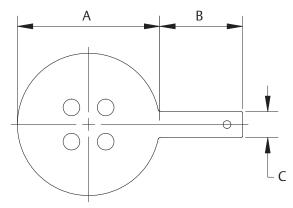

A. Diameter

B. Paddle length

C. Paddle width

Table 101. Rosemount 1595 Conditioning Orifice Plate

Line size	Diameter (max) – by flange rating					Paddle	Paddle	
Lille Size	PN 10	PN 16	PN 25	PN 40	PN 63/64	PN 100	length	width
2-in. (DN 50)	4.21 (106.93)	4.21 (106.93)	4.21 (106.93)	4.21 (106.93)	4.45 (113.03)	4.69 (119.13)		
3-in. (DN 80)	5.60 (142.24)	5.60 (142.24)	5.60 (142.24)	5.60 (142.24)	5.82 (147.83)	6.06 (153.92)	4.00	1.00
4-in. (DN 100)	6.38 (162.05)	6.38 (162.05)	6.61 (167.89)	6.61 (167.89)	6.85 (173.99)	7.09 (180.09)	(101.60)	(25.40)
6-in. (DN 150)	8.58 (217.93)	8.58 (217.93)	8.82 (224.03)	8.82 (224.03)	9.72 (246.89)	10.12 (257.05)		
8-in. (DN 200)	10.74 (272.80)	10.74 (272.80)	11.18 (283.97)	11.42 (290.07)	12.17 (309.12)	12.76 (324.10)	6.00	1.50
10-in. (DN 250)	12.91 (327.91)	12.95 (328.93)	13.39 (340.11)	13.86 (352.04)	14.33 (363.98)	15.39 (390.91)	6.00 (152.40)	1.50 (38.10)
12-in. (DN 300)	14.88 (377.95)	15.12 (384.05)	15.75 (400.05)	16.42 (417.07)	16.69 (423.93)	18.03 (457.96)	(132.10)	(30.10)

Dimensions in inches (millimeters).

# Note

Consult factory for availability of line sizes and flange ratings not shown in the above table.

Table 102. Available Beta Ratio ( $\beta$ )

The table below shows the available Beta Ratio ( $\beta$ ) for line size vs. pipe schedule.

Line size	Pipe schedule	Beta (β) available
	≤80	0.20, 0.40, 0.50, 0.60
2	160	0.20
	XXS	0.20
3	≤80	0.20, 0.40, 0.50, 0.65
3	160	0.20, 0.40, 0.50
	XXS	0.20
	≤80	0.20, 0.40, 0.50, 0.65
4	120	0.20, 0.40, 0.50
4	160	0.20, 0.40, 0.30
	XXS	0.20
	≤80	0.20, 0.40, 0.50, 0.65
6	120	0.20, 0.40, 0.50
Ü	160	0.20, 0.40
	XXS	0.20
8	≤80	0.20, 0.40, 0.50, 0.65
	100	0.20, 0.40, 0.30, 0.03
	120	0.20, 0.40, 0.50
	≤80	0.20, 0.40, 0.50, 0.65
	100	
14	120	0.20, 0.40, 0.50
	140	
	160	0.20, 0.40
	≤80	0.20, 0.40, 0.50, 0.65
	100	
16	120	0.20, 0.40, 0.50
	140	
	160	0.20, 0.40
	≤80	0.20, 0.40, 0.50, 0.65
	100	0.20, 0.40, 0.50, 0.65
18	120	
	140	0.20, 0.40, 0.50
	160	

Line size	Pipe schedule	Beta (β) available
	140	0.20, 0.40, 0.50
8	160	0.20, 0.40
	XXS	0.20, 0.40, 0.50
	≤80	0.20, 0.40, 0.50, 0.65
	100	0.20, 0.40, 0.30, 0.03
10	120	0.20, 0.40, 0.50
10	140	0.20, 0.40, 0.50
	160	0.20, 0.40
	XXS	0.20, 0.40, 0.50
	≤80	0.20, 0.40, 0.50, 0.65
	100	
12	120	0.20, 0.40, 0.50
12	140	
	160	0.20, 0.40
	XXS	0.20, 0.40, 0.50
	≤80	0.20, 0.40, 0.50, 0.65
	100	0.20, 0.40, 0.30, 0.03
20	120	
	140	0.20, 0.40, 0.50
	160	
	≤80	0.20, 0.40, 0.50, 0.65
	100	0.20, 0.40
24	120	
	140	0.20, 0.40, 0.50
	160	

# **Rosemount 1195 Integral orifice plate**

Figure 44. Rosemount 1195 Integral Orifice Plate

# Top view Bottom view End view 1.10 (27.94) A. 1/2NPT B. B.D. C. Downstream D. Upstream D. Upstream

Dimensions are in inches (millimeters).

Table 103. Rosemount 1195 Integral Orifice Plate Dimensional Data

Dimension	Line size					
Difficusion	¹/2-in. (15 mm)	1-in. (25 mm)	11/2-in. (40 mm)			
D (beveled/threaded pipe ends)	12.54 (318.52)	20.24 (514.10)	28.44 (722.38)			
D (RF slip-on, RTJ slip-on, RF-DIN slip-on)	12.62 (320.55)	20.32 (516.13)	28.52 (724.41)			
D (RF Class 150, weld-neck)	14.37 (365.00)	22.37 (568.20)	30.82 (782.83)			
D (RF Class 300, weld-neck)	14.56 (369.8)	22.63 (574.80)	31.06 (788.92)			
D (RF Class 600, weld-neck)	14.81 (376.17)	22.88 (581.15)	31.38 (797.05)			
C (beveled/threaded pipe ends)	5.74 (145.80)	8.75 (222.25)	11.91 (302.51)			
C (RF slip-on, RTJ slip-on, RF-DIN slip-on) <sup>(1)</sup>	5.82 (147.83)	8.83 (224.28)	11.99 (304.55)			
C (RF Class 150, weld-neck)	7.57 (192.28)	10.88 (276.35)	14.29 (362.97)			
C (RF Class 300, weld-neck)	7.76 (197.10)	11.14 (282.96)	14.53 (369.06)			
C (RF Class 600, weld-neck)	8.01 (203.45)	11.39 (289.31)	14.85 (377.19)			
B.D. <sup>(2)</sup>	0.66 (16.76)	1.10 (27.94)	1.57 (39.88)			
D (RF and RTJ Class 900, weld neck)	15.13 (384.30)	23.32 (592.33)	31.88 (809.75)			
C (RF and RTJ Class 900, weld neck)	8.33 (211.58)	11.83 (300.48)	15.35 (389.89)			


<sup>1.</sup> Downstream length shown here includes plate thickness of 0.16-in. (4.06 mm).

<sup>2.</sup> B.D is diameter of the precision bored portion of the upstream and downstream piping.


# Figure 45. Enhanced Body Support Orifice plate

# 2.46 (62.4) Ø.47 (11,9) H 1.625 (41,28)


# Socket-weld or threaded body

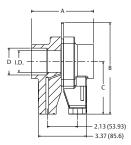


# Remote adapter

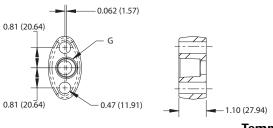


# NPT/beveled piping (prepared for welding)

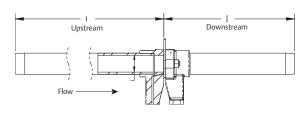

**Temperature sensor** 

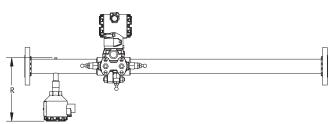

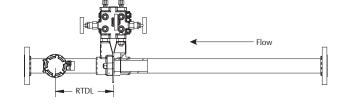

For A, B,C, D, E, F, H,I, J, R,RTDL, B.D., and I.D., see Table 104.

G. <sup>1</sup>/2-14 NPT

I. Upstream

J. Downstream

Dimensions are in inches (millimeters).

Table 104. Rosemount 1195 Integral Orifice - Enhanced Body Support Dimensional Data


Dimension	Line size				
Dimension	<sup>1</sup> /2-in. (12.70)	1-in. (25.40)	1 <sup>1</sup> /2-in. (38.10)		
A	3.40-in. (86.36)	3.80-in. (96.52)	4.5-in. (114.30)		
В	5.13-in. (130.20)	5.51-in. (129.79)	6.36-in. (161.54)		
С	3.00-in. (76.20)	3.30-in. (83.82)	3.70-in. (93.98)		
D <sup>(1)</sup>	0.81-in. (20.57)	1.28-in. (32.51)	1.87-in. (47.50)		
E	2.80-in. (71.12)	3.10-in. (78.74)	3.40-in. (86.36)		
F	2.60-in. (66.04)	3.00-in. (76.20)	3.50-in. (88.90)		
Н	3.50-in. (88.90)	3.80-in. (96.52)	4.40-in. (111.76)		
I	12.54-in. (318.52)	20.24-in. (514.10)	28.44-in. (722.38)		
J	5.74-in. (145.80)	8.75-in. (222.25)	11.91-in. (302.51)		
R	7.4-in. (187.97)	7.80-in. (198.12)	8.40-in. (213.36)		
RTDL	3.11-in. (78.99)	5.25-in. (133.35)	7.50-in. (190.50)		
B.D. <sup>(2)</sup>	0.66-in. (16.76)	1.10-in. (27.94)	1.57-in. (39.88)		
I.D. (inside diameter)	0.622-in. (15.75)	1.05-in. (26.67)	1.50-in. (38.10)		

<sup>1.</sup> To improve pipe perpendicularity for gasket sealing, socket diameter "D" is smaller than standard pipe O.D. Pipe O.D. must be machined smaller than socket diameter "D" to ensure proper fit.

<sup>2.</sup> B.D is diameter of the precision bored portion of the upstream and downstream piping.

# **Rosemount 1495 Orifice Plate**

Figure 46. Rosemount1495PC and PG Paddle Type Orifice Plate (EN-1092-1, Paddle, Square Edged, Concentric)

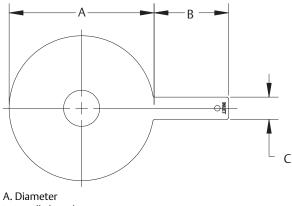

B, Handle length C. Handle width

Table 105. Rosemount 1495 Orifice Plate Dimensions (For EN-1092-1 Flanges)

DN		A				В	_	
DN	PN 10	PN 16	PN 25	PN 40	PN 63/64	PN 100	В	C
DN 50	4.21 (106.93)	4.21 (106.93)	4.21 (106.93)	4.21 (106.93)	4.45 (113.03)	4.69 (119.13)		
DN 65	5.00 (127.00)	5.00 (127.00)	5.00 (127.00)	5.00 (127.00)	5.43 (137.92)	5.67 (144.02)		
DN 80	5.60 (142.24)	5.60 (142.24)	5.60 (142.24)	5.60 (142.24)	5.82 (147.83)	6.06 (153.92)		
DN 100	6.38 (162.05)	6.38 (162.05)	6.61 (167.89)	6.61 (167.89)	6.85 (173.99)	7.09 (180.09)		
DN 125	7.56 (192.02)	7.56 (192.02)	7.64 (194.06)	7.64 (194.06)	8.27 (210.06)	8.54 (216.92)		6.30
DN 150	8.58 (217.93)	8.58 (217.93)	8.82 (224.03)	8.82 (224.03)	9.72 (246.89)	10.12 (257.05)		
DN 200	10.74 (272.80)	10.74 (272.80)	11.18 (283.97)	11.42 (290.07)	12.17 (309.12)	12.76 (324.10)	1.50	(160.02)
DN 250	12.91 (327.91)	12.95 (328.93)	13.39 (340.11)	13.86 (352.04)	14.33 (363.98)	15.39 (390.91)	(38.10)	
DN 300	14.88 (377.95)	15.11 (383.79)	15.75 (400.05)	16.42 (417.07)	16.69 (423.93)	18.03 (457.96)		
DN 350	17.24(437.90)	17.48 (443.99)	17.99 (456.95)	18.66 (473.96)	19.13 (485.90)	20.16 (512.06)		
DN 400	19.25 (488.95)	19.49 (495.05)	20.24 (514.10)	21.49 (545.85)	21.38 (543.05)	22.52 (572.01)		
DN 450	21.22 (538.99)	21.85 (554.99)	22.24 (564.90)	22.48 (570.99)	N/A	N/A		
DN 500	23.39(594.11)	24.29 (616.97)	24.57 (624.08)	24.72 (627.89)	25.87 (657.10)	27.72 (704.09)		8.00
DN 600	27.36 (694.94)	28.90 (734.06)	28.78 (731.01)	29.41 (747.01)	30.08 (764.03)	32.01 (813.05)	1	(203.20)


Measurement is in inches (millimeters).

Table 106. Rosemount 1495 Orifice Plate Dimensions (For ASME B16.36 Flanges)

Line			,	4			В	_
size	Class 150	Class 300	Class 600	Class 900	Class 1500	Class 2500	_ D	
2-in.	4.13 (104.78)	4.38 (111.13)	4.38 (111.13)	5.63 (142.88)	5.63 (142.88)	5.75 (146.05)		
2 <sup>1</sup> /2-in.	4.88 (123.82)	5.13 (130.18)	5.13 (130.18)	6.50 (165.10)	6.50 (165.10)	6.63 (168.28)	]	
3-in.	5.38 (136.53)	5.88 (149.23)	5.88 (149.23)	6.63 (168.28)	6.88 (174.63)	7.75 (196.85)	4.00(101.60)	1.00(25.40)
4-in.	6.88 (174.63)	7.13 (180.98)	7.63 (193.68)	8.13 (206.38)	8.25 (209.55)	9.25 (234.95)	]	
6-in.	8.75 (222.25)	9.88 (250.83)	10.50 (266.70)	11.38 (288.93)	11.13 (282.58)	12.50 (317.50)	1	
8-in.	11.00 (279.40)	12.13 (307.98)	12.63 (320.68)	14.13 (358.78)	13.88 (352.43)	15.25 (387.35)	6.00(127.00)	
10-in.	13.38 (339.73)	14.25 (361.95)	15.75 (400.05)	17.13 (434.98)	17.13 (434.98)	18.75 (476.25)		
12-in.	16.13 (409.58)	16.63 (422.26)	18.00 (457.20)	19.63 (498.48)	20.50 (520.70)	21.63 (549.28)	1	
14-in.	17.75 (450.85)	19.13 (485.78)	19.38 (339.73)	20.50 (520.70)	22.75 (577.85)		1	1 50/30 10\
16-in.	20.25 (514.35)	21.25 (539.75)	22.25 (565.15)	22.63 (574.68)	25.25 (641.35)		6.00(152.40)	1.50(38.10)
18-in.	21.50 (546.10)	23.38 (593.73)	24.00 (609.60)	25.00 (635.00)	27.63 (701.68)	N/A		
20-in.	23.75 (603.25)	25.63 (650.88)	26.75 (679.45)	27.38 (695.33)	29.63 (752.48)	<u></u>		
24-in.	28.13 (714.38)	30.38 (771.53)	31.00 (787.40)	32.88 (835.03)	35.50 (901.70)			

Measurement is in inches (millimeters).

Figure 47. Rosemount 1495UC Universal Type Orifice Plate (Square Edged, Concentric)

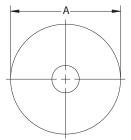

A. Diameter

Table 107. Rosemount 1495UC Orifice Place Dimensions


Line size	Diameter for universal type
2-in.	2.44 (61.90)
2¹/2-in.	2.81 (71.42)
3-in.	3.44 (87.30)
4-in.	4.41 (111.91)
6-in.	6.44 (163.58)
8-in.	8.44 (214.38)
10-in.	10.69 (271.45)
12-in.	12.59 (319.86)
14-in.	14.00 (355.60)
16-in.	16.00 (406.40)
18-in.	18.00 (457.20)
20-in.	20.00 (508.00)
24-in.	24.00 (609.60)

Measurement is in inches (millimeters).


# **Rosemount 1496 Orifice Flange Union**

Figure 48. Class 300 Raised Faced


# Weld neck

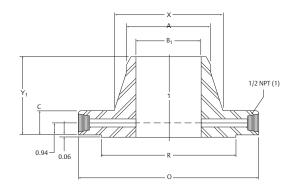

# Slip-on

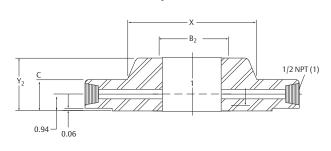

# Threaded

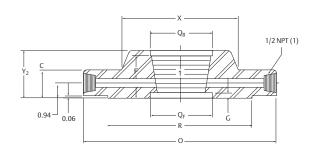

ASME B16.36-2006

Table 108. Class 300 Orifice Flanges, Welding Neck, Slip-On, and Threaded(1)(2)

Nominal	Outside diameter of	diameter of	Thickness of flange,	,		Diameter of	chamfer (W.N.)			Counter- bore depth (from face)		Bore	
pipe size	raised face R	flange ø	min. C	Slip-on and threaded Y <sub>2</sub>	Weld neck Y <sub>1</sub>	hub X	chamfer (W.N.) A	Back Q <sub>B</sub>	Face Q <sub>F</sub>	F	G	Slip-On B <sub>2</sub>	Weld neck B <sub>1</sub>
1	2.00	4.88		1.88	3.25	2.12	1.32	1.41	1.30	1.44	0.75	1.36	
1 <sup>1</sup> /2	2.88	6.12		1.94	3.38	2.75	1.90	1.99	1.89	1.47	0.72	1.95	
2	3.62	6.50	1.50		3.36	3.31	2.38	2.50	2.36	1.50	0.69	2.44	
2 <sup>1</sup> /2	4.12	7.50	1.50	2.00	3.50	3.94	2.88	3.00	2.84	1.75	0.56	2.94	
3	5.00	8.25		2.06	3.30	4.62	3.50	3.63	3.46	1.81	0.50	3.57	
4	6.19	10.00		2.12	3.62	5.75	4.50	4.63	4.45	1.88	0.56	4.57	
6	8.50	12.50	1.50	2.12	3.94	8.12	6.63	6.75	6.57	1.88	0.31	6.72	
8	10.62	15.00	1.62	2.44	4.38	10.25	8.63	8.75	8.55	2.19	0.44	8.72	(5)
10	12.75	17.50	1.88	2.62	4.62	1262	10.75					10.88	
12	15.00	20.50	2.00	2.88	5.12	14.75	12.75					12.88	
14	16.25	23.00	2.12	3.00	5.62	16.75	14.00					14.14	
16	18.50	25.50	2.25	3.25	5.75	19.00	16.00		(6	5)		16.16	
18	21.00	28.00	2.38	3.50	6.25	21.00	18.00					18.18	
20	23.00	30.50	2.50	3.75	6.38	23.12	20.00				20.20		
24	27.25	36.00	2.75	4.19	6.62	27.62	24.00					24.25	

Table 109. Class 300 Orifice Flanges, Welding Neck, Slip-On, and Threaded (Continued)


Nominal pipe	Diameter of pressure		Drilling	g template		Bolt length(3)(4)		
size <sup>(1)(2)</sup>	connection TT	Bolt circle	Number of holes	Diameter of holes	Diameter of bolts	Machine bolts	Stud bolts	
1		3.50	4	0.69	5/8	4.50	5.00	
1 <sup>1</sup> /2	1/4	4.50	4	0.81	3/4	4.75	5.25	
2	74	5.00		0.69	5/8	4.50	5.00	
2 <sup>1</sup> /2		5.88	8					
3	3/8	6.62	8	0.81	3/4	4.75	5.25	
4		7.88			-74	4.73	5.25	
6		10.62	12	0.88				
8		13.00	12	1.00	7/8	5.00	5.75	
10		15.25	16	1.12	1	5.75	6.50	
12	1/2	17.75	10	- 1.25	1 <sup>1</sup> /8	6.25	7.00	
14	1/2	20.25	20	1.23	178	6.50	7.25	
16		22.50	20			7.00	7.75	
18		24.75		1.38	1 <sup>1</sup> /4	7.25	8.00	
20		27.00	24			7.50	8.50	
24		32.00		1.62	1 <sup>1</sup> /2	8.25	9.50	

- 1. Weld neck flanges NPS 3 and smaller are identical to Class 600 flanges and may be so marked.
- 2. All other dimensions are in accordance with ASME B16.5.
- 3. Bolt lengths include allowance for orifice and gasket thickness of 0.25- in. for NPS 1–12 and 0.38-in. for NPS 14–24.
- $4. \hspace{1.5cm} \text{In conformance with ASME B16.5, stud bolt lengths do not include point heights.} \\$
- 5. Threaded flanges are furnished in NPS 1–8 only.
- 6. B.D. of weld neck flanges is to be specified by the purchaser.

Figure 49. Class 600, 900, 1500, and 2500

# Raised face


# Special one or two piece ring and orifice plate assembly

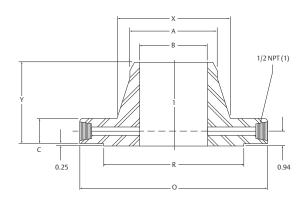



Ring type ring

Groove detail

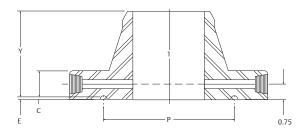

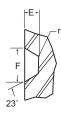


Table 110. Class 600 Orifice Flanges, Welding Neck<sup>(1)</sup> (2)

	Outside							Ring type	e joint				Hub
Nominal pipe size	diameter of raised face R		Thickness of flange, min. C	Length through hub Y	Height of raised face H	Groove number	Pitch diameter P	Groove depth E	Groove width F	Radius at bottom r <sub>max</sub>	Special oval ring height W	Diameter of hub X	diameter beginning of chamfer A
1	2.00	4.88		3.19		R16	2.000	0.250	0.344		1.00	2.12	1.32
1 <sup>1</sup> /2	2.88	6.12		3.32		R20	2.688	0.250	0.344		1.00	2.75	1.90
2	3.62	6.50	1.44	3.32	0.06	R23	3.250					3.31	2.38
2 <sup>1</sup> /2	4.12	7.50		3.44		R26	4.000					3.94	2.88
3	5.00	8.25		3.44		R31	4.875					4.62	3.50
4	6.19	10.75	1.50	4.00		R37	5.875		0.03		1.06	6.00	4.50
6	8.50	14.00	1.88	4.62		R45	8.312			1.00	8.75	6.63	
8	10.62	16.50	2.19	5.25		R49	10.625	0.312 0.469	0.469			10.75	8.63
10	12.75	20.00	2.50	6.00		R53	12.750					13.50	10.75
12	15.00	22.00	2.62	6.12	0.25	R57	15.000					15.75	12.75
14	16.25	23.75	2.75	6.50	0.25	R61	16.500				1.06	17.00	14.00
16	18.50	27.00	3.00	7.00		R65	18.500				1.19	19.50	16.00
18	21.00	29.25	3.25	7.25		R69	21.000				1.19	21.50	18.00
20	23.00	32.00	3.50	7.50		R73	23.000	0.375	0.531	0.06	1.25	24.00	20.00
24	27.25	37.00	4.00	8.00		R77	27.250	0.438	0.656	0.06	1.44	28.25	24.00

- 1. Weld neck flanges NPS 3 and smaller are identical to Class 300 flanges except for bolting and may be used for such service.
- 2. All other dimensions are in accordance with ASME B16.5.

Table 111. Class 600 Orifice Flanges, Welding Neck (Continued)

		Diameter		Drilling t	emplate			Length of stud bolts(3)(4)		
Nominal pipe size <sup>(1)(2)</sup>	Bore B	of pressure	D -     -   -   -	Number of	Diamete	r of holes	Diameter of bolts	DF.	DI.	
		connection TT	Bolt circle	holes	Raised face	Ring joint		RF	RJ	
1			3.50	4	0.69	0.75	<sup>5</sup> /8	5.00		
1 <sup>1</sup> /2		1/4	4.50	4	0.81	0.88	3/4	5.25	5.50	
2		1/4	5.00		0.69	0.75	<sup>5</sup> /8	5.00		
2 <sup>1</sup> /2			5.88		0.01	0.00	31.	5.25	F 75	
3		3/8	6.62	8	0.81	0.88	<sup>3</sup> /4	5.25	5.75	
4			8.50		1.00	1.00	7/8	6.00	6.50	
6			11.50		1.12	1.12	1	7.00	7.50	
8	(4)		13.75	12	1.25	1.25	1 <sup>1</sup> /8	7.75	8.25	
10			17.00	16	1.20	1.20	11/4	8.75	9.25	
12		1/2	19.25		1.38	1.38	1 <sup>1</sup> /4	9.00	9.50	
14		<sup>1</sup> /2	20.75	30	1.50	1.50	1 <sup>3</sup> /8	9.50	10.00	
16			23.75	20	1.62	1.62	1 <sup>1</sup> /2	10.25	10.75	
18			25.75	<b>─</b>	1.75	1.75	15/0	11.00	11.50	
20			28.50	34	1.75	1.75	1 <sup>5</sup> /8	11.75	12.50	
24			33.00	24	2.00	2.00	1 <sup>7</sup> /8	13.25	13.75	

<sup>1.</sup> Weld neck flanges NPS 3 and smaller are identical to Class 300 flanges except for bolting and may be used for such service.

Table 112. Class 900 Orifice Flanges, Welding Neck

	Outside	Outsido	Outside Thickness Length Ring type joint							Hub diameter								
Nominal pipe size	diameter of raised face R	diameter of flange ø	of flange, min. C	through hub Y	Groove number	Pitch diameter P	Groove depth E	Groove width F	Radius at bottom r <sub>max</sub>	Special oval ring height W	Diameter of hub X	beginning of chamfer A						
1																		
1 <sup>1</sup> /2				Fo	r nominal ni	pe size (NPS) 2 <sup>1</sup>	/2 and smal	llar usa Cla	scc 1500									
2				10	i nominai pi	pe 312e (141 3) 2	/ 2 4110 31114	iici, use Cia	133 1300.									
2 <sup>1</sup> /2																		
3	5.00	9.50	1.50	4.00	R31	4.875	0.312				5.00	3.50						
4	6.19	11.50	1.75	4.50	R37	5.875	0.312				6.25	4.50						
6	8.50	15.00	2.19	5.50	R45	8.312	0.312	0.469	0.03	1.06	9.25	6.63						
8	10.62	18.50	2.50	6.38	R49	10.625	0.312	0.403	0.03	1.00	11.75	8.63						
10	12.75	21.50	2.75	7.25	R53	12.750	0.312				14.50	10.75						
12	15.00	24.00	3.12	7.88	R57	15.000	0.312				16.50	12.75						
14	16.25	25.25	3.38	8.38	R62	16.500	0.438	0.656		1.31	17.75	14.00						
16	18.50	27.75	3.50	8.50	R66	18.500	0.438	0.06	0.06	0.06	0.06	0.06	38	38	38	1.44	20.00	16.00
18	21.00	31.00	4.00	9.00	R70	21.000	0.500						0.06	1.56	22.25	18.00		
20	23.00	33.75	4.25	9.75	R74	23.000	0.500	0.761		1.50	24.50	20.00						
24	27.25	41.00	5.50	11.50	R78	27.250	0.625	1.062	0.09	1.88	29.50	24.00						

<sup>2.</sup> All other dimensions are in accordance with ASME B16.5.

<sup>3.</sup> Bolt lengths for raised face flanges include allowance for orifice and gasket thickness of 0.25-in. for NPS 1–12 and 0.38-in. for NPS 14–24. Bolt lengths for ring type joint flanges include allowance of 0.62-in. for NPS 1–10, 0.75-in. for NPS 12–18, and 0.88-in. for NPS 20.

<sup>4.</sup> In conformance with ASME B16.5, stud bolt lengths do not include point heights.

Table 113. Class 900 Orifice Flanges, Welding Neck (Continued)

No maior al mismo		Diameter		Drilling	template		Length of stud bolts <sup>(2)(3)</sup>		
Nominal pipe size <sup>(1)</sup>	Bore B	of pressure connection TT	Diameter of bolt circle	Number of holes	Diameter of holes	Diameter of bolts	RF	RJ	
1									
1 <sup>1</sup> /2				For NDC 21/2 and	amallar vaa Class	1500			
2				FOI NPS 2 1/2 and	smaller, use Class	. 1500.			
2 <sup>1</sup> /2									
3		3/8	7.50	8	1	7/8	6.00	6.50	
4			9.25	8	11/4	1 <sup>1</sup> /8	7.00	7.50	
6			12.50	12	- 1 <sup>1</sup> /4	1 76	7.75	8.25	
8			15.50	12			9.00	9.50	
10			18.50	16	1 <sup>1</sup> /2	1 <sup>3</sup> /8	9.50	10.00	
12	(4)	1/2	21.00				10.25	10.75	
14		.12	22.00		1 <sup>5</sup> /8	1 <sup>1</sup> /2	11.00	11.50	
16			24.25	20	1 <sup>3</sup> /4	1 <sup>5</sup> /8	11.50	12.00	
18			27.00	20	2	1 <sup>7</sup> /8	13.00	13.75	
20			29.50		2 <sup>1</sup> /8	2	14.00	14.75	
24			35.50		2 <sup>5</sup> /8	21/2	17.50	18.50	

<sup>1.</sup> All other dimensions are in accordance with ASME B16.5.

Table 114. Class 1500 Orifice Flanges, Welding Neck<sup>(1)</sup>

	Outside	Outside	Thickness	Length			Ring ty	pe joint				Hub diameter				
Nominal pipe size	diameter of raised face R	diameter of flange ø	of flange, min. C	through hub Y	Groove number	Pitch diameter P	Groove depth E	Groove width F	Radius at bottom r <sub>max</sub>	Special oval ring height W	Diameter of hub X	beginning of chamfer A				
1	2.00	5.88		3.25	R16	2.00	0.25	0.34		1.00	2.06	1.32				
1 <sup>1</sup> /2	2.88	7.00	1.50	3.50	R20	2.69	0.23	0.54		1.00	2.75	1.90				
2	3.62	8.50		4.00	R24	3.75			0.03		4.12	2.38				
2 <sup>1</sup> /2	4.12	9.62	1.62	4.12	R27	4.25	0.31	0.47	0.03	1.06	4.88	2.88				
3	5.00	10.50	1.88	4.62	R35	5.38	0.51	0.47			1.00	5.25	3.50			
4	6.19	12.25	2.12	4.88	R39	6.38					6.38	4.50				
6	8.50	15.50	3.25	6.75	R46	8.31	0.38	0.53		1.12	9.00	6.63				
8	10.62	19.00	3.62	8.38	R50	10.63	0.44	0.66	0.06	1.31	11.50	8.63				
10	12.75	23.00	4.25	10.00	R54	12.75	0.44	0.00	0.00	1.31	14.50	10.75				
12	15.00	26.50	4.88	11.12	R58	15.00	0.56	0.81		1.56	17.75	12.75				
14	16.25	29.50	5.25	11.75	R63	16.50	0.63	1.06		1.75	19.50	14.00				
16	18.50	32.50	5.75	12.25	R67	18.50		1 10			]		2.00	2.00	21.75	16.00
18	21.00	36.00	6.38	12.88	R71	21.00	0.69	1.19 0.09	.69   1.19   0.09	59   1.19   0.09	2.00	23.50	18.00			
20	23.00	38.75	7.00	14.00	R75	23.00		1.31	1	2.12	25.25	20.00				
24	27.25	46.00	8.00	16.00	R79	27.25	0.81	1.44		2.31	30.00	24.00				

<sup>2.</sup> In conformance with ASME B16.5, stud bolt lengths do not include point heights.

<sup>3.</sup> Bolt lengths for raised face flanges include allowance for orifice and gasket thickness of 0.25-in. for NPS 3–12 and 0.38-in. for NPS 14–24. Bolt lengths for ring type joint flanges include allowance of 0.62-in. for NPS 3–10 and 0.75-in. for NPS 12.

<sup>4.</sup> Bore is to be specified by the purchaser.

Table 115. Class 1500 Orifice Flanges, Welding Neck

Nominal pipe		Diameter of		Drilling	template		Length of stud bolts <sup>(2)(3)</sup>		
size <sup>(1)</sup>	Bore B	pressure connection TT	Diameter of bolt circle	Number of holes	Diameter of holes	Diameter of bolts	RF	RJ	
1		1/4	4.00	4	1.00	7/8	6.00	6.25	
1 <sup>1</sup> /2		1/4	4.88	4	1.12	1	6.25	6.50	
2		1/4	6.50	8	1.00	7/8	6.00	6.50	
21/2		1/4	7.50	8	1.12	1	6.50	7.00	
3		3/8	8.00	8	1.25	1 <sup>1</sup> /8	7.25	7.25	
4		1/2	9.50	8	1.38	1 <sup>1</sup> /4	8.00	8.50	
6		1/2	12.50	12	1.50	1 <sup>3</sup> /8	10.50	11.00	
8	(4)	1/2	15.50	12	1.75	1 <sup>5</sup> /8	11.75	12.25	
10		1/2	19.00	12	2.00	1 <sup>7</sup> /8	13.50	14.00	
12		1/2	22.50	16	2.12	2	15.00	15.75	
14		1/2	25.00	16	2.38	2 <sup>1</sup> /4	16.25	17.52	
16		1/2	27.75	16	2.62	2 <sup>1</sup> /2	17.75	19.00	
18		1/2	30.50	16	2.88	2 <sup>3</sup> /4	19.75	21.00	
20		1/2	32.75	16	3.12	3	21.50	22.50	
24		1/2	39.00	16	3.62	3 <sup>1</sup> /2	24.50	26.00	

<sup>1.</sup> All other dimensions are in accordance with ASME B16.5.

Table 116. Class 2500 Orifice Flanges, Welding Neck<sup>(1)</sup>

	Outside	Outside	Thickness of	Length			Ring ty	pe joint				Hub diameter
Nominal pipe size	diameter of raised face R		flange, min.		Groove number	Pitch diameter P	Groove depth E	Groove width F	Radius at bottom r <sub>max</sub>	Special oval ring height W	Diameter of hub X	beginning of chamfer A
1	2.00	6.25	1.50	3.62	R18	2.375	0.250	0.344	0.03	1.00	2.25	1.32
1.5	2.88	8.00	1.75	4.38	R23	3.250	0.312	0.469	0.03	1.06	3.12	1.90
2	3.62	9.25	2.00	5.00	R26	4.000	0.312	0.469	0.03	1.06	3.75	2.38
2.5	4.12	10.50	2.25	5.62	R28	4.375	0.375	0.531	0.06	1.19	4.50	2.88
3	5.00	12.00	2.62	6.62	R32	5.000	0.375	0.531	0.06	1.19	5.25	3.50
4	6.19	14.00	3.00	7350	R38	6.188	0.438	0.656	0.06	1.31	6.50	4.50
6	8.50	19.00	4.25	10.75	R47	9.000	0.500	0.781	0.06	1.31	6.50	4.50
8	10.62	21.75	5.00	12.50	R51	11.000	0.562	0.906	0.06	1.56	12.00	8.63
10	12.75	26.50	6.50	16.50	R55	13.500	0.688	1.188	0.09	1.88	14.75	10.75
12	15.00	30.00	7.25	18.25	R60	16.000	0.688	1.312	0.09	2.00	17.38	12.75

<sup>1.</sup> All other dimensions are in accordance with ASME B16.5.

<sup>2.</sup> Bolt lengths for raised face flanges include allowance for orifice and gasket thickness of 0.25-in. for NPS 1–12 and 0.38-in. for NPS 14–24. Bolt lengths for ring type joint flanges include allowance of 0.62-in. for NPS 1-10, 0.75-in. for NPS 12–18, and 0.88-in. for NPS 20.

<sup>3.</sup> In conformance with ASME B16.5, stud bolt lengths do not include point heights.

<sup>4.</sup> Bore is to be specified by the purchaser.

Table 117. Class 2500 Orifice Flanges, Welding Neck (Continued)

		Diameter of		Drilling ter	nplate		Length of stud bolts (2)(3)		
Nominal pipe size <sup>(1)</sup>	Bore B	pressure connection TT	Diameter of bolt circle	Number of holes	Diameter of holes	Diameter of bolts	RF	RJ	
1			4.25	4	1.00	7/8	6.00	6.25	
1.5		1/4	5.75	4	1.25	1 <sup>1</sup> /8	7.00	7.50	
2		1/4	6.75	8	1.12	1	7.25	7.75	
2.5			7.75		1.25	1 <sup>1</sup> /8	8.00	8.50	
3	(4)	3/8	9.00		1.38	1 <sup>1</sup> /4	9.00	9.50	
4	(4)		10.75		1.62	1 <sup>1</sup> /2	10.25	10.75	
6			14.50		2.12	2	13.75	14.50	
8		1/2	17.25		2.12	2	15.25	16.00	
10			21.25	12	2.62	2 <sup>1</sup> /2	19.25	20.25	
12			24.38		2.88	2 <sup>3</sup> /4	21.25	22.50	

<sup>1.</sup> All other dimensions are in accordance with ASME B16.5.

<sup>2.</sup> Bolt lengths for raised face flanges include allowance for orifice and gasket thickness of 0.25-in. for NPS 1–12 and 0.38-in. for NPS 14–24. Bolt lengths for ring type joint flanges include allowance of 0.62-in. for NPS 1–10, 0.75-in. for NPS 12–18, and 0.88-in. for NPS 20.

<sup>3.</sup> In conformance with ASME B16.5, stud bolt lengths do not include point heights.

<sup>4.</sup> Bore is to be specified by the purchaser.

# **Global Headquarters**

### **Emerson Automation Solutions**

6021 Innovation Blvd. Shakopee, MN 55379, USA

(a) +1 800 999 9307 or +1 952 906 8888

+1 952 949 7001

RFQ.RMD-RCC@Emerson.com

# **North America Regional Office**

# **Emerson Automation Solutions**

8200 Market Blvd. Chanhassen, MN 55317, USA

+1 800 999 9307 or +1 952 906 8888

+1 952 949 7001

RMT-NA.RCCRFQ@Emerson.com

# **Latin America Regional Office**

# **Emerson Automation Solutions**

1300 Concord Terrace, Suite 400 Sunrise, FL 33323, USA

+1 954 846 5030

+1 954 846 5121

RFQ.RMD-RCC@Emerson.com

# **Europe Regional Office**

# **Emerson Automation Solutions Europe GmbH**

Neuhofstrasse 19a P.O. Box 1046 CH 6340 Baar Switzerland

+41 (0) 41 768 6111

+41 (0) 41 768 6300

RFQ.RMD-RCC@Emerson.com

# **Asia Pacific Regional Office**

## **Emerson Automation Solutions**

1 Pandan Crescent Singapore 128461

+65 6777 8211

Enquiries@AP.Emerson.com

# Middle East and Africa Regional Office

## **Emerson Automation Solutions**

Emerson FZE P.O. Box 17033 Jebel Ali Free Zone - South 2 Dubai, United Arab Emirates


+971 4 8118100


RFQ.RMTMEA@Emerson.com







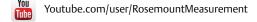

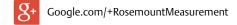

Emerson Terms and Conditions of Sale are available upon request. The Emerson logo is a trademark and service mark of Emerson Electric Co. Rosemount is a mark of one of the Emerson family of companies. All other marks are the property of their respective owners. © 2018 Emerson. All rights reserved.

